HAFELE

Always read the instructions carefully and completely before beginning assembly.


Remove and check contents for damage and/or missing parts.





Installation Instructions

- STEP 1- Remove door from cabinet . (IMPORTANT!! This unit is designed for use in a 24" deep Base Cabinet)
- STEP 2- Remove the outer runners of the drawer slides by depressing the black release clips and pulling them away from the from the Waste Bin Pull Out. Place rear mounting bracket on back of slides. Align the front of the slide to front inside edge of the cabinet frame, assuring the bottom of slide is 14-1/2" from the floor of the cabinet. See Fig.1 Attach with wood screws front and back (not Included). (IMPORTANT!! Slides must remain level and parallel to the cabinet's sides)
- STEP 3- Place unit face down on a flat solid surface and attach Door Mounting Brackets to lower sides of the unit using the 4-M4 machine screws into the threaded holes. Fig. 2 Replace unit into mounted slides.
- STEP 4- Attach Cabinet door to Waste Bin Pull Out. HELPFUL HINT-Place 4 pads of double sided tape onto pull out. Align cabinet door as desired. Attach with 4 wood screws (not included) through brackets into door. IMPORTANT!! Use caution that the screw length will not protrude through the door face. Fig.3
- STEP 5- Place waste bin(s) into unit. Fig.4

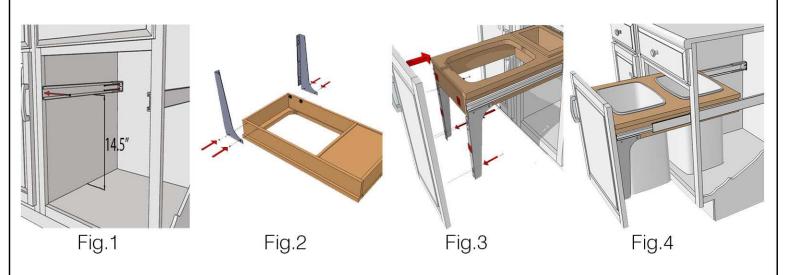

Ph# 800-423-3531 www.hafele.com