# **ASHMORE CROSSBODY KIT**

#### **KIT CONTAINS**

Pre-Cut, Pre-Punched Leather Leather Cord Open Back Screws (3) Instructions & Pattern



# **BEFORE YOU BEGIN, YOU WILL NEED:**

• Flathead Screwdriver

**▲** CAUTION

CHOKING HAZARD: Small parts. Keep out of reach of children.

# PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING PROJECT.

NOTE: ALL STAINING, DYEING, AND TOOLING SHOULD BE DONE PRIOR TO ASSEMBLY.

#### WHAT'S INCLUDED?

Main Body (A)

Flap (B)

Keeper (C)

Cord (D)

Open Back Screws (E)

#### Not Shown:

Instructions & Pattern

#### **SKILLS USED:**

Hardware Installation


#### **RECOMMENDED TOOLS:**

Multi-size Wood Slicker to burnish edges.

Gum Tragacanth to burnish edges.

Cotton Swab to apply Gum Tragacanth.

Loctite® Threadlocker to secure
hardware.

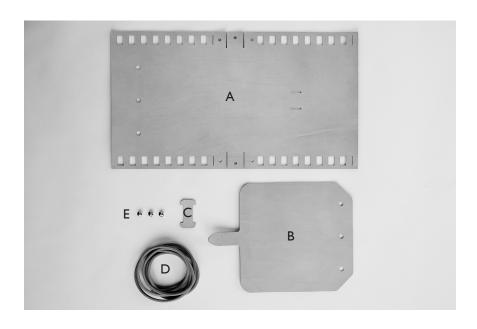

#### **GLOSSARY:**

FLESH SIDE: The underside of an animal's hide. On veg-tanned tooling leather, this is the rough side.

GRAIN SIDE: The hide's surface that had the hair of the animal. Typically used for carving and stamping.

## **OPTIONAL: FINISHING EDGES**

1. Before assembling, burnish all edges to desired finish. See Level Up Your Skills starting on page 7 for detailed instructions on How to Burnish Edges.

## ATTACHING KEEPER

2. Insert Keeper (C) through the pre-cut slits on the grain side of Main Body (A). (Figures 1-3)

Figure 1

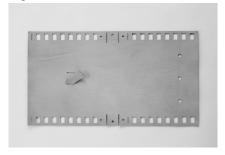


Figure 2


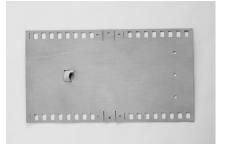


Figure 3

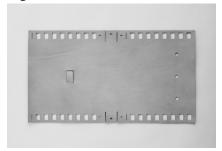

## **ASSEMBLING MAIN BODY**

- 3. Tie a knot on one end of Cord (D). (Figure 4)
- 4. Lay Main Body (A) flesh side up. Gently insert the Cord (D) through the holes on the gusset. Start with the hole in the middle flap, then the back hole, and finish with the hole in the front. Pull rope through. Back = 3 punch hole side. Front = the Keeper side. (Figures 5-7)

Figure 4

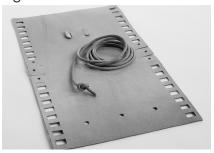


Figure 5

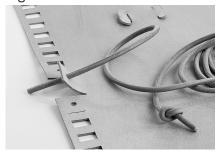


Figure 6


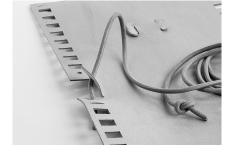


Figure 7

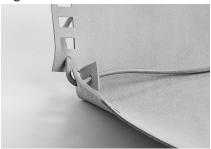

- 5. Start to align each square cut out and weave the Cord (D) in and out to secure the right side of the Main Body (A). (Figures 8-10)
- 6. Decide the desired strap drop length before weaving the second side. Weave the rest of the Cord (D) down the left side. (Figures 11-14)
- 7. Adjust the strap length further if needed. Tie a knot on the end of the left side of the Cord (D). Pull the knots snug into the corners of the bag.

Figure 8





Figure 10







Figure 12



Figure 13



Figure 14



# **ASSEMBLING FLAP TO MAIN BODY**

- 8. Place the flesh side of the Flap (B) against the grain side of the Main Body (A) so that the pre-cut holes align. (Figure 15)
- 9. Insert the post of one of the Open Back Screws (E) through one of the holes. Secure the back with a flathead screwdriver.
- 10. Repeat step 9 with the other two Open Back Screws (E). (Figure 16)

Figure 15



Figure 16



# CONGRATULATIONS, YOU'VE MADE AN ASHMORE CROSSBODY!



<sup>\*</sup> Images are for construction purposes only. Colors may vary.

# LEVEL UP YOUR SKILLS WITH TANDY

# **BURNISHING EDGES**

**NOTE:** Burnish all individual pieces before assembling. Then burnish final product to desired results.

- I. Rub emery board gently across the edges so that the leather is even and smooth. Dust off. (Figure  $\,$  I  $\,$
- 2. Use a cotton swab to gently seal the edges with Eco-Flo® Gum Tragacanth Burnishing Agent. Let air dry. (Figure 2)
- 3. Burnish edges with a wood slicker. (Figure 3)
- 4. Repeat steps 2 and 3 until you reach desired outcome.

Figure 1




Figure 2



Figure 3



## LEVEL UP YOUR SKILLS WITH TANDY

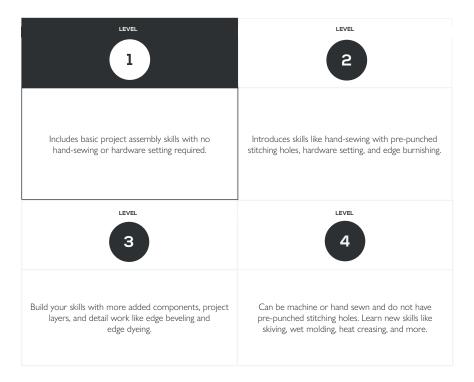



FOR MORE PATTERNS, PROJECTS, AND TIPS, VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather 1900 SE Loop 820, Fort Worth, TX 76140 Made in the USA with global components.

©2023 Tandy Leather: All rights reserved. Tous les droits sont réservés.