

LEVEL

CHEYENNE WRISTLET KIT

KIT DE BOLSO DE MANO CHEYENNE
KIT SAC À MAIN AVEC BRACELET CHEYENNE


1

KIT CONTAINS:

Pre-Cut, Pre-Punched Leather
Button Studs (2)
Open Back Screw Post (2)
D-Ring
Small Spring Snap
Instructions & Pattern

French and Spanish
Instructions available
online at:

TANDYLEATHER.COM
TANDYLEATHER.CA

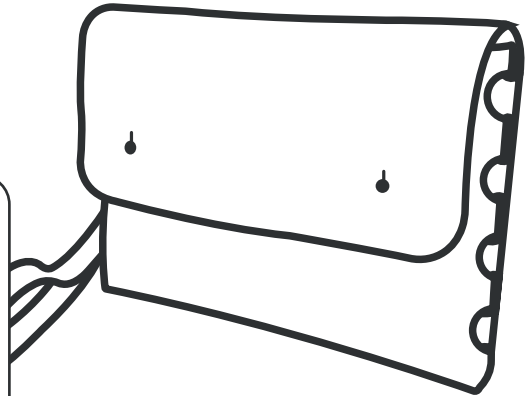

YOU WILL NEED:

• Small Flathead Screwdriver

LEVEL UP WITH TANDY

LEVEL	LEVEL	LEVEL	LEVEL
1	2	3	4
Includes basic project assembly skills with no hand-sewing or hardware setting required. Plus, learn additional skills like lacing, braiding, and knot tying.	Introduces skills like hand-sewing with pre-punched stitching holes, hardware setting, and edge burnishing.	Build your skills with more added components, project layers, and detail work like edge beveling and edge dyeing.	Can be machine or hand sewn and do not have pre-punched stitching holes. Learn new skills like skiving, wet molding, heat creasing, and more.

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING PROJECT.

NOTE: ALL STAINING, DYING, AND TOOLING SHOULD BE DONE PRIOR TO ASSEMBLY

WHAT'S INCLUDED?

- Bag Body (A)
- Button Studs (B)
- D-Ring (C)
- Anchor (D)
- Open Back Screw Posts (E)
- Small Spring Snaps (F)
- Wrist Strap (G)

Not Shown:

Instructions & Pattern

Scan this code with your phone to learn about these skills and more!



SKILLS USED:

Hardware Installation


OPTIONAL TOOLS:

- Emory Board to sand edges
- Edge Beveler (Size #1) for edge finishing.
- Multi-size Wood Slicker to burnish edges.
- Gum Tragacanth for burnishing edges.

GLOSSARY:

FLESH SIDE: The underside of an animal's hide. On veg-tanned tooling leather, this is the rough side.

GRAIN SIDE: The hide's surface that had the hair of the animal. Typically used for carving and stamping.

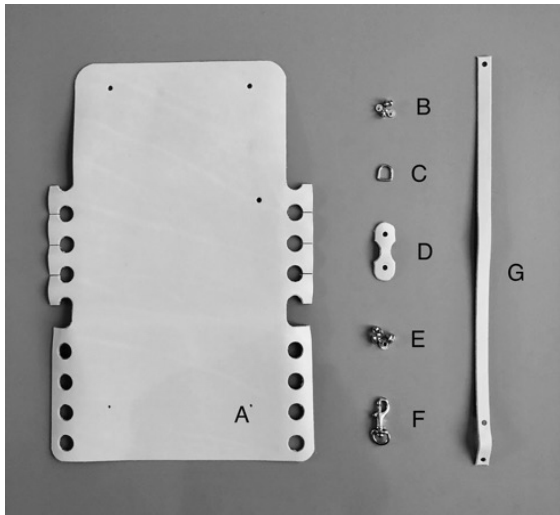

WARNING:

CHOKING HAZARD - small parts. not for children under 3 years.

PREPARING BAG FOR ASSEMBLY

1. Take the Bag Body (A) and lay flat with the flesh side facing up. Note the fold line in Figure 1. Fold the front panel up to meet the back panel so that the flesh sides meet. The flesh of the gusset inserts should show through the gusset holes along the sides. Gently create a fold. (Figures 1-4)

Figure 1

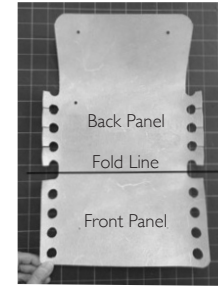


Figure 2

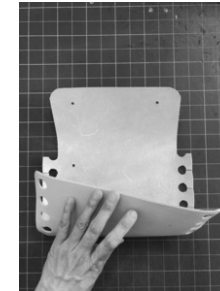


Figure 3


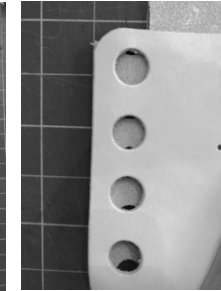


Figure 4

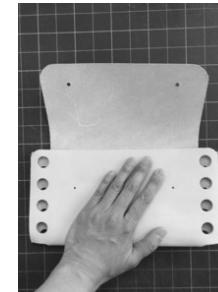

ASSEMBLING BAG BODY

2. Locate gusset hole and gusset insert that's closest to the fold line. Take gusset insert and fold the end so that it will fit through the gusset hole. Push the gusset insert into the gusset hole as shown and straighten out insert once it is in the hole. Repeat this step going all the way up. (Figures 5-12)

Figure 5

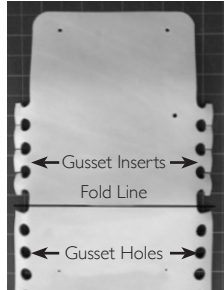


Figure 6



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11



Figure 12



3. Repeat step 2 on the other side of the bag. (Figures 13-14)

Figure 13

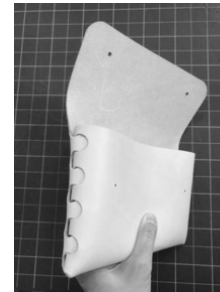


Figure 14



ATTACHING STUDS TO BAG BODY

4. Take a screw of the Button Stud (B) and place it through the hole on the front panel from the flesh side. Screw the button stud onto the screw. (Figure 15-20)

Figure 15

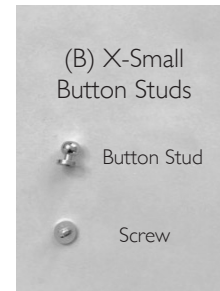


Figure 16

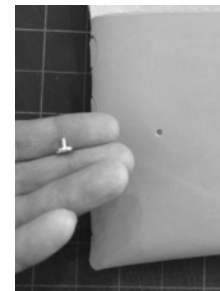


Figure 17



Figure 18



Figure 19



Figure 20



ATTACHING THE ANCHOR

5. Take the Anchor (D) and place it through the D-Ring (C). Fold the end to get leather through the D-Ring (C). Fold Anchor (D) together so that the holes match and the flesh sides meet. (Figures 21-25)

Figure 21



Figure 22



Figure 23



Figure 24



Figure 25



6. Take the post of the Open Back Screw Post (E) and place it through the flesh side of the top right hole in the back panel (or wristlet interior). (Figures 26-28)

Figure 26

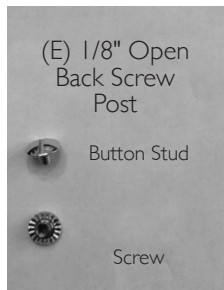


Figure 27

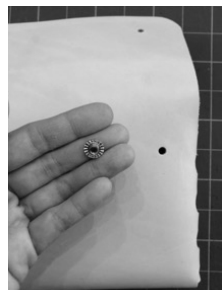


Figure 28



7. Place Anchor (D) onto the post. The top of the D-Ring (C) should be pointing diagonally up to the right corner of the bag. (Figures 29-31)

Figure 29



Figure 30



Figure 31



ASSEMBLING WRIST STRAP

8. Take the end of the Wrist Strap (G) with the two holes and thread it into the Small Spring Snap (F). Fold the end so that the two holes match and the flesh sides meet. Take the other end of the strap and fold it over so that the 3rd hole matches with the first two holes. Take the post of the Open Back Screw Post (E) and thread it through the three holes. Close the Open Back Screw Post with the screw and screwdriver. (Figures 32-37)

9. Open the Spring Snap (F) on the strap and attach it to the D-Ring (C) on the back panel of the bag body.

Figure 32



Figure 33



Figure 34



Figure 35



Figure 36



Figure 37



CONGRATULATIONS, YOU'VE MADE A CHEYENNE WRISTLET!



* Images are for constructions purposes only. Colors may vary.

EST **tandy**[®] 1919
LEATHER

FOR MORE PATTERNS, PROJECTS, AND TIPS,
VISIT [TANDYLEATHER.COM/BLOG](https://www.tandy-leather.com/blog).

Distributed by Tandy Leather 1900 SE Loop 820, Fort Worth, TX 76140
Made in the USA with global components.
©2022 Tandy Leather. All rights reserved