PRESTON PORTFOLIO PAPER PATTERN

NOTE: Paper Patterns are intended for experienced leathercrafters.

WHAT'S INCLUDED?

Paper Pattern

SUGGESTED SPECS**

3/16" Seam Allowance

RECOMMENDED MATERIALS

4 to 6 oz (1.6 to 2.4 oz) Semi-firm to Firm Tempered Leather (6-7 sq. ft.) Glove Snaps (3)

REQUIRED TOOLS

Knife Straight Edge Mallet Snap Setter Kit Binder Clips or similar Winged Dividers Pricking Irons/ Stitching Chisels Round Drive Punches Scratch Awl Harness Needles & Thread Bell Skiver, Skiving Knife, or Wide Edger


RECOMMENDED TOOLS

Stitching Horse Edge Finishing Materials Preferred Adhesive

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
А	Main Body	l	4 to 6 oz (1.6 to 2.4 mm)
В	Right Side Main Pocket Body	l	2 to 4 oz (.8 to 1.6 mm)
С	Legal Pad Sleeve	l	2 to 4 oz (.8 to 1.6 mm)
D	Left Side Main Pocket Body	l	2 to 4 oz (.8 to 1.6 mm)
E	Passport Pocket Back Wall	l	2 to 3 oz (.8 to 1.2 mm)
F	Passport Pocket Front Wall	l	2 to 3 oz (.8 to 1.2 mm)
G	Credit Card Pocket Front Wall	l	2 to 3 oz (.8 to 1.2 mm)
Н	Multi Pocket	l	2 to 3 oz (.8 to 1.2 mm)
I	Pocket Flap	l	4 to 6 oz (1.6 to 2.4 mm)
J	Left Side Pocket Body Tab	l	4 to 6 oz (1.6 to 2.4 mm)
К	Main Body Tab	I	4 to 6 oz (1.6 to 2.4 mm)

** Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

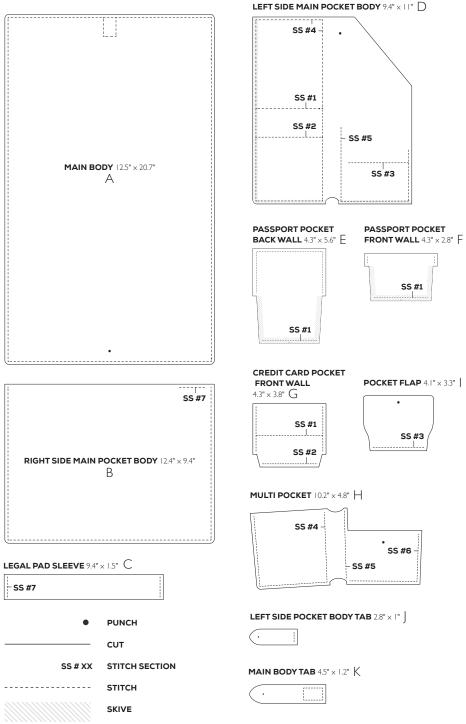

PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are just suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

GLOSSARY

NEGATIVE SNAP: Part of the snap that the post will be inserted.

POSITIVE SNAP: Part of the snap that has the post and will be inserted into a socket.

ASSEMBLY INSTRUCTIONS

I. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.

2. Set the negative snaps on Main Body (A), Left Side Main Pocket Body (D), and Multi-Pocket (H).

3. Set the positive snaps on Pocket Flap (I), Left Side Pocket Body Tab (J), and Main Body Tab (K).

4. Layer the horizontal stitch lines of Passport Pocket Backwall (E), Passport Pocket Front Wall (F), and Credit Card Pocket Front Wall (G) and stitch to Left Side Main Pocket Body (D) "SS #1".

5. Stitch ''SS #2''.

6. Stitch Pocket Flap (I) onto Left Side Main Pocket Body's (D) "SS #3".

7. Place Multi Pocket (H) onto Left Side Main Pocket Body (D) and saddle stitch "SS #4, #5, and #6".

8. Attach Legal Pad Sleeve (C) to Right Side Main Pocket Body (B), stitch "SS #7" only.

9. Attach Main Body Tab (K) to Main Body (A), only stitch three sides of the box, leave the holes that align with the outer edge of Main Body (A) empty.

10. Attach Left Side Main Pocket Body (D) with Main Body (A). We suggest to use binder clips to hold placement. Snap Left Side Pocket Body Tab (J) onto Left Side Main Pocket Body (D) and align stitching holes of Left Side Pocket Body Tab (J) onto Main Body (A), hold in place with binder clips.

II. Attach Right Side Main Pocket Body (B) and Main Body (A) together, hold in place with binder clips.

12. Starting on the bottom center of Main Body (A), complete the final stitch around the entire piece.

COMPLETED PROJECT









FOR MORE PATTERNS, PROJECTS, AND TIPS, VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather 1900 SE Loop 820, Fort Worth, TX 76140 Made in the USA. ©2022 Tandy Leather. All rights reserved