

ASHMORE CROSSBODY PAPER PATTERN

NOTE: Paper Patterns are intended for experienced leathercrafters.

SUGGESTED SPECS

3/16 in. Seam Allowance

RECOMMENDED MATERIALS

4 to 5 oz. Semi-Firm to Firm Tempered

Leather (5 sq. ft.)

1/8 in. Open Back Screws (3)

6 mm Leather Cord (92 in.)

REQUIRED TOOLS

Knife

Straight Edge

Mallet

Scratch Awl

Round Drive Punch

Flathead Screwdriver

RECOMMENDED TOOLS



Edge Finishing Materials

Loctite® Threadlocker

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
A	Main Body	1	4 to 5 oz
B	Flap	1	4 to 5 oz
C	Keeper	1	4 to 5 oz

Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

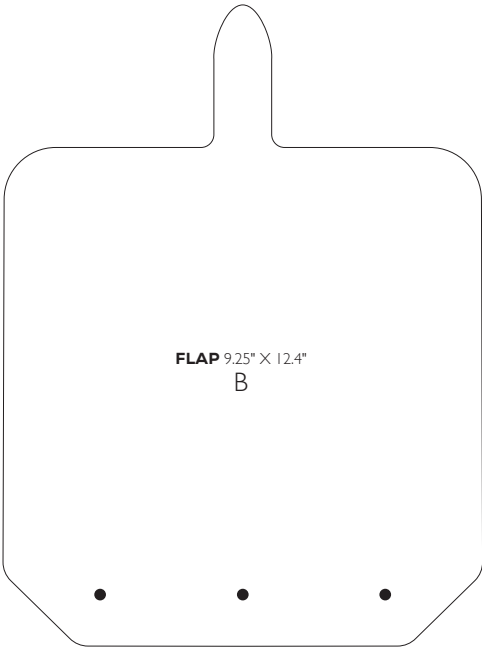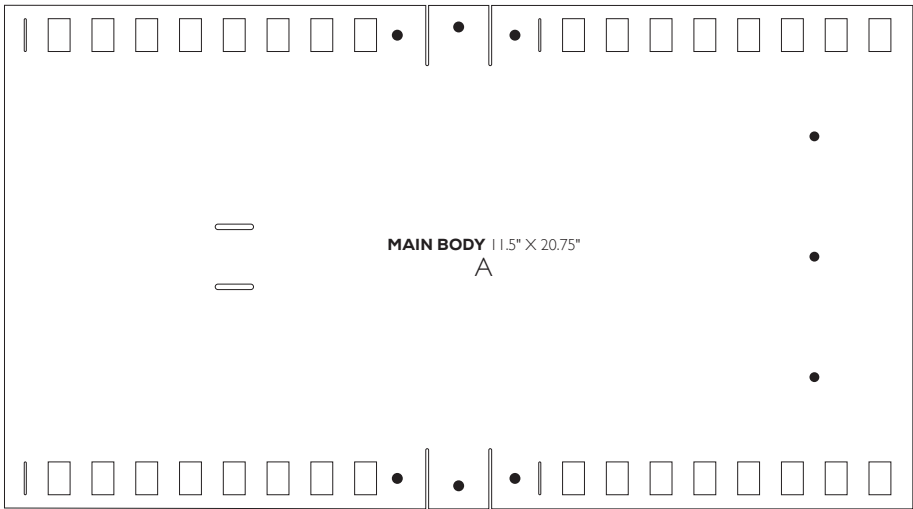

KEEPER 2.4" X 1.3" C



● PUNCH

— CUT

PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are just suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

ASSEMBLY INSTRUCTIONS

1. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.
2. Insert the Keeper (C) into the slots on the front of Main Body (A), grain sides up.
3. Tie a knot at one end of the leather cord.
4. Lay Main Body (A) flesh side up. Overlap the 3 round holes located on one of the long edges of Main Body (A). Center flap folds up, back body folds in and front body overlaps. Keeper (C) is located on the front body. Insert the cord through all 3 holes..
5. Weave the rope up through the slots.
6. At the top, measure rope to desired length for strap. Weave down the right side.
7. Insert the cord through the front, back, then middle flap hole.
8. Tie a knot on the inside of the Bag Body. Trim excess, and adjust the tension of rope.
9. Align Flap (B) to top of the Main Body (A), grain sides up. Secure Chicago Screws to Flap (B) and Main Body (A).

COMPLETED PROJECT



FOR MORE PATTERNS, PROJECTS, AND TIPS,
VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather: 1900 SE Loop 820, Fort Worth, TX 76140
Made in the USA.
©2024 Tandy Leather: All rights reserved.