

BROOKLYN BACKPACK PAPER PATTERN

PATRÓN DE PAPEL DE MOCHILA BROOKLYN
PATRON EN PAPIER POUR SAC À DOS BROOKLYN

NOTE: Paper Patterns are intended for experienced leathercrafters.

WHAT'S INCLUDED?

Paper Pattern

RECOMMENDED MATERIALS

3 to 4 oz (1.2 to 1.6 oz) Semi-Firm
Leather (10-15 sq. ft.)
Zippers and Zipper Pulls (2)
1.125" Center Bar Buckles (2)
D-Ring
Rivets (8)
Snaps (2)
Rectangular Rings (2)
Thread

REQUIRED TOOLS

Knife
Straight Edge
Mallet
Scratch Awl
Binder Clips or Similar
Wing Dividers
Round Drive Punches
Pricking Irons/ Stitching Chisels
Harness Needles
Snap Setter
Rivet Setter


RECOMMENDED TOOLS

Edge Finishing Materials
Preferred Adhesive
Stitching Horse
Leatherworking Hammer

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
A	Front Panel	1	3 to 4 oz (1.2 to 1.6 mm)
B	Front Pocket	1	3 to 4 oz (1.2 to 1.6 mm)
C	Back Panel	1	3 to 4 oz (1.2 to 1.6 mm)
D	Back Pocket	1	3 to 4 oz (1.2 to 1.6 mm)
E	Inside Zipper Pocket	1	3 to 4 oz (1.2 to 1.6 mm)
F	Straps	2	3 to 4 oz (1.2 to 1.6 mm)
G	Rectangular Leather Tabs	2	3 to 4 oz (1.2 to 1.6 mm)
H	D-Ring Tab	1	3 to 4 oz (1.2 to 1.6 mm)

** Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

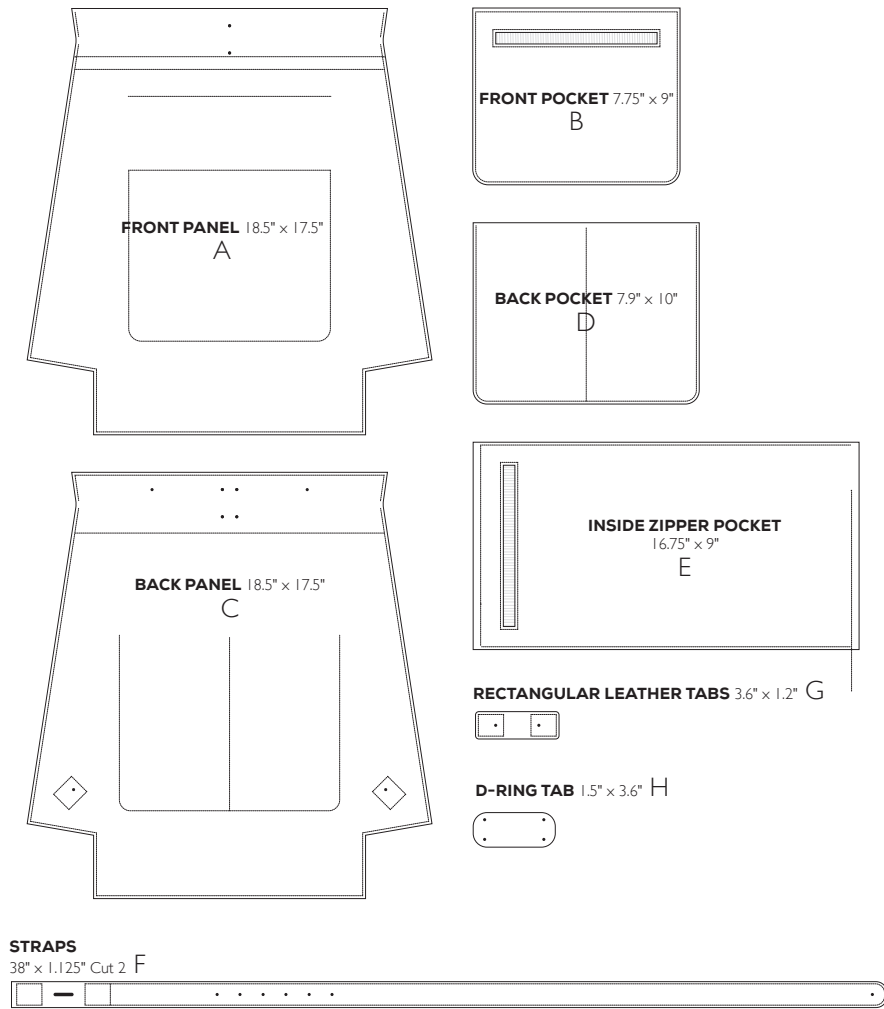

PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are just suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

ASSEMBLY INSTRUCTIONS

1. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.
2. Sew the zipper onto the Front Pocket (B).
3. Attach the front pocket to the Front Panel (A) at aligning stitch holes.
4. Attach the Back Pocket to the Back Panel (C) at aligning stitch holes.
5. Attach the snaps with the functional side on the grain side of the Front and Back Panels.
6. Fold the collar down and stitch closed.
7. Attach the Rectangular Leather Tabs (G) and hardware to the Back Panel (C).
8. Sew the zipper onto the Inside Zipper Pocket (E).
9. Sew Inside Zipper Pocket (E) in half.
10. Sew the Inside Zipper Pocket to Back Panel (C).
11. Rivet the D-Ring and D-ring Tab (H) onto the bag on the Back Panel (C).
12. Sew the bottom of the Front and Back Panels together.
13. With grain sides together, sew the sides of the Front and Back Panels together.
14. Sew the T-seam, close the corners, and turn the bag right side out.
15. Attach the Buckle to the Strap (F).
16. Attach the Straps (F) through the hardware near the base of the bag.
17. Thread the Straps (F) through the D-ring at the top and then rivet them to the inside of the Front Panel (A).

● PUNCH

— CUT

- - - STITCH

||||| ZIPPER PLACEMENT

COMPLETED PROJECT



EST *tandy*[®] 1919
LEATHER

FOR MORE PATTERNS, PROJECTS, AND TIPS,
VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather: 1900 SE Loop 820, Fort Worth, TX 76140
Made in the USA.
©2022 Tandy Leather: All rights reserved