

# SAVANNAH WRISTLET PAPER PATTERN

**NOTE:** Paper Patterns are intended for experienced leathercrafters.

## SUGGESTED SPECS

3/16 in. Seam Allowance

## RECOMMENDED MATERIALS

4 to 5 oz. Semi-Firm to Firm

Tempered Leather (3 sq. ft.)

Magnetic Bag Clasp

3/8 in. D-Ring

3/8 in. Small Spring Snap

## REQUIRED TOOLS

Knife

Straight Edge

Mallet

Scratch Awl

Skiving Knife, Wide Edger, or Bell Skiver

Wing Divider

Pricking Irons or Stitching Chisels

Binder Clips or Similar

Harness Needles & Thread

Round Drive Punches

Magnetic Bag Clasp Setter

## RECOMMENDED TOOLS

Edge Finishing Materials

Preferred Adhesive


Stitching Horse

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
A	Back Panel	1	4 to 5 oz
B	Flap Lining	1	4 to 5 oz
C	Front Panel	1	4 to 5 oz
D	Anchor	1	4 to 5 oz
E	Outer Handle	1	4 to 5 oz
F	Handle Lining	1	4 to 5 oz
G	Washer	2	4 to 5 oz
H	Left Dart Backing	1	4 to 5 oz
I	Right Dart Backing	1	4 to 5 oz


Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

# PROJECT OVERVIEW


**BACK PANEL** 10" X 10.6" **A**

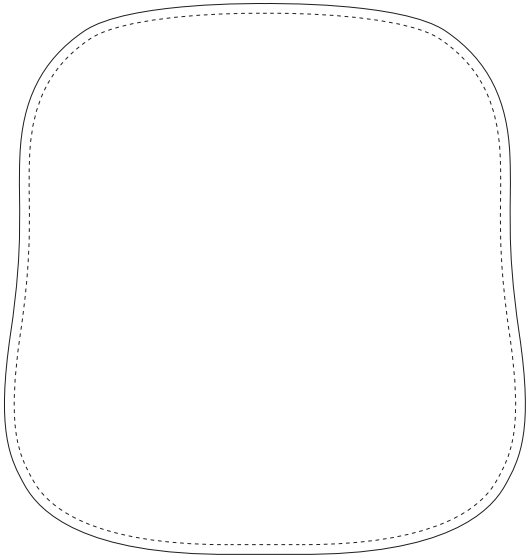

**FRONT PANEL** 10.4" X 5.6" **C**

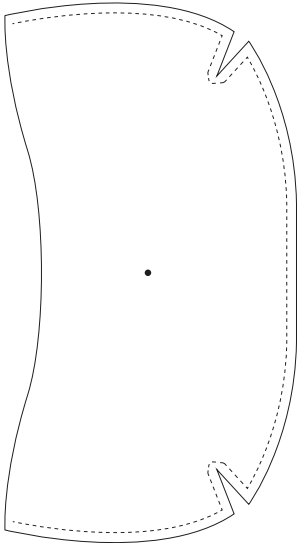

**FLAP LINING** 9.4" X 2.8" **B**

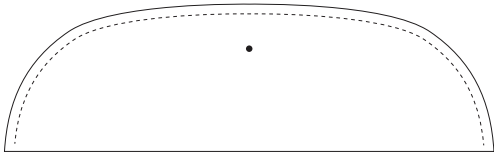

**ANCHOR** 1.75" X .375" **D**



**OUTER HANDLE** 14.875" X .5" **E**



**HANDLE LINING** 13.7" X .5" **F**



**WASHER** x2 .9" X .9" **G**



**LEFT DART BACKING** 1.3" X .9" **H**



**RIGHT DART BACKING** 1.3" X .9" **I**



● PUNCH

———— CUT

----- STITCH

////// SKIVE

## PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are just suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

## ASSEMBLY INSTRUCTIONS

### BODY

1. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.
2. Set the negative side of the Magnetic Snap onto Front Panel (C). Magnet on grain side.
3. Set the positive side of the Magnetic Snap onto Flap Lining (B). Magnet on grain side.
4. Slide D-Ring onto Anchor (D), fold flesh sides together.
5. Stitch Left Dart Back (H) and Right Dart Back (I) to Front Panel (C).
6. Align Front Panel (C) and Flap Lining (B) onto Back Panel (A) flesh sides together. Flap Lining (B) will align with stitch holes on Back Panel (A). Front Panel (C) will not naturally align because of the darts. Use clips to hold Front Panel (C) in place along stitch lines.
7. Start with an edge lock stitch on the right side of Front Panel (C). Saddle stitch around the bag. Add the anchor one or two stitches below the edge of Front Panel (C).
8. Continue to stitch all the way around to attach Front Panel (C) and Flap Lining (B).

### WRISTLET

9. Slide Spring Snap onto the end of Outer Handle (D) with two holes. Fold end over, flesh sides together, and align stitch holes.
10. Align Lining Handle (D) onto Outer Handle (D), flesh sides together.
11. Begin saddle stitching from the aligned 3 holes.
12. Before the last stitch, fold the handle in half. Stitch the first and last hole together.
13. Create an edge lock stitch on either edge of the handle.
14. Cut and secure the threads.
15. Attach Spring Snap to D-Ring.

**COMPLETED PROJECT**



EST **tandy**<sup>®</sup> 1919  
LEATHER

FOR MORE PATTERNS, PROJECTS, AND TIPS,  
VISIT [TANDYLEATHER.COM/BLOG](http://TANDYLEATHER.COM/BLOG).

Distributed by Tandy Leather: 1900 SE Loop 820, Fort Worth, TX 76140  
Made in the USA.  
©2024 Tandy Leather: All rights reserved