

CANYON MOCCASIN PAPER PATTERN

NOTE: Paper Patterns are intended for experienced leathercrafters.

RECOMMENDED MATERIALS

4 to 5 oz. Soft to Semi-Soft Tempered Leather (3 to 7 sq. ft.)
Leather Lace (15-21 ft.)
Foam (Optional)


REQUIRED TOOLS

Knife
Straight Edge
Scissors
Scratch Awl
Mallet
1/8 - 5/32 in. Round Drive Punch
Lacing Needle

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
A	Soles	2	4 to 5 oz.
B	Toes	2	4 to 5 oz.
C	Heels	2	4 to 5 oz.
D	Insoles (optional)	2	Foam

Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

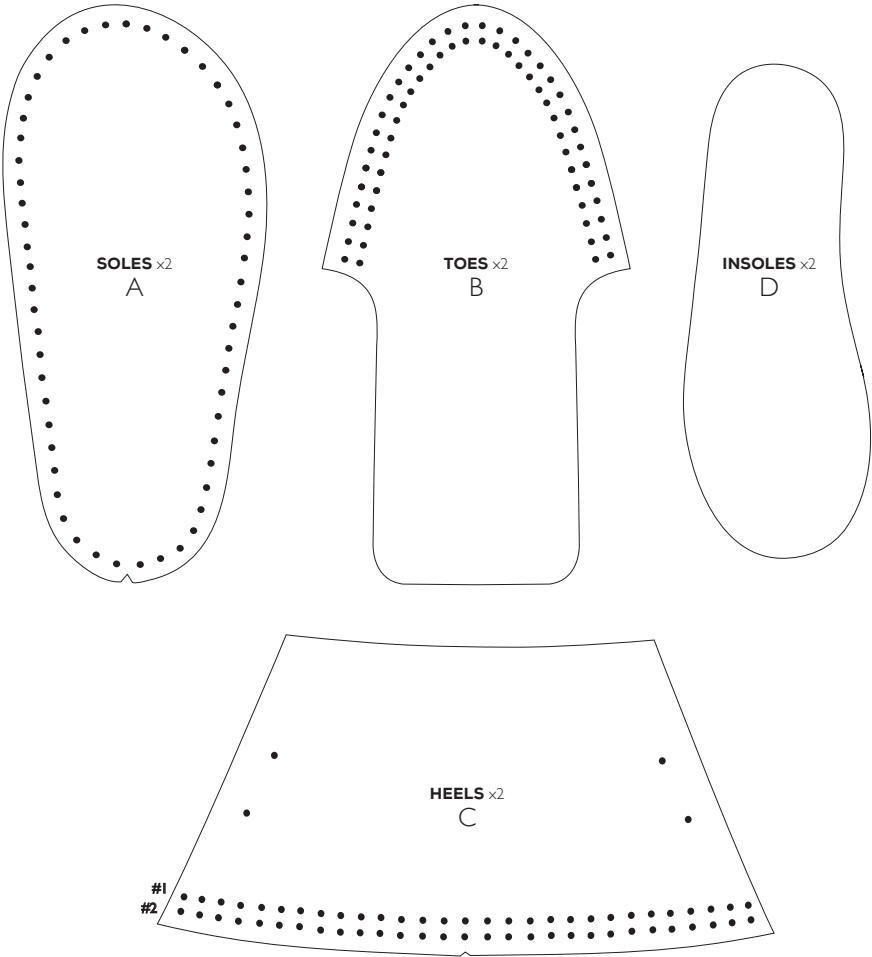

● PUNCH

— CUT

PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

ASSEMBLY INSTRUCTIONS

1. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.
2. Align the center notch on Sole (A) over the center notch on Heel (C), grain sides facing up. The notches should create a diamond shape.
3. Thread needle through center hole on row #1 on Heel (C), then bring needle through center right hole of Sole (A) and down through right hole of Heel (C).
4. Continue to loop stitch to the right. Add Toe (B) when there are two stitches left and align punch holes.
5. All pattern pieces will be grain side up with Heel (C) in the center.
6. Lace all the way around. End with thread on the inside. Knot and trim.
7. Use needle to even out leather and lace between stitches. Massage to fully form shoe.
8. Thread a new piece of Lace through eyelets, as you would any shoe, and tie a bow.
9. Optional to fold the top of the tongue and heel down to reveal flesh side of leather.
10. Add Insoles (D), if using.
11. Repeat steps 2-9 for the opposing Moccasin.

COMPLETED PROJECT



EST **tandy**[®] 1919
LEATHER

FOR MORE PATTERNS, PROJECTS, AND TIPS,
VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather: 1900 SE Loop 820, Fort Worth, TX 76140
Made in the USA.
©2024 Tandy Leather: All rights reserved