

DRAWSTRING POUCH PAPER PATTERN

NOTE: Paper Patterns are intended for experienced leathercrafters.

SUGGESTED SPECS

3/16" Seam Allowance

RECOMMENDED MATERIALS

4 to 5 oz. Firm Tempered Leather
(1 sq. ft.)

2 to 4 oz. Soft Tempered Leather
(1 sq. ft.)

5/16 in. Button Stud

Lace (2 ft.)

REQUIRED TOOLS

Knife

Straight Edge

Mallet

Scratch Awl

Pricking Irons or Stitching Chisels

Harness Needles & Thread

Binder Clips or Similar

3/32 & 1/8 in. Round Drive Punch

3/16 in. Buttonhole Punch

RECOMMENDED TOOLS

Edge Finishing Materials




Preferred Adhesive

Stitching Horse

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
A	Main Body	1	4 to 5 oz.
B	Belt Loop/ Base	2	4 to 5 oz.
C	Pouch	1	2 to 4 oz.
D	Lace	1	2 to 4 oz.

Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

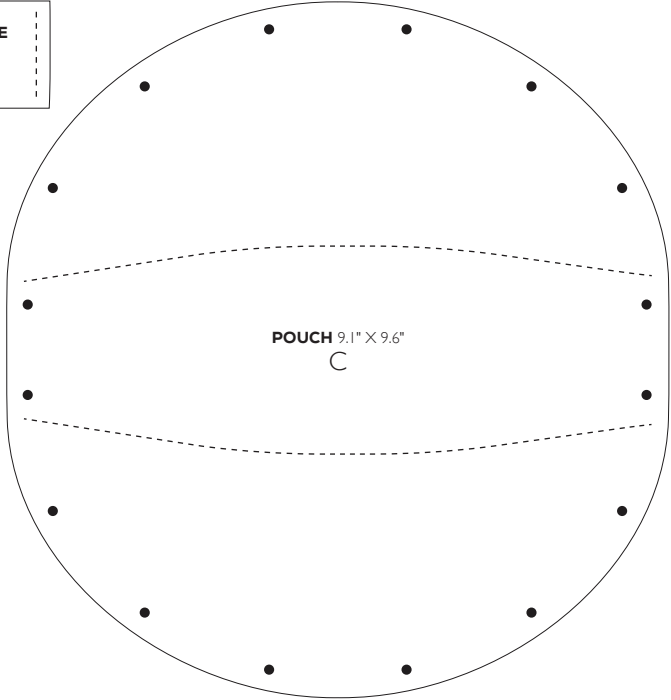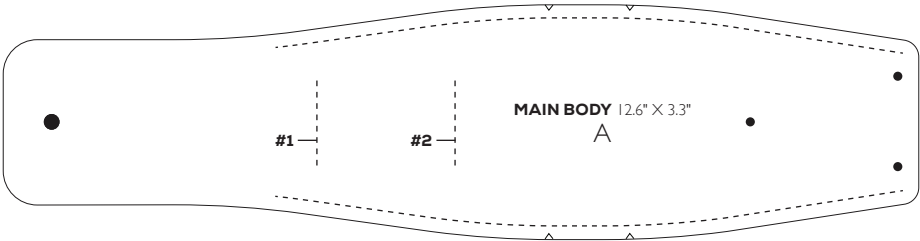

LACE 0.2" X 22"
D

- PUNCH
- CUT
- - - - - STITCH
- # 1-2 STITCH SECTION
- ∨ MARKERS

PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

ASSEMBLY INSTRUCTIONS

1. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.
2. Attach the Button Stud to the single hole near the center on Main Body (A). Place stud on the grain side.
3. Stitch one edge of Belt Loop (B) to Main Body (A), grain to grain, on stitch line #1. Be sure the Belt Loop (B) faces away from Stitch Line #2.
4. Fold the Belt Loop (B) over and stitch the opposing side to stitch line #2. Flesh side of Belt Loop (B) meets grain side of Main Body (A).
5. Use paper pattern to align Base (B) onto the flesh side of Main Body (A) between the two notches and stitch together. You can use glue or double-sided tape to secure (stitching will take place in in Step 7).
6. Finish the outer edge of Main Body (A).
7. Stitch Pouch (C) to Main Body (A). Base (C) should be in-between these Pouch (C) and Main Body (A).
8. Starting at the front of Main Body (A), weave the Lace (D) in, out, and around to secure Pouch (C). Tie a knot.
9. Pull tightly and secure the flap to the Button Stud.

COMPLETED PROJECT



EST **tandy**[®] 1919
LEATHER

FOR MORE PATTERNS, PROJECTS, AND TIPS,
VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather: 1900 SE Loop 820, Fort Worth, TX 76140
Made in the USA.
©2024 Tandy Leather: All rights reserved