

CHISEL POUCH PAPER PATTERN

NOTE: Paper Patterns are intended for experienced leathercrafters.

RECOMMENDED MATERIALS

3 to 4 oz. Semi Firm to Semi Soft Leather
(1 sq. ft.)
Lace (2 ft.)
1/4 in. Grommets (4)

REQUIRED TOOLS

Knife
Straight Edge
Mallet
Scratch Awl
3 to 5 mm Diamond Stitching Chisel
Harness Needles & Thread
Binder Clips or Similar
1/4 in. Round Drive Punch
1/4 in. Grommet Setter


RECOMMENDED TOOLS

Small or Medium Corner Punch
Edge Finishing Materials
Stitching Horse

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
A	Body	1	3 to 4 oz.
B	Lace	1	2 to 4 oz.

Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

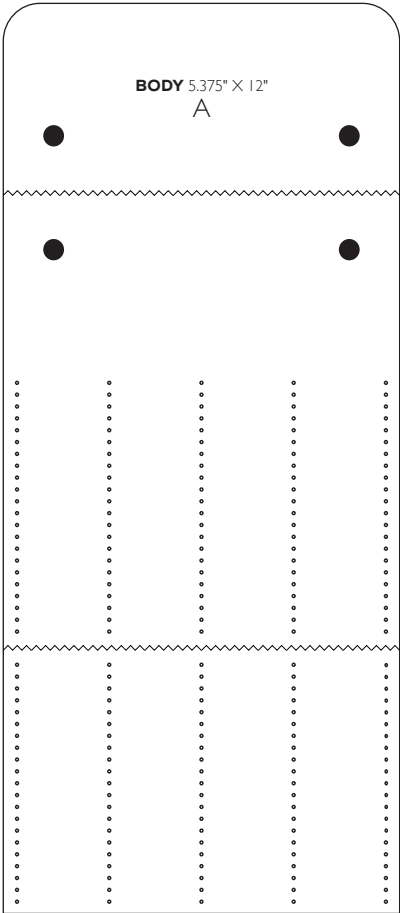

LACE 0.2" X 22"
B



- PUNCH
- CUT
- ~~~~~ FOLD
- STITCH

*Project Overview is not to scale.

PAPER PATTERN CARE INSTRUCTIONS

OPTION 1: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.


OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

ASSEMBLY INSTRUCTIONS

1. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.
2. Install four Grommets into Body (A) at four punch holes .
3. Fold Body (A) and align stitch holes.
4. Saddle stitch each pocket of Body (A). End with an edge lock stitch and 2-3 backstitches.
5. Thread Lace (B) through all Grommet holes and loosely knot end in the back.

COMPLETED PROJECT

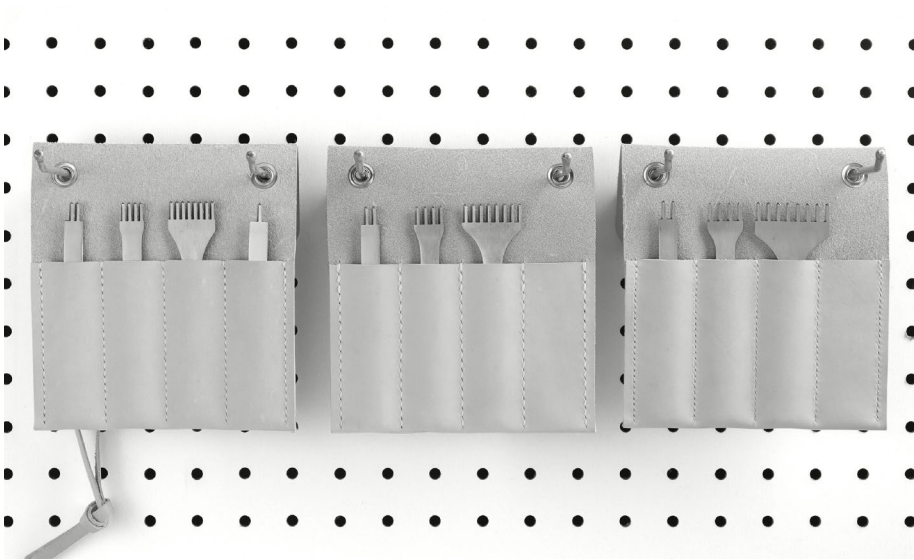

EST **tandy**[®] 1919
LEATHER

FOR MORE PATTERNS, PROJECTS, AND TIPS,
VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather: 1900 SE Loop 820, Fort Worth, TX 76140
Made in the USA.
©2024 Tandy Leather: All rights reserved