TOOL PORTFOLIO PAPER PATTERN

NOTE: Paper Patterns are intended for experienced leathercrafters.

SUGGESTED SPECS

Pattern shown using 5 Diamond Stitching Chisels. 3 mm Chisels can be substituted.

RECOMMENDED MATERIALS

3 to 4 oz. Semi Firm to Semi Soft Leather (3 to 4 sq. ft.) Rivets (4) Line 20 Snaps (4) Leather Staples (2) I/4 in. Grommets (8) 3/4 in. Strap Buckles (2)

REQUIRED TOOLS

Knife Straight Edge Mallet Scratch Awl 3 or 5 mm Diamond Stitching Chisels Harness Needles & Thread Binder Clips or Similar 1/8 & 1/4 in. Round Drive Punch 1/2 in. Oblong Punch 1/4 in. Grommet Setter Line 20 Snap Setter Rivet Setter


RECOMMENDED TOOLS


3/4 in. Round End Punch Corner Punch Poly Roller or Cobbleres Hammer Adhesive Tape Edge Finishing Materials Stitching Horse

LABEL	PATTERN PIECE	PIECES REQUIRED	RECOMMENDED LEATHER WEIGHT
А	Body	l	3 to 4 oz.
В	Straps	2	3 to 4 oz.
С	Handle Grip	I	3 to 4 oz.
D	Handle	I	3 to 4 oz.
E	Snap Tabs	2	3 to 4 oz.
F	Strap Keepers	2	3 to 4 oz.

Please note the type of leather and tools you use will affect the outcome. Please use your best judgment when assembling your project. We recommend outlining the order of operations, measure and count twice before making any permanent alterations to your pattern.

PROJECT OVERVIEW

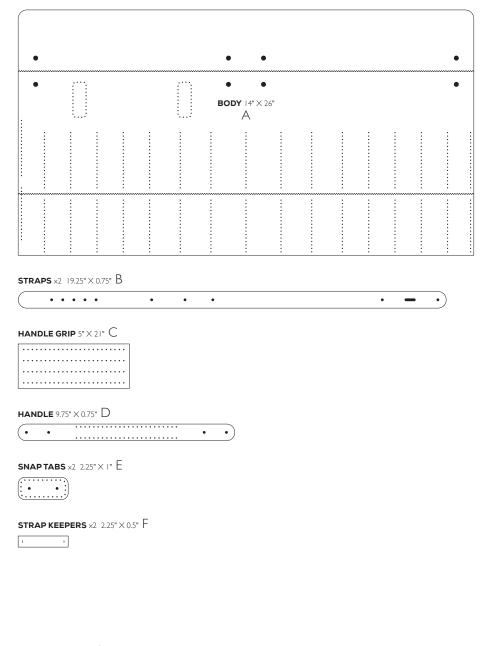



STITCH

PAPER PATTERN CARE INSTRUCTIONS

OPTION I: Before cutting out pattern pieces, adhere a stiffer paper (cardstock or similar) with preferred adhesive.

OPTION 2: After cutting out pattern pieces, laminate individual pieces.

These are suggestions to prolong the lifespan of the paper pattern. With proper care, these patterns can be used again and again!

ASSEMBLY INSTRUCTIONS

I. Cut required pieces. Before assembly, take the necessary steps to prepare leather and edges.

STRAPS

2. Fold Strap Keepers (F) flesh sides together and install leather staples.

3. Assemble a Keeper (F) and a Buckle on each Strap (B). Rivet into place.

4. Install all four cap and socket portions of Line Snaps on both Straps (B) (refer to pattern). Socket on flesh side and cap on grain side of leather.

HANDLE

5. Wrap Handle Grip (C) around Handle (D), centering the middle two stitch lines. Flesh side of Handle Grip (C) meets grain side of Handle (D).

6. Saddle stitch Handle Grip (C) to Handle (D).

7. Wrap the end of Handle (D) around the outer edge of each Strap (B) near the installed Line Snap Cap. Rivet Handle (D) to Straps (B).

6. With flesh sides together, gently press leather along fold lines of Body (A) using a poly roller or cobblers hammer to form top flap and bottom pocket portions.


7. Install post and stud portions of Line Snaps on both Snap Tabs (E), with stud on grain side.

8. Stitch both Snap Tabs (E) to grain side of Body (A).

9. Install grommets into Body (A).

10. Stitch bottom pockets of Body (A).

COMPLETED PROJECT

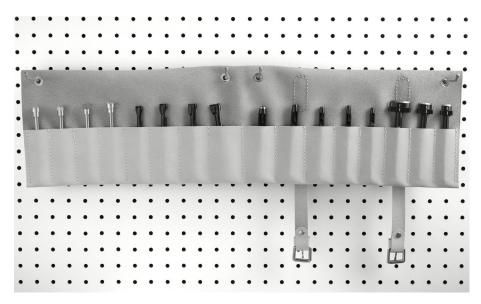







FOR MORE PATTERNS, PROJECTS, AND TIPS, VISIT TANDYLEATHER.COM/BLOG.

Distributed by Tandy Leather 1900 SE Loop 820, Fort Worth, TX 76140 Made in the USA. ©2024 Tandy Leather: All rights reserved