


*Gift More,*  
**SAVE MORE!**

# CLUTCH

*Created by Jennifer Anderson of Lady of Valleys Leather Co.*

## PATTERN

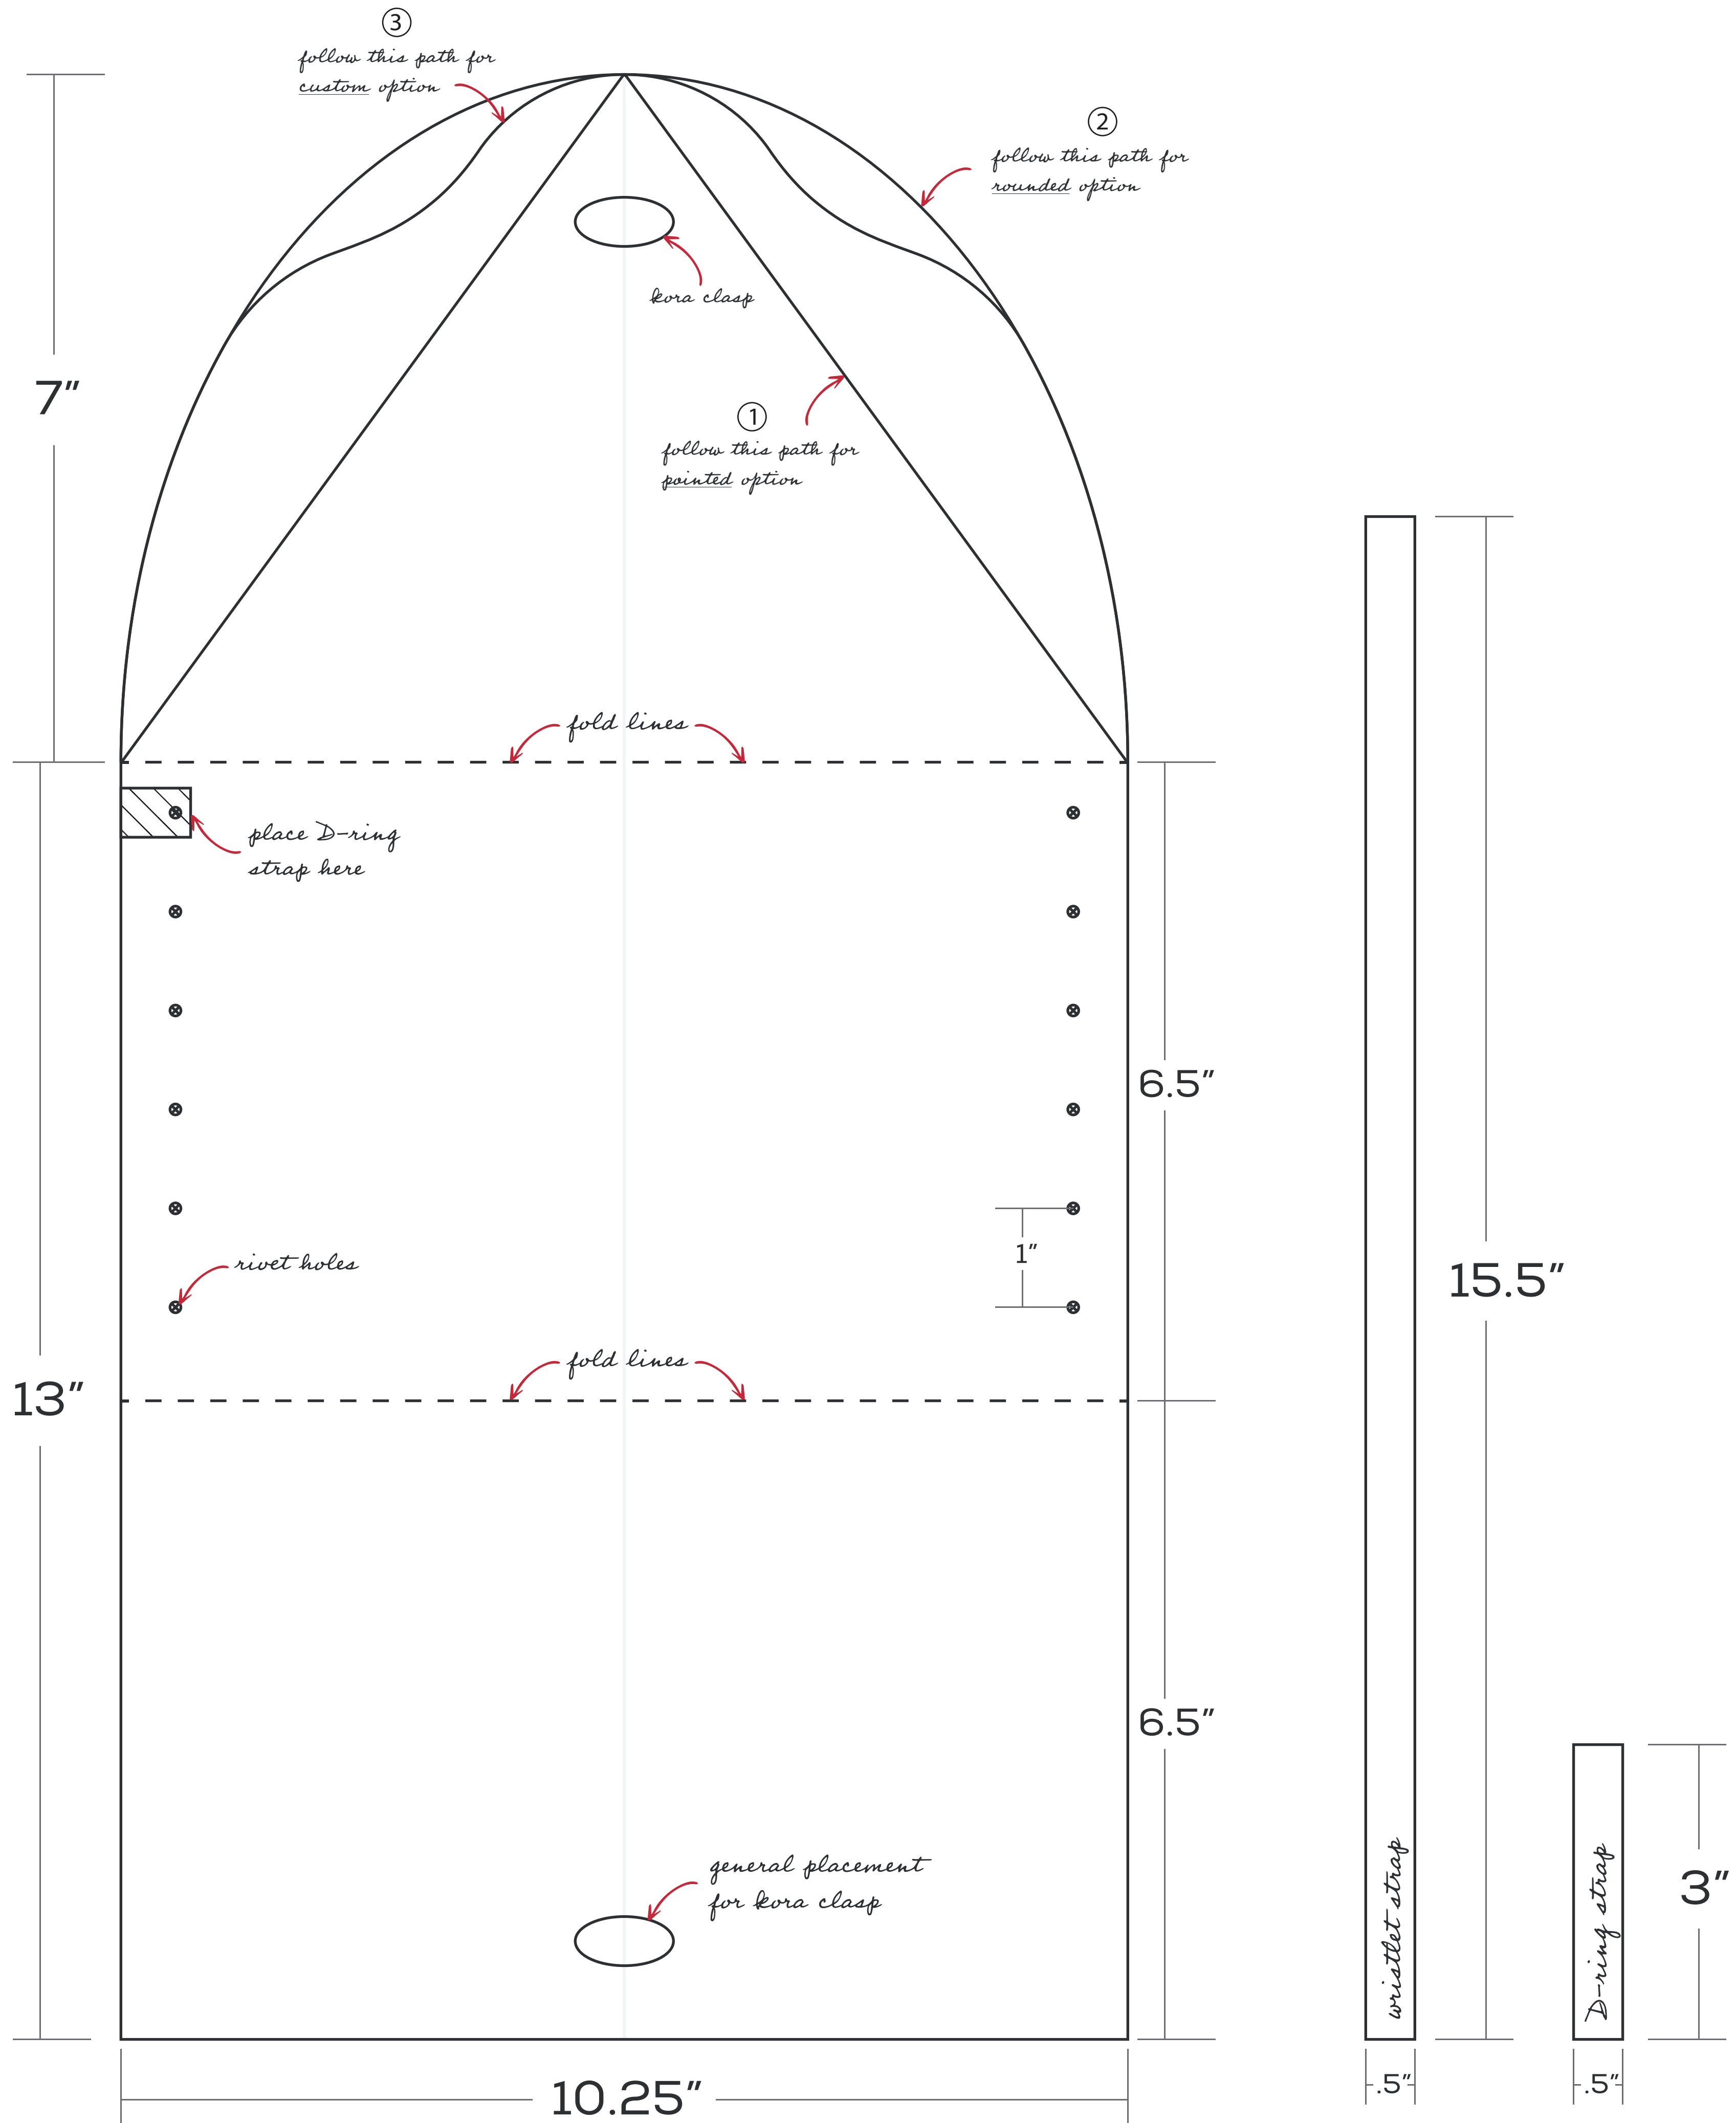

# CLUTCH

Created by Jennifer Anderson of Lady of Valleys Leather Co.

## INSTRUCTIONS

1. Cut clutch exterior out of leather using rotary cutter.
2. Glue or weld rough side of leather to 2/3 oz. veg-tan leather on the rough side.
3. Allow to dry, then cut off excess lining.
4. Dye veg-tan lining with chocolate dye.
5. Seal with Eco-Flo® Super Sheene and allow to dry.
6. Sew exterior and lining together with a 1/4" seam allowance.
7. Sand and burnish, then apply Edge Flex to edges and allow to dry.
8. Fold bottom edge to the top of the flap (should measure 6.5" when folded) to form clutch and clamp edges together. Let sit for about 30 minutes to create a form.
9. Unclamp sides to install Kora clasp to clutch.
10. Place 1/2" D-ring in center and fold to create housing to attach wristlet strap to later.
11. Place D-ring housing in position marked on pattern.
12. Re-clamp sides together and close Kora clasp.
13. Measure and punch holes for rivets on each side of clutch using rotary punch. Be sure to place first rivet in center of D-ring housing.
14. Install medium double-cap rivets using rivet setter.
15. Using Kodiak leather cut one 15" x 0.5" strip.
16. Skive ends of strip.
17. Set with rivet onto D-ring.
18. Burnish edges to create a clean finish.

Check  
Your List...

- FREE PATTERN**  
tandleather.com/maker
- VEG-TAN TOOLING CALF**  
9154-04
- COWHIDE OR DESIGNER LEATHER**  
9117-06
- ANTIQUE BRASS D-RING**  
1129-02
- ANTIQUE BRASS MEDIUM DOUBLE CAP RIVETS**  
1371-15
- ANTIQUE BRASS KORA CLASP**  
11400-27
- FEIBING'S CHOCOLATE LEATHER DYE**  
2100-02
- ECO-FLO® EDGE PAINT DARK BROWN**  
2810-03
- KODIAK LEATHER**  
9075-72
- ECO-FLO® NEAT LAC**  
2626-06
- ROTARY CUTTER**  
3042-00
- SCISSORS**  
3047-00
- ROTARY PUNCH**  
3220-00
- ECO-FLO® LEATHER WELD**  
2655-01
- THREAD**
- HAND BURNISHER**  
3972-64

EST. **tandy** 1919  
LEATHER

MAKE YOUR MARK™