
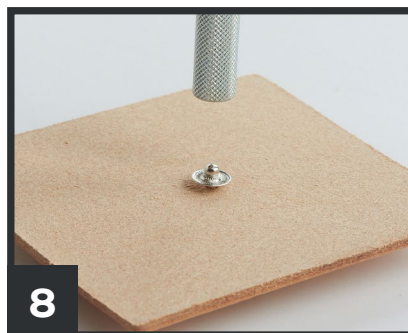
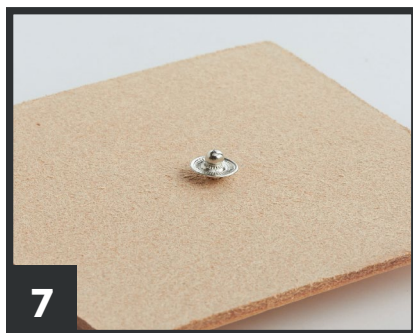


HOW TO SET GLOVE SNAPS

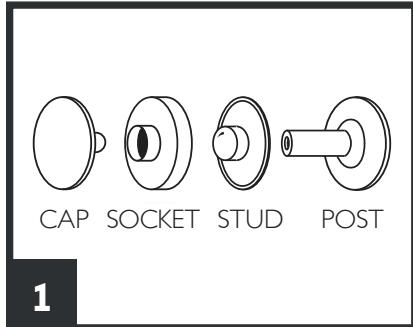

1. Place cap into corresponding size divet on the Anvil. Place pattern piece onto the cap. (Figures 2-3)

2. Cover cap with socket. Line up corresponding setter tool. Hit firmly with a mallet a few times to set the snap. (Figure 4)

3. For the other side, place post into corresponding size divet on the Anvil. Place leather onto the post, and cover post with stud. (Figures 6-7)

4. Line up corresponding setter tool. Hit firmly with a mallet a few times to set the snap. (Figures 8-9)