
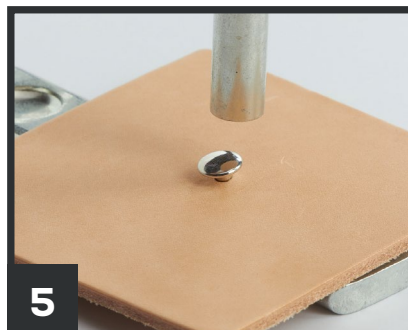
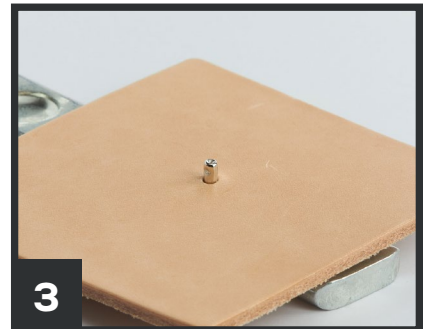


HOW TO SET RIVETS

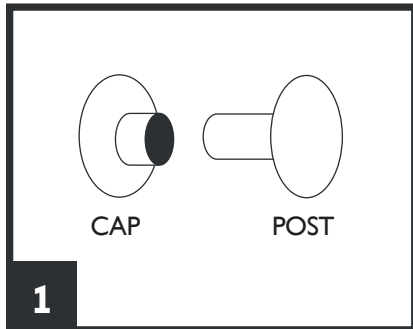

1. Place rivet post into correctly sized anvil divet.
(Figure 2)

2. Place pattern piece(s) onto rivet post and
cover post with rivet cap. (Figures 3-4)

3. Line up corresponding setter tool. Hit firmly
with a mallet a few times to set the rivet.

(Figures 5-6)