


# HOW TO SET SNAPS

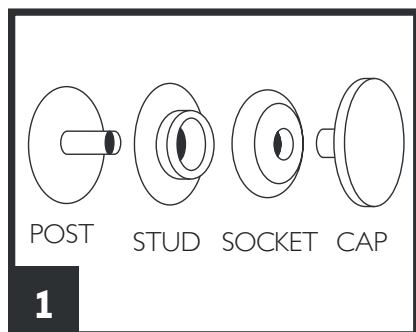

1. Place cap into corresponding size divet on the Anvil. Place pattern piece onto the cap. (Figures 2-3)

2. Cover cap with socket. Line up corresponding setter tool. Hit firmly with a mallet a few times to set the snap. (Figures 4-5)

3. For the other side, place post onto a flat anvil. Place leather onto the post, and cover post with stud. (Figures 6-7)

4. Line up corresponding setter tool. Hit firmly with a mallet a few times to set the snap. (Figures 8-9)