



2015+ Chevy Colorado/GMC Canyon Dash mount installation.

Tools needed

- Trim tool (bone, plastic wedge)
- 7mm socket with ratchet
- Straight pick or Phillips screw driver (to mark holes)
- Drill with 1/8" and 1/4" drill bit
- 5mm Allen or socket with ratchet
- 9mm wrench
- Phillips screw driver #2

Installation

1. Remove the silver trim around the radio screen using the bone tool by prying behind the trim starting from the bottom in the yellow circles. Careful with the clips located in the red circles. Once the bottom is free, grab and pull the trim straight back from the green oval.



2. Remove the two screws circled in red.



3. Set the Dash mount in place as shown below




4. Loosely install the screws and slightly place the dash mount as high as it will go as shows below.



5. Tighten the screws.

6. With the mount sitting in place, mark your holes from the rear bracket shown below.

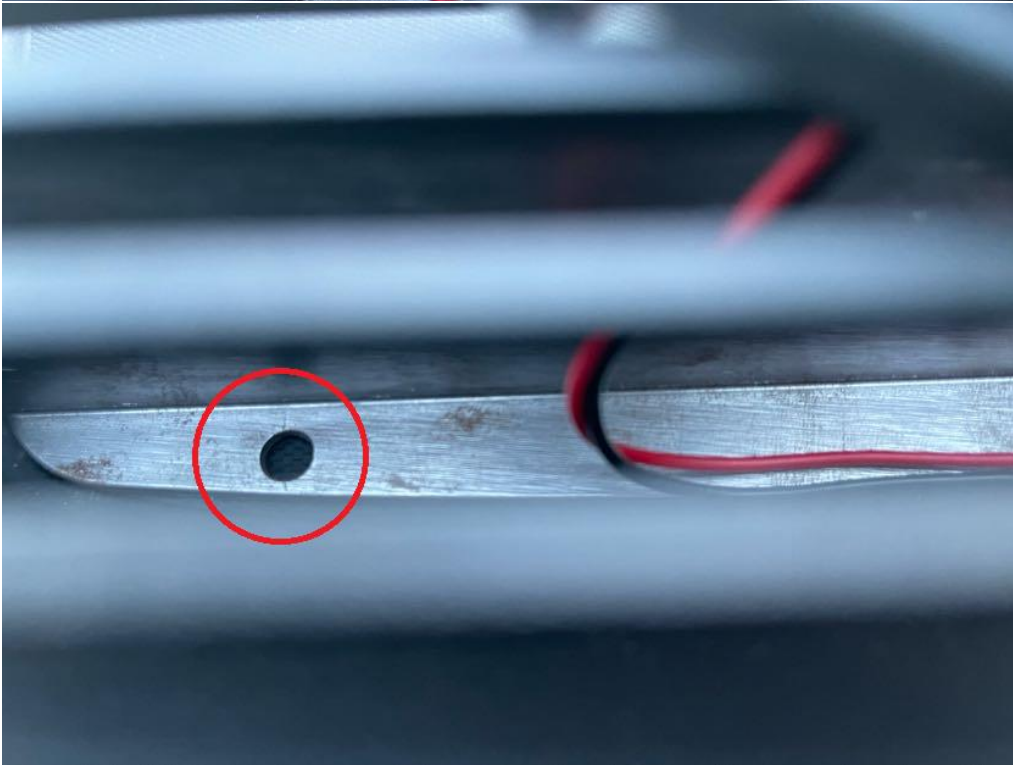

7. Remove the dash mount and drill your holes starting with the 1/8" as a pilot hole and finishing with the 1/4". If you purchased a charger, drill another hole towards the front or edge of the tray to pass the charger's wire.

8. Remove the screen/vent trim by removing the screws circled in red.



9. Remove the brace that sits in the dash tray from the dash mount.
10. Using the provided screws, screw the rear brace onto the tray.
11. Set the dash mount back in place, screw the rear brace onto the dash mount and the dash mount onto the two front screws.

12. To finish off the installation you have two options for the silver trim. You can remove a small section (circled in red) for it to sit flush or leave as is.



13. For our application we decided to leave the trim as is and you can see the gap you'll end up with here.



14. Install your attachments and enjoy

