

The Modern®


Assembly Instructions

WRITERS DESK ELM – BROWN LEATHER

HARDWARE ACCESSORIES LIST

Picture	Name	Quantity	Unit
	Small flat head machine screw	2	Piece
	M4 Allen Key	1	Piece

Step 1: Lower the shelf unit onto the desk and attach underneath with screws provided using the Allen Key

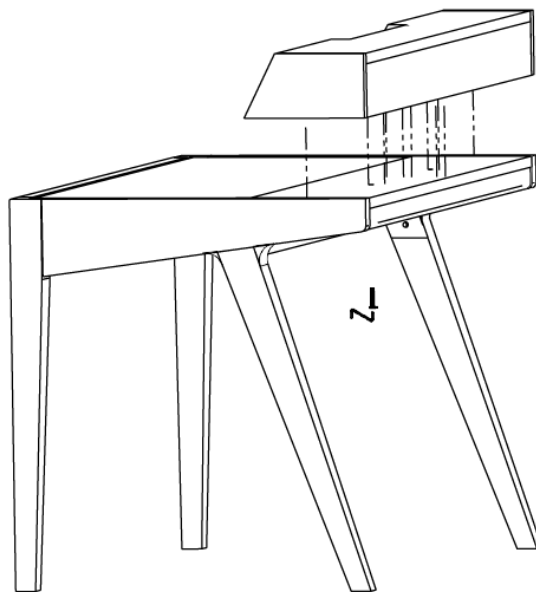

COMPLETED

