

STEP 1: HOW TO STICK MICROCHIP

1. Lift the **transparent film** until the **“STOP”** sign.

Do not peel beyond the line indicated!




2. **Eject & place your Nano SIM card** into the slot from the top




Please take note: For Micro SIM


- i) **Punch out the micro template** from the card
- ii) Eject & place your **Micro SIM card** into the slot from the top

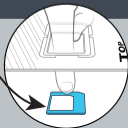

3. Peel off the **yellow tab**, make sure to **not detach the microchip** as well.

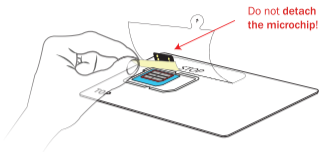

4. **Paste microchip** onto your SIM
 - i. **Press firmly** to ensure proper adhesion

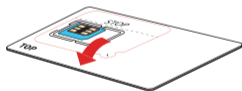

- ii. **Lift the transparent film** to retrieve your SIM card
- iii. **Insert your SIM card** back into your phone



STEP 2: LINK YOUR PACK

1. Download the **Flexiroam X app** on **Apple App Store** or **Google Play**



www.flexiroamx.com/downloadapp

2. Register or Login with Facebook, Google, Email or Mobile Number



 Facebook

 Google

 Email

 Mobile No.

3. Tap **Link Starter Pack** > Tap **Scan code to link starter pack**

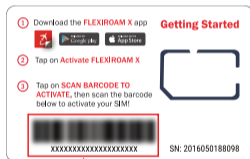

 Scan your card