

VIEW OF TANK BEFORE INSTALL IS STARTED PLEASE NOTE WHITE"HOLE SEAL" PLUGS






STEP 1

USE A FLAT TOOL, LIKE A PAINT SCRAPER, AND GENTLY REMOVE THE SEAL CAPS. BE CAREFUL NOT TO SCRATCH THE PAINT.





- REMOVE ALL HOLE SEALS
- TAKE A SIDE RAIL TO MOUNT TO THE TANK WITH THE THUMB SCREWS

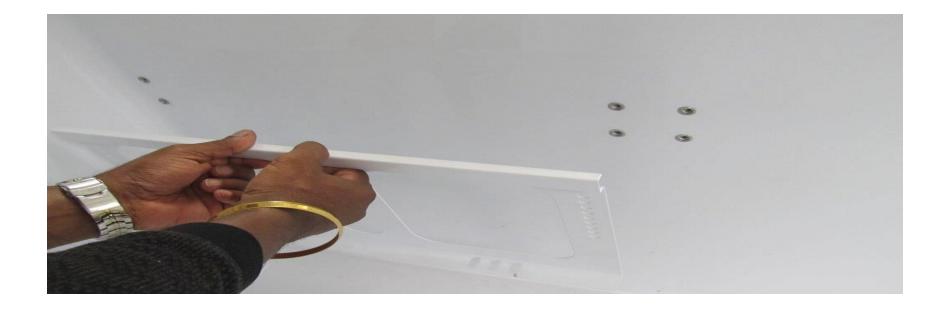



- RAILS CAN BE ADJUSTED UP OR DOWN AS PREFERRED BY CUSTOMER
- VERIFY TOP OF ICE CREAM TUB WILL BE BELOW THE RED LINE ON TANK WALL
- IN THE VIEW BELOW; THE THUMB SCREW HAS BEEN INSERTED INTO THE RIVET NUT IN THE TANK





GO THE OPPOSITE END OF THE SUPPORT RAIL AND INSTALL ANOTHER THUMB SCREW





THE VIEW IN THE PICTURE BELOW SHOWS BOTH THUMB SCREWS INSTALLED AND TIGHTENED PROPERLY





- RAILS CAN BE ADJUSTED UP OR DOWN AS PREFERRED BY CUSTOMER
- VERIFY TOP OF ICE CREAM TUB WILL BE BELOW THE RED LINE ON TANK WALL
- IN THE VIEW BELOW; THE THUMB SCREW HAS BEEN INSERTED INTO THE RIVET NUT IN THE TANK





- INSTALL THE CAN SUPPORT RACKS AS SHOWN IN PICTURE
- A BAND IS LOCATED ON BOTTOM SIDE OF RACK THAT IS INSERTED INTO THE HOLE OF SIDE RAIL





WHEN ALL RACKS ARE IN PLACE:

- TIME TO INSTALL THE WHITE CAN SKIRT ON TOP OF THE TUB RIM
- THE GRIPS MUST BE DEPRESSED TO INSTALL ON TUB RIM





A VIEW OF THE TWO CANS INSTALLED PROPERLY IN THE DIPPING CABINET





THE VIEW BELOW SHOWS TWO ICE CREAM CONTAINERS WITH CAN SKIRTS INSTALLED AND PLACED CORRECTLY ON SUPPORT RACK

