


Step 1

Remove the cap, and dip the card into your sample for 10 seconds

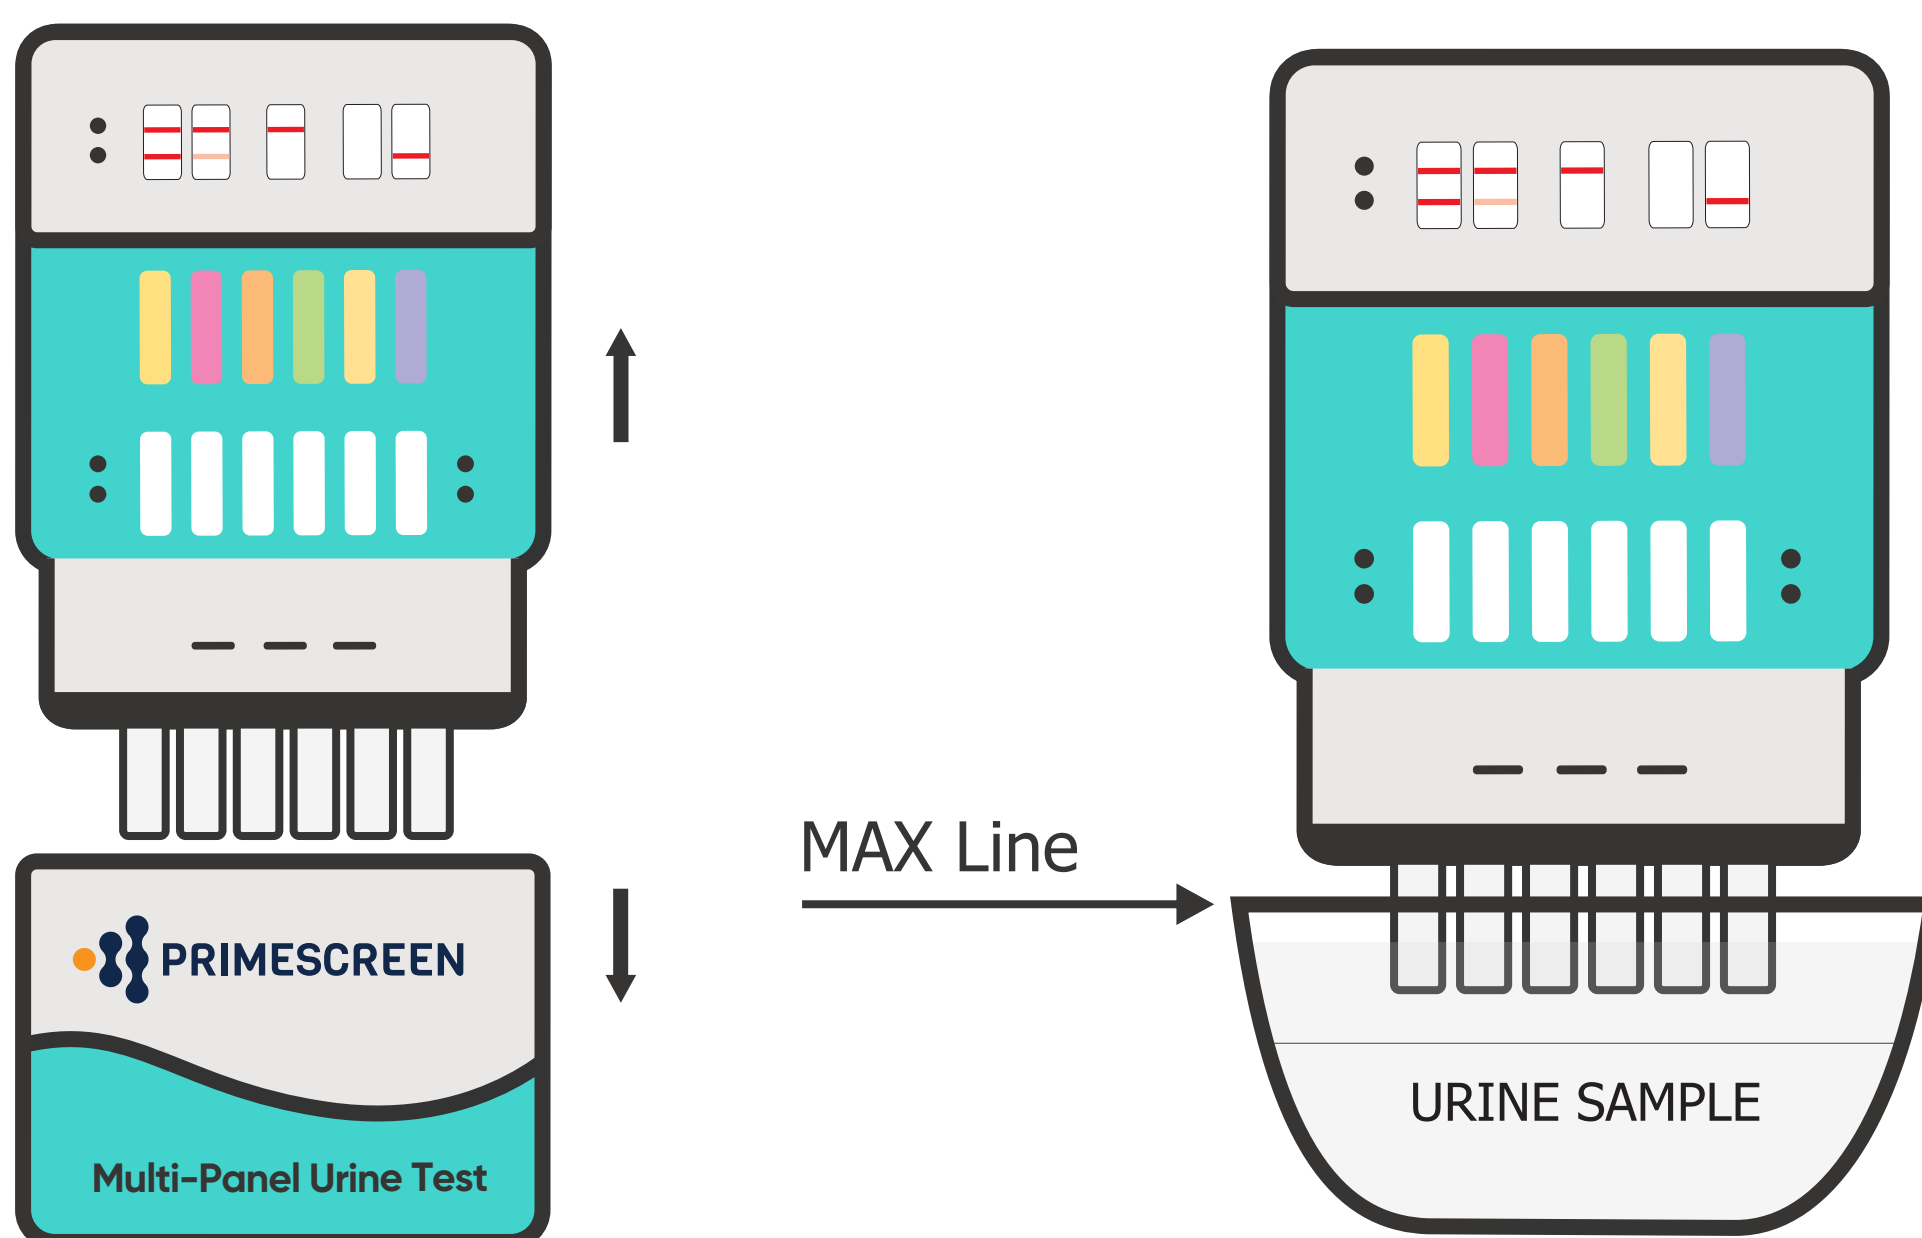

Step 2

Re-cap the card and lay it flat, wait for 5 minutes



Step 3

Read your results!

