



Step 1

Remove the strip from the pouch

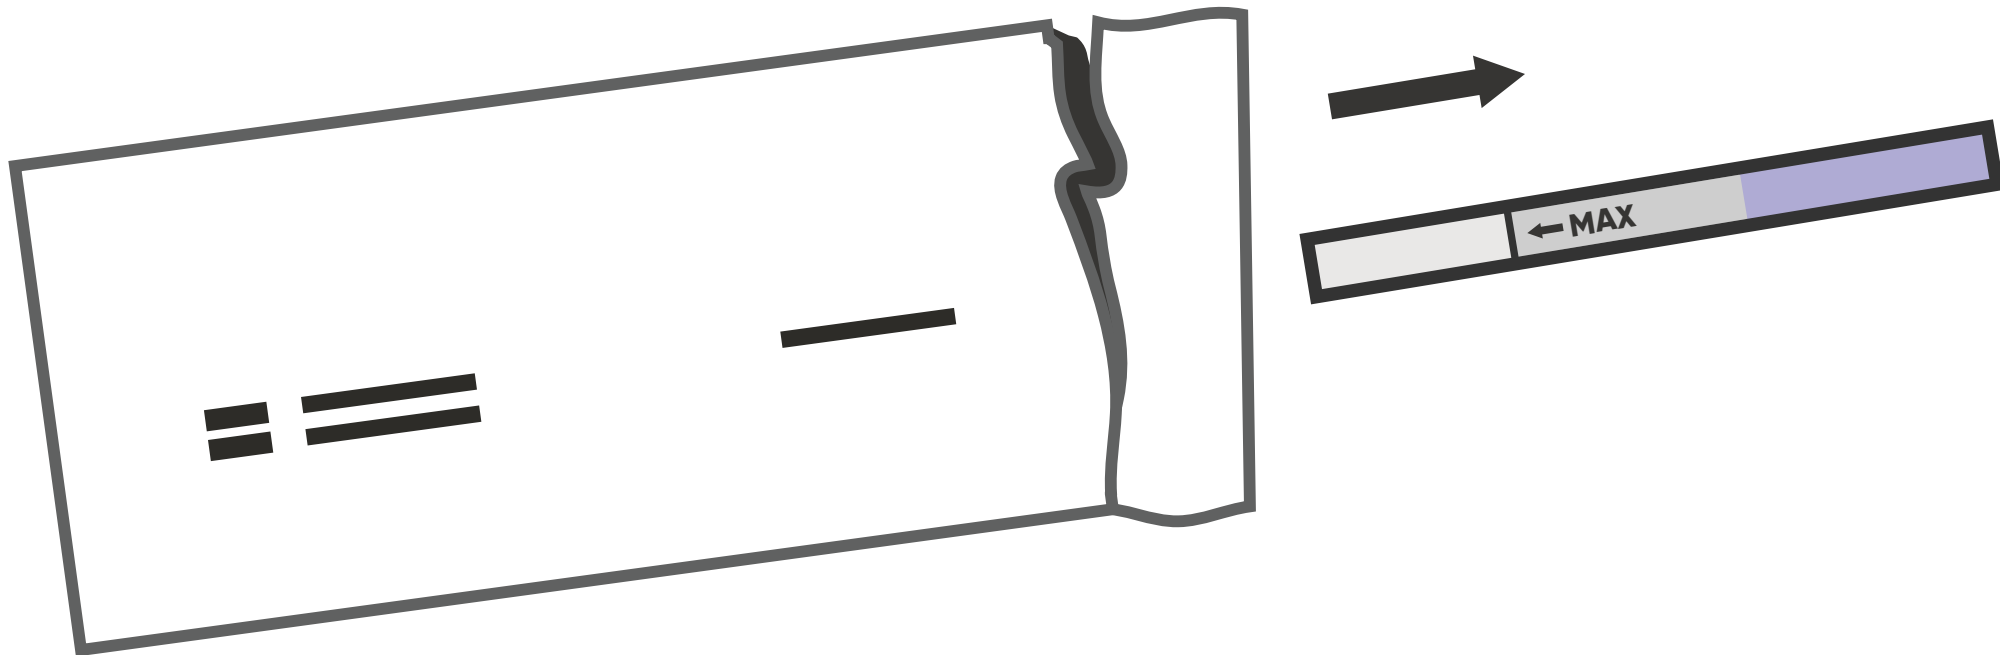

Step 2

Dip the absorbent end of the strip into your sample for 10 seconds

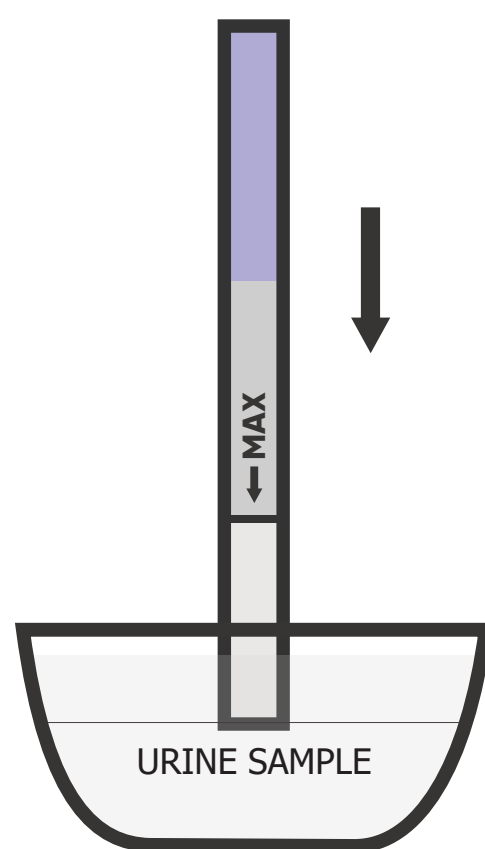

Step 3

Read your results after 5 minutes!

Wait!
5Min.

