


Step 1


Avoid placing anything in the mouth for 10 minutes prior to testing. Put the sponge end of the collector in your mouth to collect oral fluid about 7 minutes, until the swab indicator turns red.

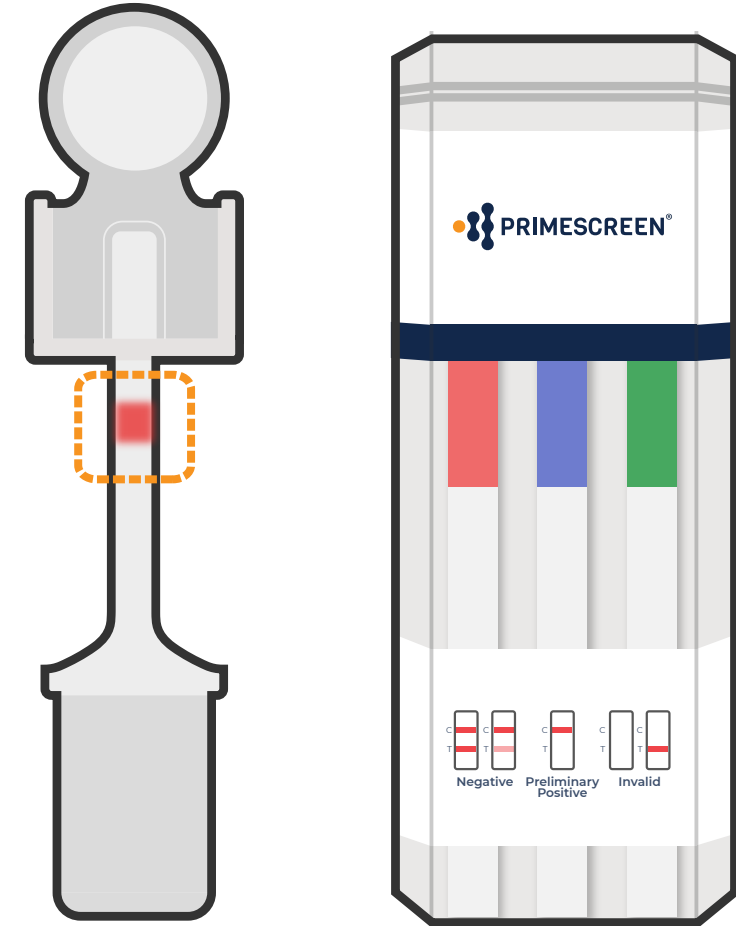

Step 2


Open the test square and place the saturated oral fluid collector inside the test square. Close the cap, and place the cube **upright**.

Wait!
5 Min.

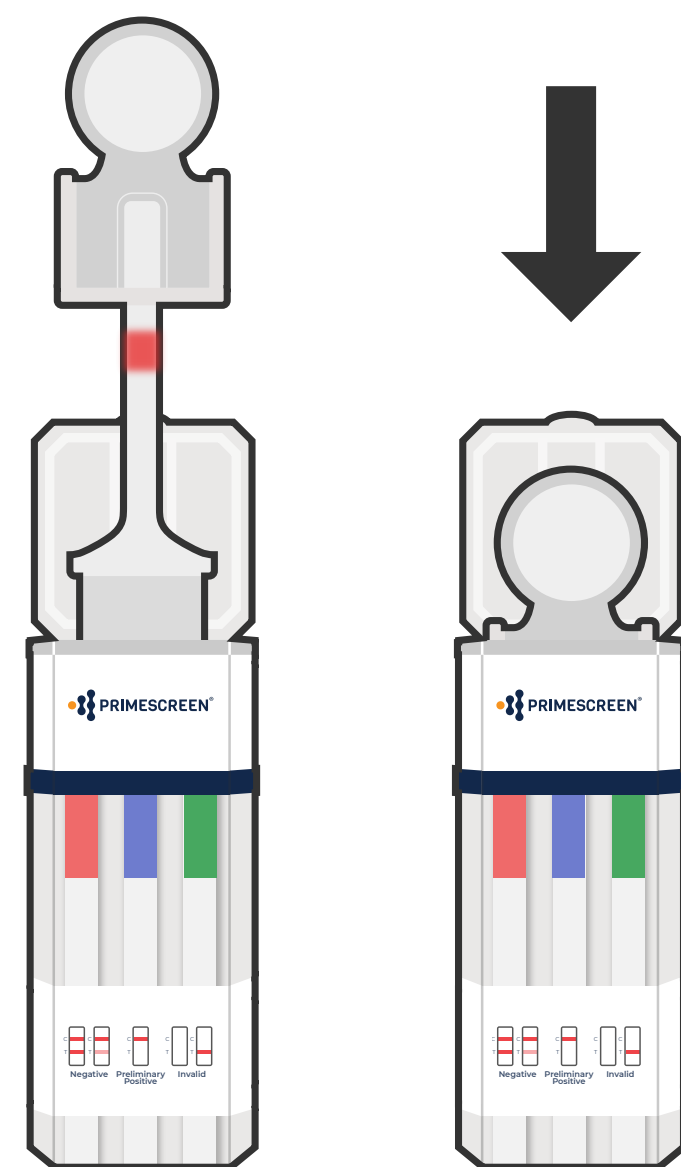

Step 3


At 5 minutes, compare your test with the guide to get your results!

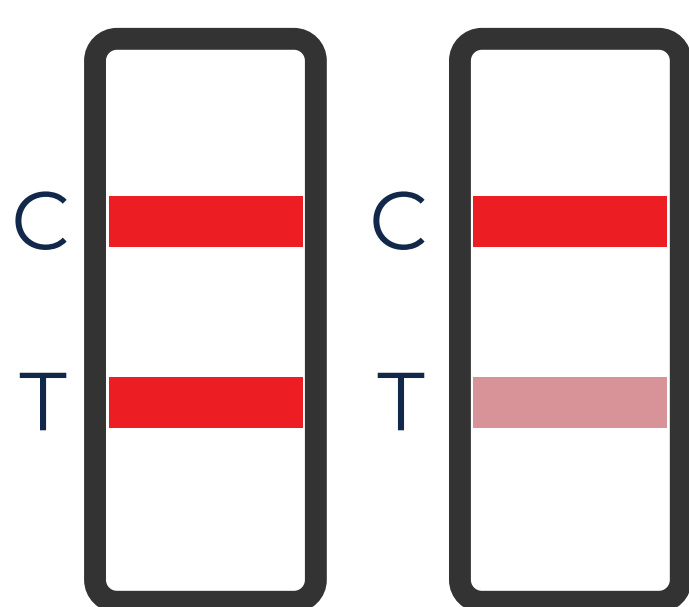

Negative



Preliminary Positive

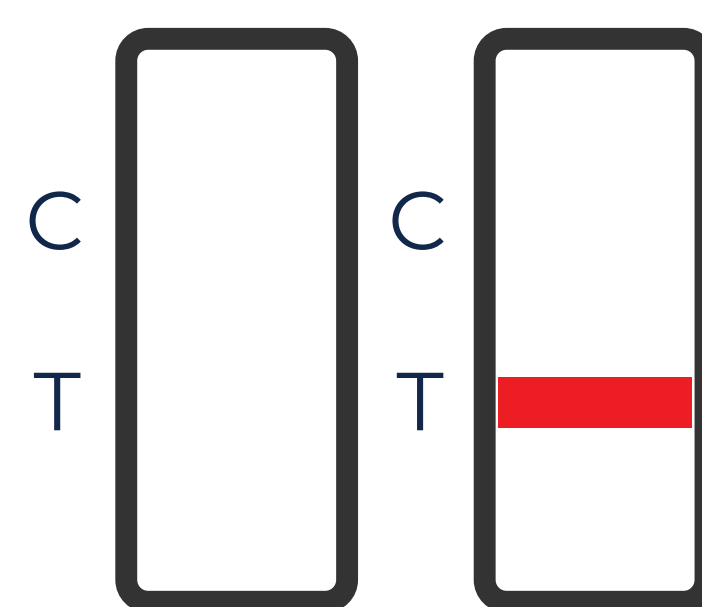

Invalid

There is no meaning attributed to line color intensity or width.