


# Toyota Style Connectors

- Read these instructions completely before purchasing and installing to ensure you are comfortable with the process.
- Altering your vehicles factory electronic systems inherently comes with the potential to cause irreversible damage. Install at your own risk.
- To ensure success, always wear the appropriate safety equipment and chose the right tool for the job.

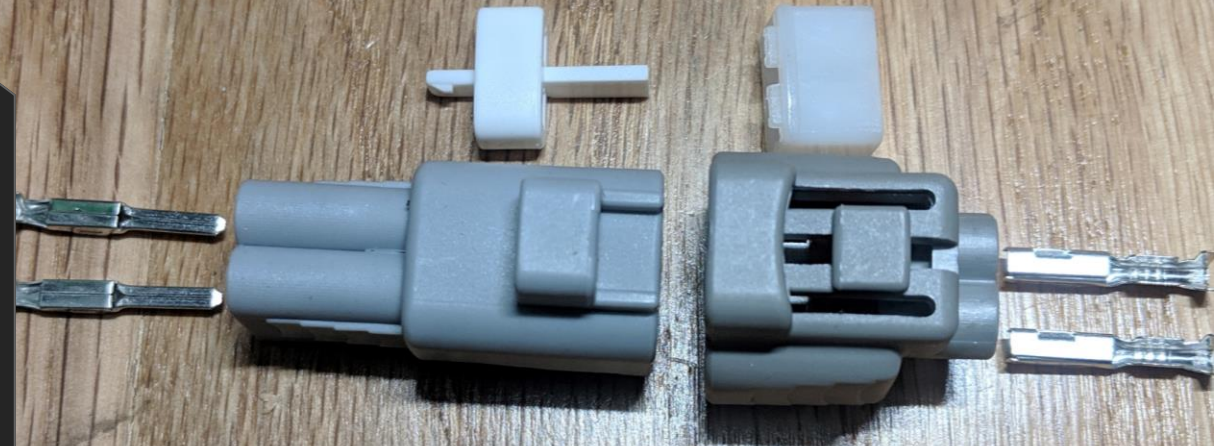

## Step 1

- Place rubber wire seals on wire ends as shown.



## Step 2

- Place conductor on the wire end as shown. Ensure the rear clasps are on insulation and not bare wire.



## Step 3

- Using needle nose pliers, fold the clasps over onto the wire and insulation as shown.



## Step 4

- Using a wire crimping tool, crimp the forward most clasp onto the bare wire to ensure a secure connection. Soldering the wire to the conductor is also recommended, but not required.




## Step 5

- Slide the rubber seal up over the first claps to where the second clasp begins, as shown.



## Step 6

- Slide two conductors into the connector body. Ensure they click into place securely.
- Place the white plastic conductor lock into the connector until fully seated as shown.
- Repeat this process for the female side.

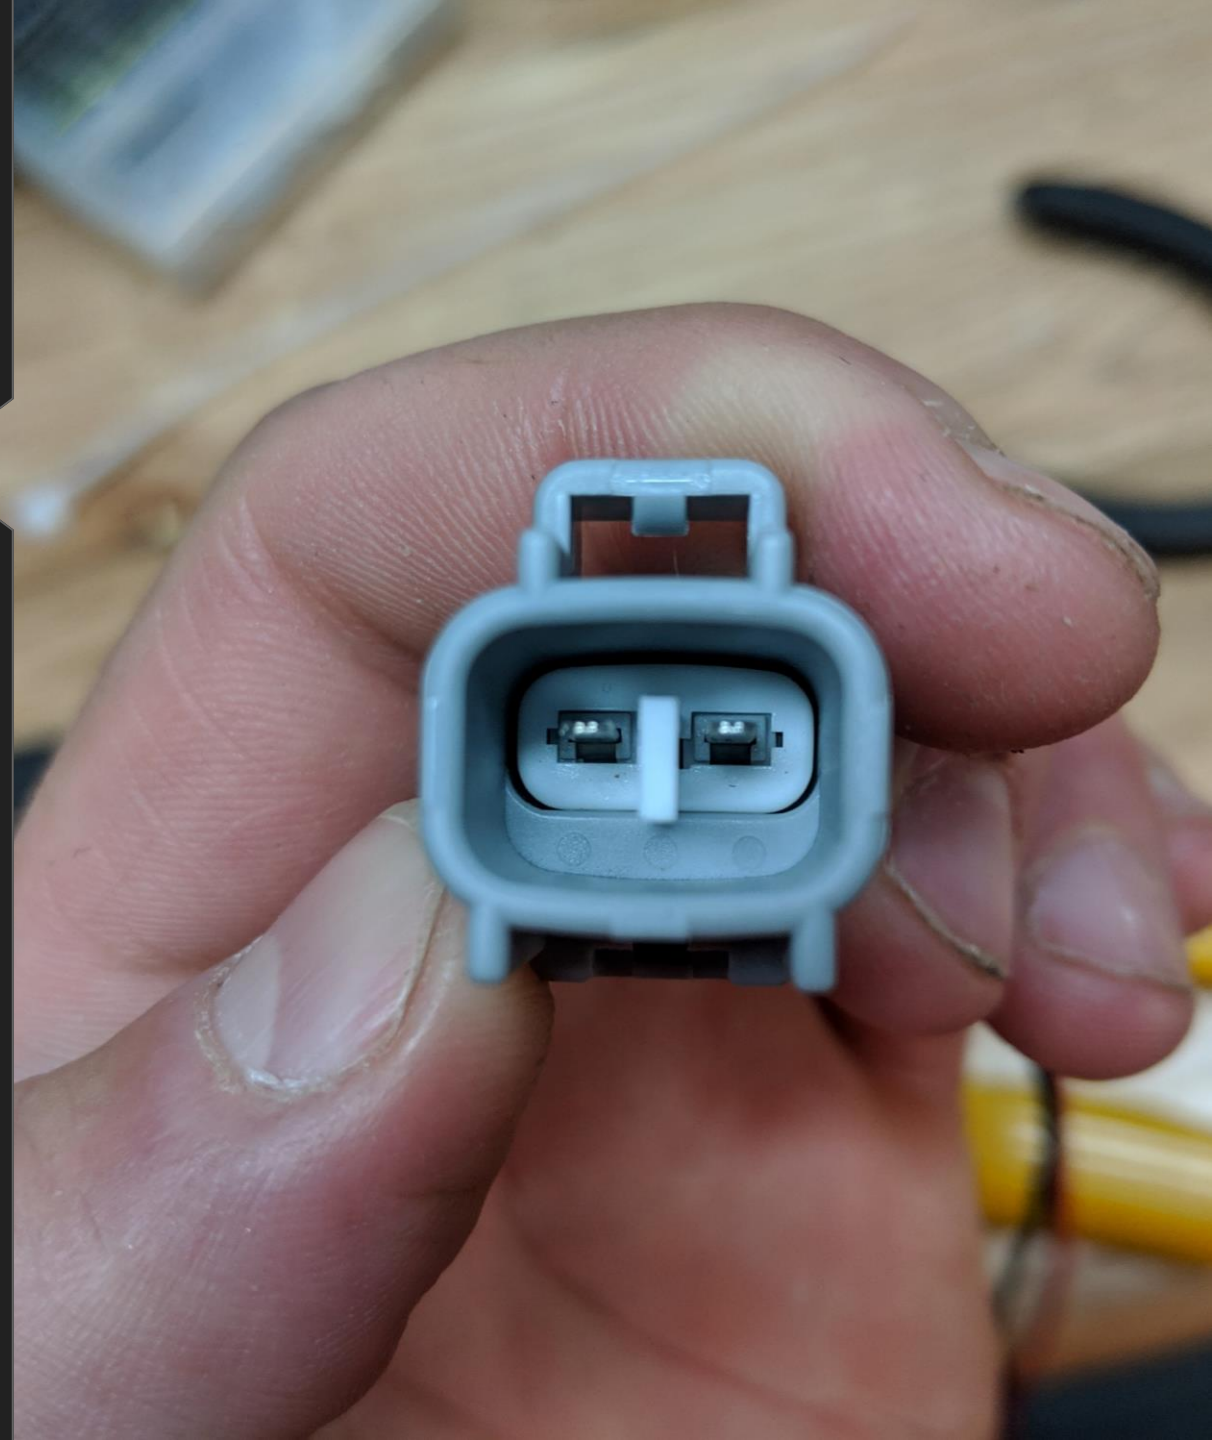

Enjoy your new Connectors!

Thank you for your support!

 **OWL EXPEDITION**

For technical help, please contact us at [OwlExpedition1@gmail.com](mailto:OwlExpedition1@gmail.com) or (304)-276-6523.