



**PARTS**

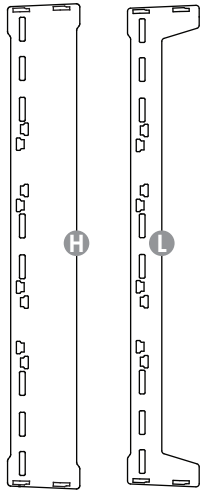

**A**

(2) Sides\*

\*2 **L**s OR 1 **H** & 1 **L**, depending on your order




**B**

(2) Ends




**C**

(2) Wide Slats




**D**

(2) End Slats



**E**

(6) Pine Slats




**F**


(4) Ribs

**BEFORE YOU START**


**!** Wide Slats **C** need to be secured in place by sticking the tabs on **C** into the corresponding slots on Sides **A** that are larger on the top than the bottom. Push down to tighten.

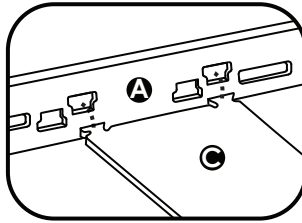

**!** For children under 18 months, do not place side of bed closer than 12 inches to a wall.

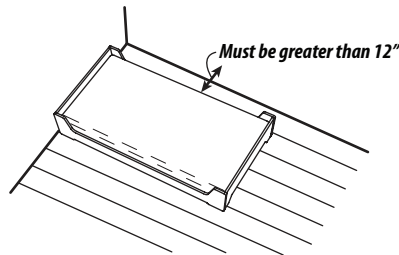


**\*** Tab will 'pop' into slot when force is applied.

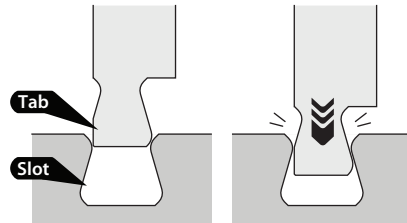


**ASSEMBLY INSTRUCTIONS**


**1** Push tabs of one End **B** into slots on Sides **A**. Push down on **A** to tighten.

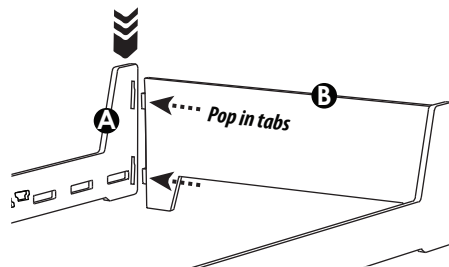


**2** Put left tab on Rib **F** into left slot on Wide Slat **C**.

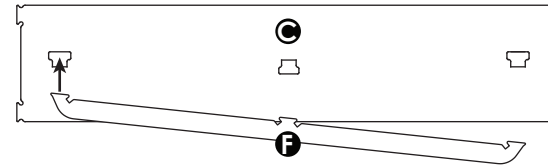


**3** With the left tab mostly in its slot, bend Rib **F** over and pop the middle tab partially down into its slot.

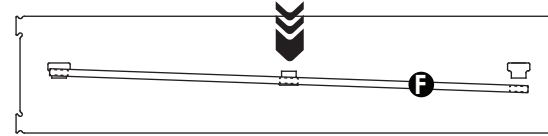


**4** With the middle tab partially in its slot, bend the right tab of Rib **F** back up to its slot and pop it down in.

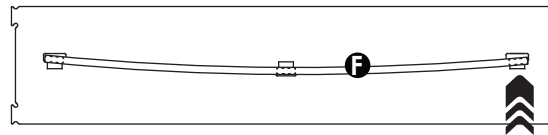

**5** With all three tabs in their slots, straighten Rib **F**. Repeat with the other (3) Ribs and the remaining Wide Slat **C** and the (2) End Slats **D**.

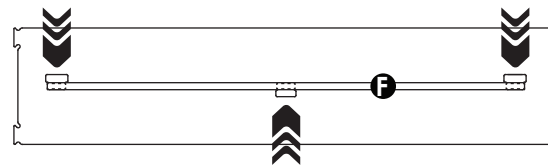


**!** Whether you use your bed in the Low Position or the High Position, always arrange the Slats so that the Ribs are underneath, as shown.

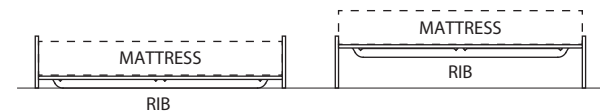


**FULL FLOOR BED**

- !** Adult assembly only
- !** Assemble completely before use
- !** 2 people recommended for assembly.

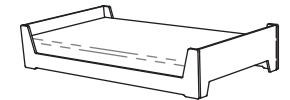

Low Position

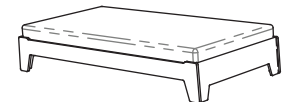

High Position


**STOP** Frustrated? Need Help?

Talk to our customer service agent at:  
**+1 (833) 530-0033**  
 Or email us at:


**support@sprout-kids.com**  
 Watch our assembly video  
[sprout-kids.com/fba](http://sprout-kids.com/fba)

## REMEMBER


**!** Wide Slats **C** need to be secured in place by sticking the tabs on **C** into the corresponding slots on Sides **A** that are larger on the top than the bottom. Push down to tighten.

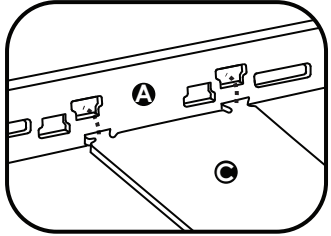


**!** For children under 18 months, do not place side of bed closer than 12 inches to a wall.

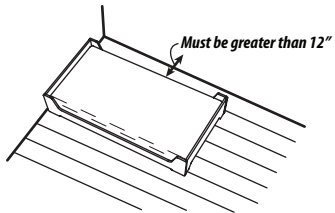


**6** Place all Slats **C**, **D**, & **E** into their respective slots, as shown.

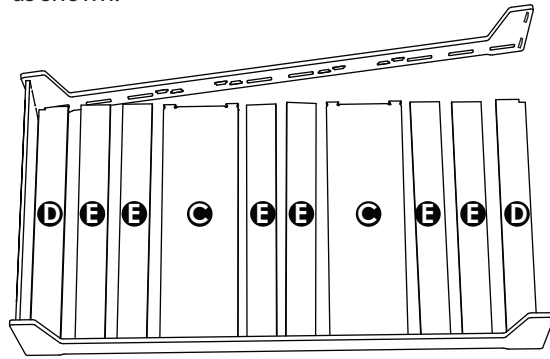

**7** With help from another adult, install other Side **A**, placing each Slat into its slot in turn, as shown.

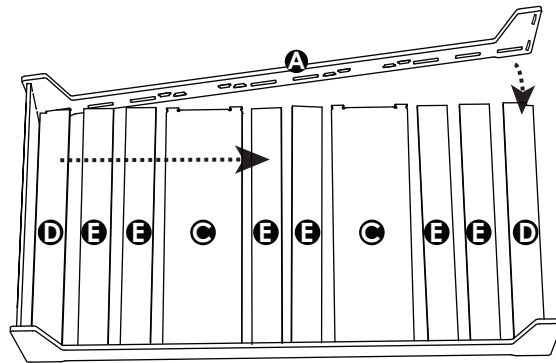


**8** Install opposite End **B** and tighten, just like **Step 1**.


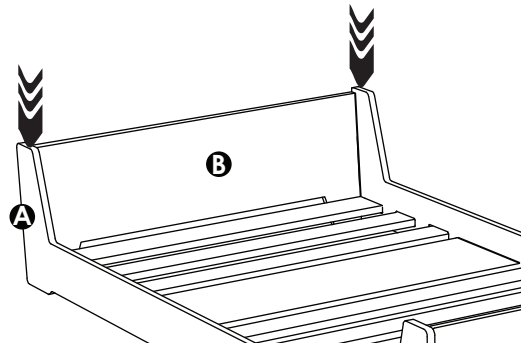


## CHANGING FROM LOW TO HIGH POSITION


**9** To change floor bed from low to high position, bed must be fully disassembled. To loosen joints, place a flat hard object, such as a book, under Side **A** and push down on **B**.

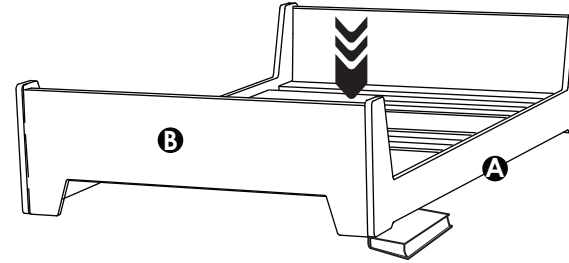

**10** When reassembling keep Ends **B** oriented with feet down (I). The Wide Slats **C** need to be inserted into the slots that are wider at the top (II).

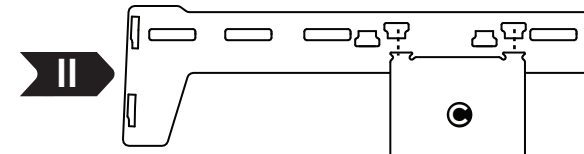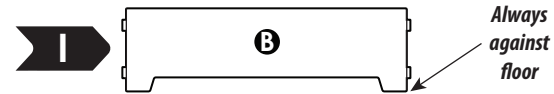

**11** Complete **Steps 1 - 4** to reassemble floor bed in high position.

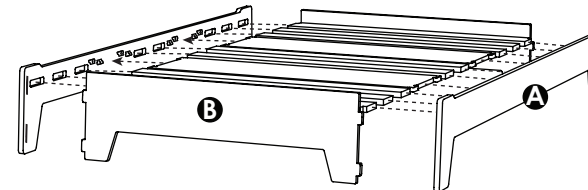

**sprout**


Simple. Modern. American Made.

## FULL FLOOR BED


**!** Adult assembly only

**!** Assemble completely before use

**!** 2 people recommended for assembly.

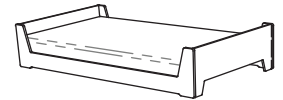

Low Position

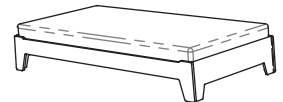

High Position

**STOP** Frustrated?  
Need Help?

Talk to our customer service agent at:

+1 (833) 530-0033

Or email us at:

[support@sprout-kids.com](mailto:support@sprout-kids.com)

Watch our assembly video  
[sprout-kids.com/fba](http://sprout-kids.com/fba)