





Bracket Wallclaw **Drywall Anchor** (2x)(2x)




Wallclaw Screw (2x)




Short screws (2x)



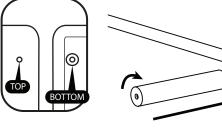


Legs are screwed tightly into the underside of the shelves

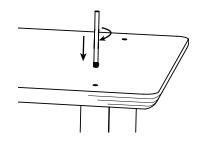

the tops of lower shelves.

Stabilizer Pins are screwed into

A Assemble completely before use



*****Sprout


Simple. Modern. American Made

Need Help?


Go tosprout-kids.com/kha

Or talk to our customer service agent at: +1 (385) 208-1463

Luce Shelves

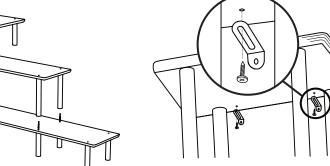

To anchor to the wall, thread the short screw through the long slot on the bracket into the two pilot holes

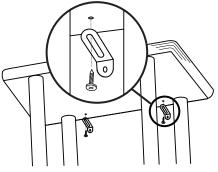


underneath the top shelf.







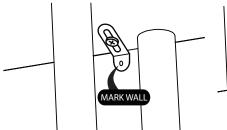


Shelves are securely stacked by

placing legs over Stabilizer Pins,

and pressing down until flush.

Next, push the bracket flush against the wall, and mark the wall through the hole. Do this with both brackets.

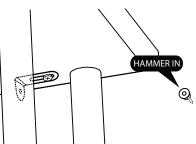


Stack shelves according to your

desired configuration to create

your shelving unit.

Move the brackets and shelf out of the way, then use a hammer to pound Wallclaw Drywall Anchor into the wall at the two marked points.

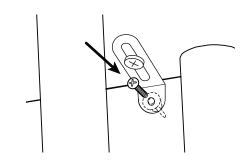

Move the shelf back against the wall, position the brackets against the Wallclaw Drywall Anchors, then screw in Long Screw until tight.