




PARTS

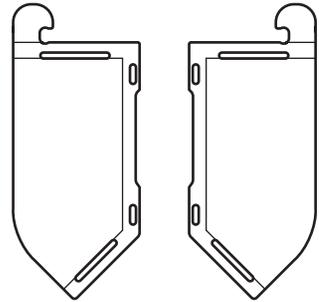

A Left Side
B Right Side

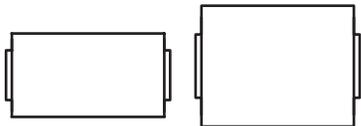

C Front Panel
D Back Panel

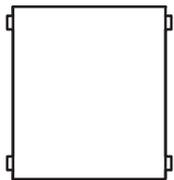


E Bottom Panel




F Small Glue Bottle

ASSEMBLY INSTRUCTIONS


- 1** Put a **thin** line of glue into the slots on Right Side **B**.

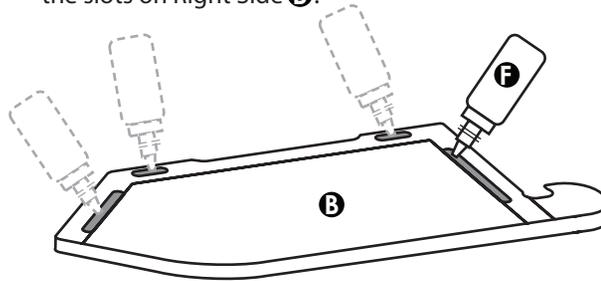

- *** When inserting panels into the side, ensure it is oriented correctly per the diagram below.

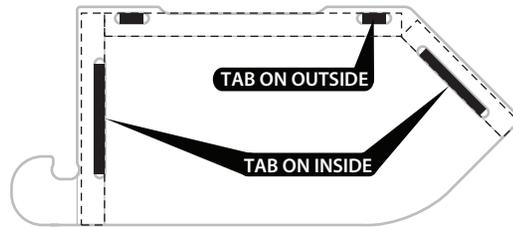


- 2** Carefully press the tabs of the three panels into the slots, orienting them per *****.

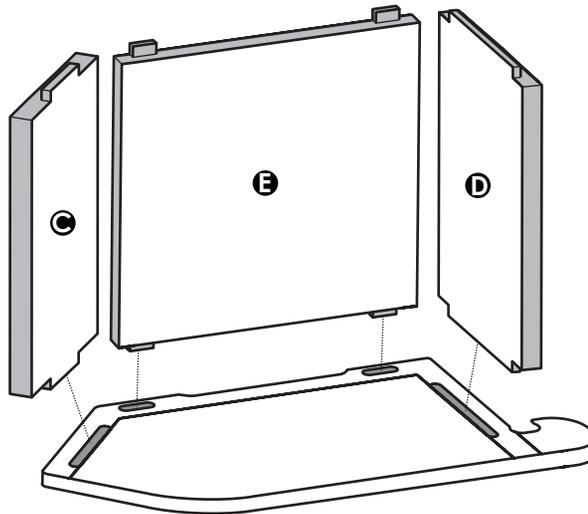


- 3** Repeat Step 1 with Left Side **A**.

- 4** Carefully insert Left Side **A** over tabs on the three panels. Start at one end, and work your way across.

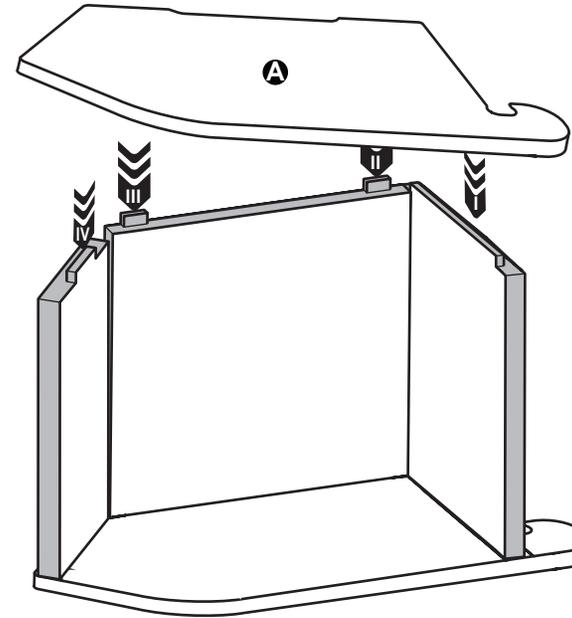


- 5** Push sides and panels firmly together so that there are **no gaps**. Then promptly clean off any excess glue with a damp rag.

- 6** Set bin on side, put a heavy book on top, and let the glue dry for 30 minutes

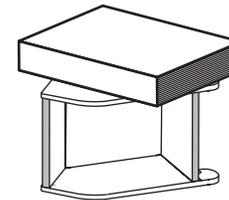

- 7** Position the bin in the slotboard as desired.

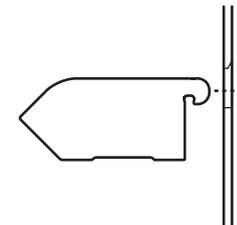

sprout

Simple. Modern. American Made.

MakerWall Storage Bin

! Adult assembly only

! Assemble completely before use

STOP Frustrated? Need Help?

Talk to our customer service agent at:
+1 (833) 530-0033