

PARTS

1


2

3

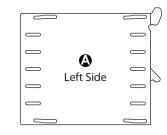

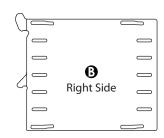










Insert Top Shelf into slots on Left Side A, with the handhold facing inward. Note that the handhold can be oriented toward the front or back.

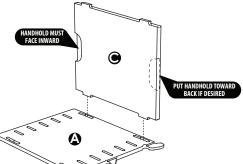


Tighten shelf **Slightly**, just enough to allow the shelf to stand up without tipping over.

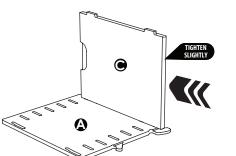


Repeat Steps 1 & 2 with the Bottom Shelf (), making sure that the handhold is facing inward.

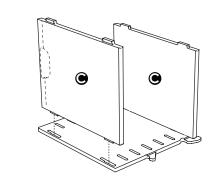


Set the desired number of Dividers **()** into slots on Left Side **(A)**. Note that the handhold can be oriented toward the front or back.

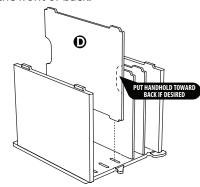

Carefully fit slots on Right Side ³ over tabs on Shelves
and Dividers ¹, going left to right, as shown. You must loosen the Top / Bottom shelves ⁶ for all the slots to line up.

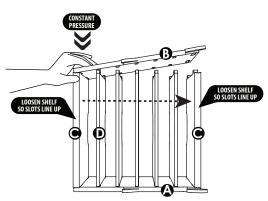

Holding the sides together, carefully pick up the unit and set on its front, in the orientation shown. Press shelves lown until flush with back edge to tighten.

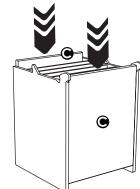

KSprout

Simple. Modern. American Made.


Paper Storage Shelf

- Adult assembly only
- Assemble completely before use




Talk to our customer service agent at: +1 (833) 530-0033

| 7 | Position on the |
|---|-----------------------|
| | slotboard as desired. |

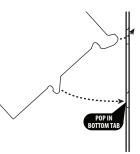

To remove from slotboard, pull up firmly to pop out bottom tab.



DOCUMENT: AI-MKA-PAPERST

6