





Simple. Modern. American Made.

MakerWall Slotboard Installation

Into Drywall & Lumber Framing

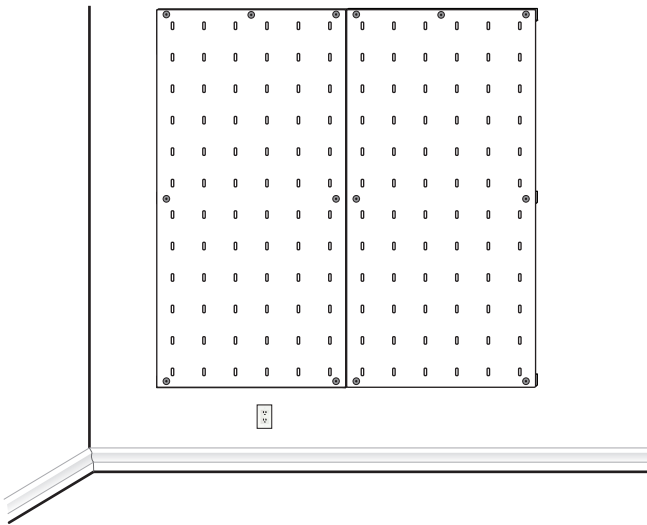

Adult installation only
2 Adults recommended for installation
Install completely before use

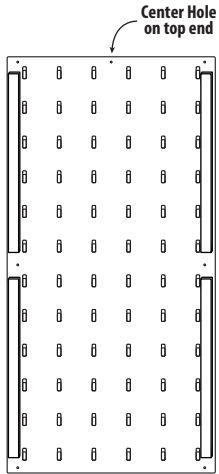


Slotboard(s)
with attached vertical battens

PARTS



3.5in Construction Screws

Black Screws

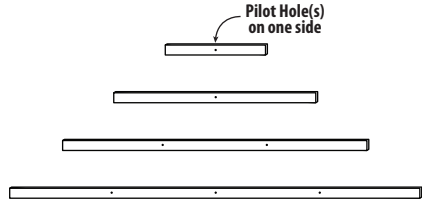

Horizontal Battens
various lengths possible.
order will be shipped with longer
battens if applicable to setup

PROVIDED TOOLS



T25 Torx Driver
for 3.5in Construction
Screws

4mm Hex Driver
for Black Screws

4mm Hex Key
for Black Screws


3/16 Drill Bit
Studfinding Aid

Pin Nail
Studfinding Aid

Mini Level
Installation Aid

HELPFUL TOOLS

(not included)



Studfinder

for identifying location of wall studs
to ensure secure mounting

NEEDED TOOLS



Drillgun
for installing construction
& black screws



Tape Measure
for measuring & positioning



Pencil
for marking



Frustrated?
Need Help?

Talk to our customer service agent at:

+1 (833) 530-0033

Or email us at:

support@sprout-kids.com


Watch our installation video at:

sprout-kids.com/collections/makerwall

ASSEMBLY INSTRUCTIONS

1


Following the steps indicated, line up the slotboard(s) on the ground in front of the installation location to determine positioning of slotboard(s) on wall.

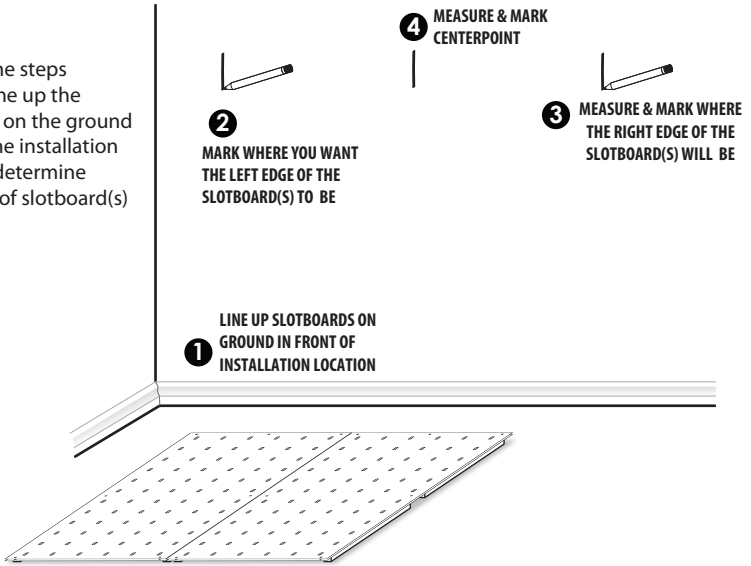

2

Find & Mark the locations of the studs between your Left & Right Boundaries using a Studfinder **A**.

If you don't have a studfinder **B**, follow **suggestions 1-4**.

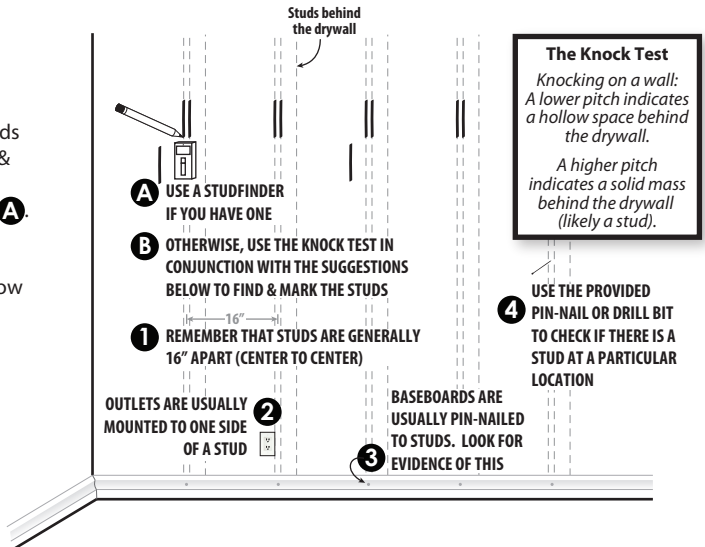


3

Make sure that there are **2 Studs** for every horizontal batten that is at least 28" wide.

If more studs are available, we recommend putting a screw in each one.


If there is only 1 Stud, you will need to adjust the positioning of your slotboard so that they can be mounted to **at least 2 Studs**.

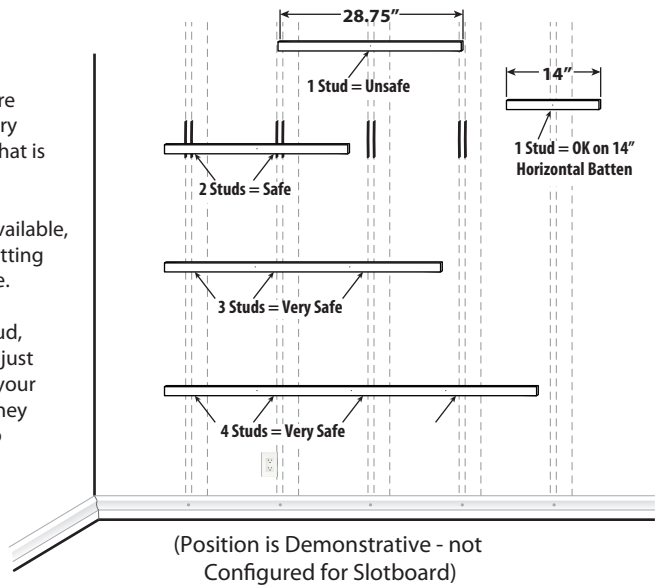

4


With the help of another adult, place the first slotboard up on the wall, and determine how high you want it to be (**Height A**).

Then mark that height directly above your center mark

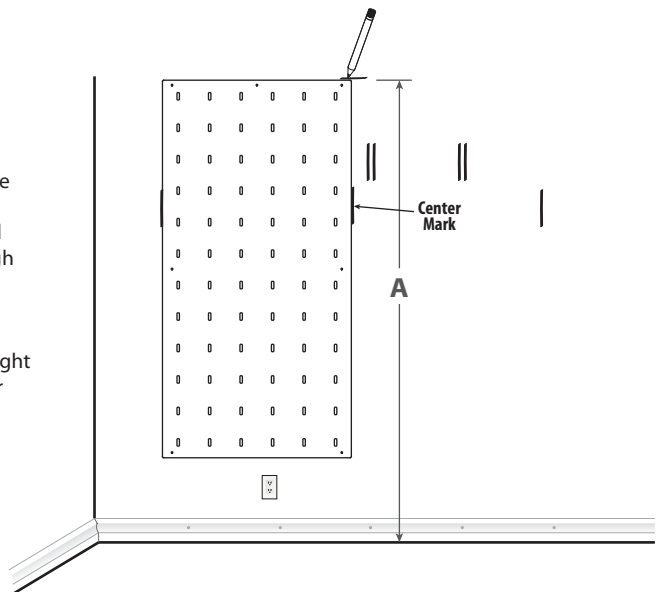


5

Set the slotboard aside, and prepare the highest batten, as shown.

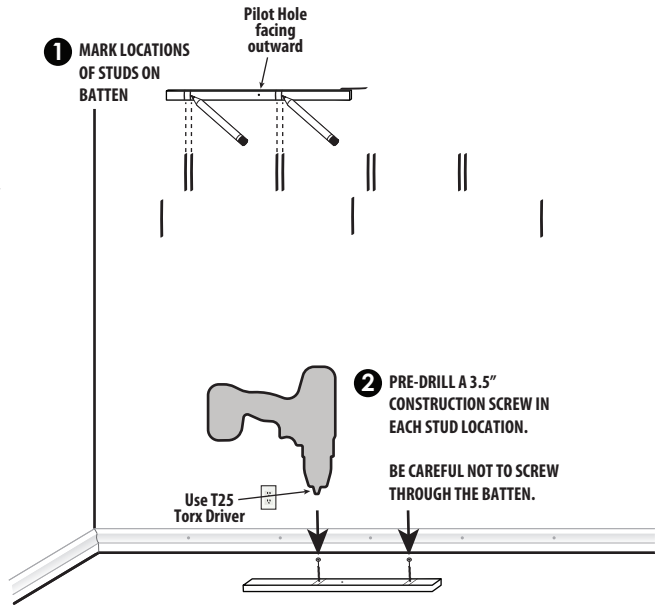

6

Screw the batten into the studs, as shown.

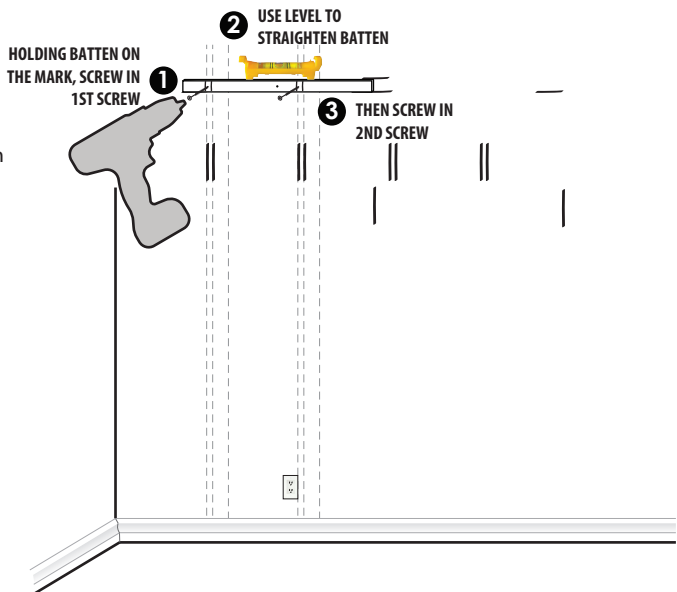


7

Repeat Steps 5 & 6 with the lower battens.

Attach the battens to wall at Heights **B** & **C** per the table, measuring **top to top**.


Ensure they are lined up horizontally with the highest batten.

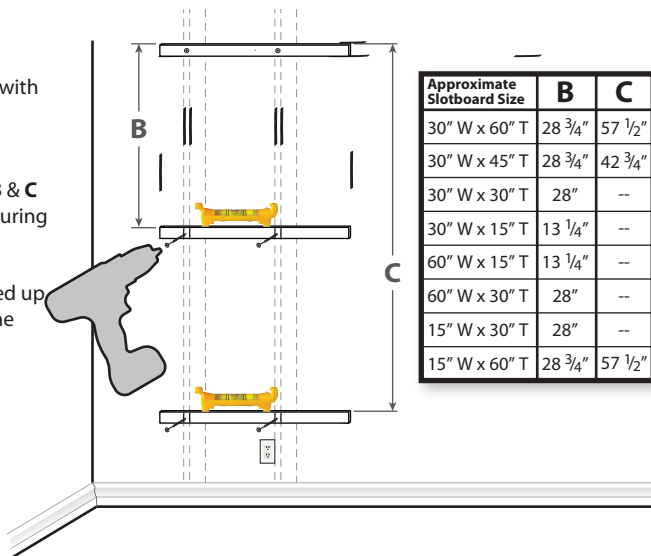

8


With the help of another adult, position the slotboard up against the wall.

With the **top center hole** on the slotboard positioned over the **pilot hole** on the highest batten, screw in a Black Screw.

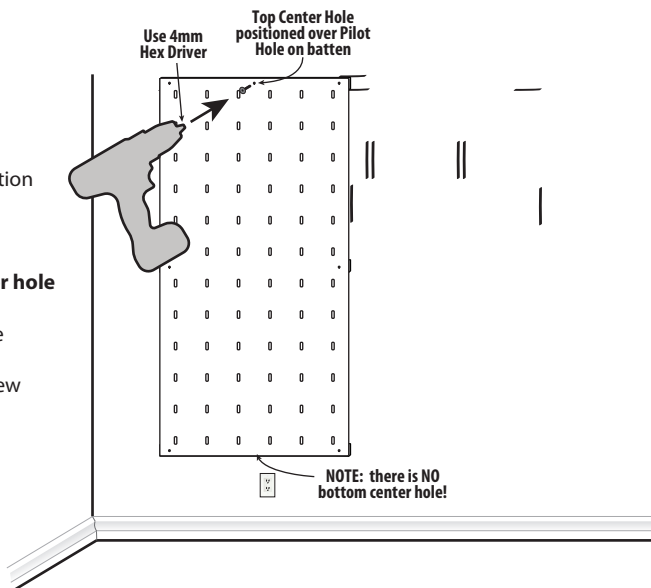

9


Using the provided mini-level to ensure your slotboard is level, fasten the slotboard to the bottom batten using a black screw in the bottom-right corner.

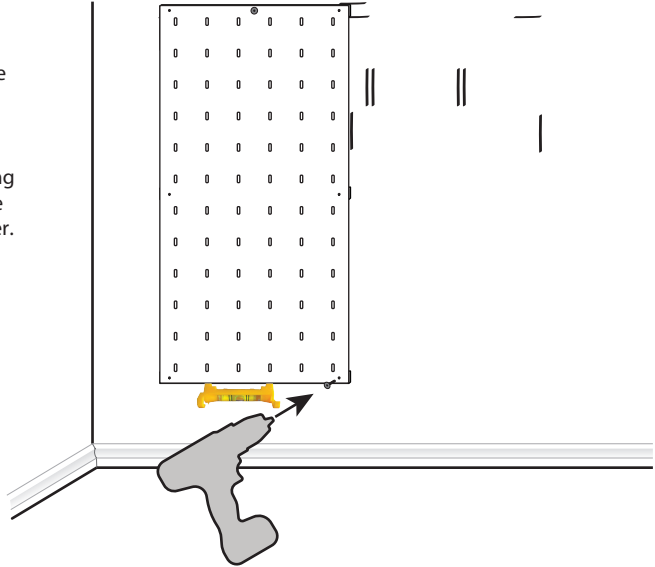

10

Check positioning of the slotboard. If it is correct, then install remaining screws.


If it is wrong, remove bottom-right screw and try again with bottom-left hole.

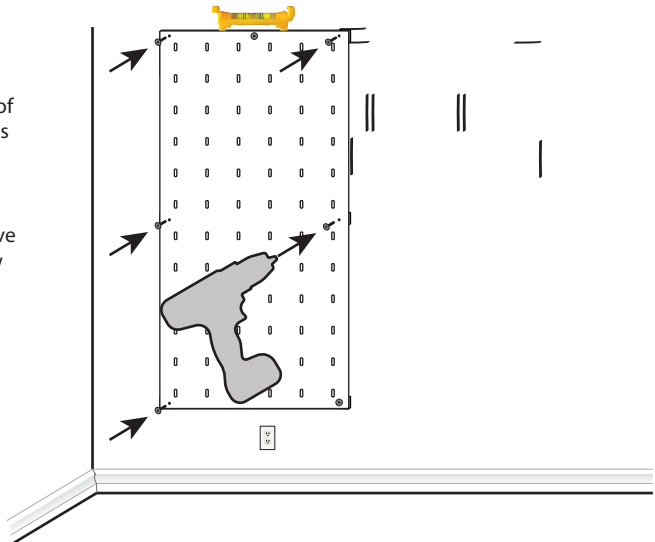


11

If you are placing another slotboard adjacent to the existing one using **new battens**, align the new battens flush with the installed ones. Confirm that the new battens are both **level and positioned at the same height** as the initial battens before marking the wall. Shift the new battens **3/8" away from the edge of the installed slotboard**, then proceed to install them by replicating Steps 6-7.

If you are placing another slotboard next to your existing slotboard using the **same battens** as already installed (battens are wider than the current installed slotboard), then skip to step 12.

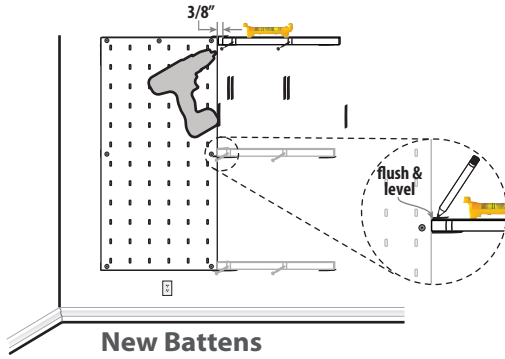

New Battens

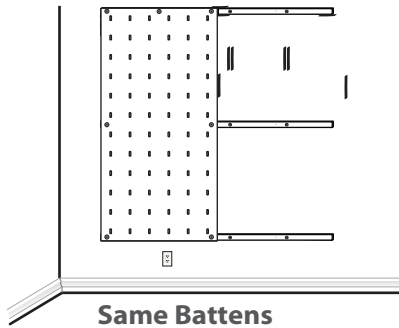

Same Battens


12

With the help of another adult, position the next slotboard **perfectly flush and aligned** with its neighbor.

Install 1 Black Screw in **top-center hole**, and check alignment.

If alignment is off, then remove the 1 Black Screw and try again in a different hole.

After successfully installing the first Black Screw, install remaining black screws.

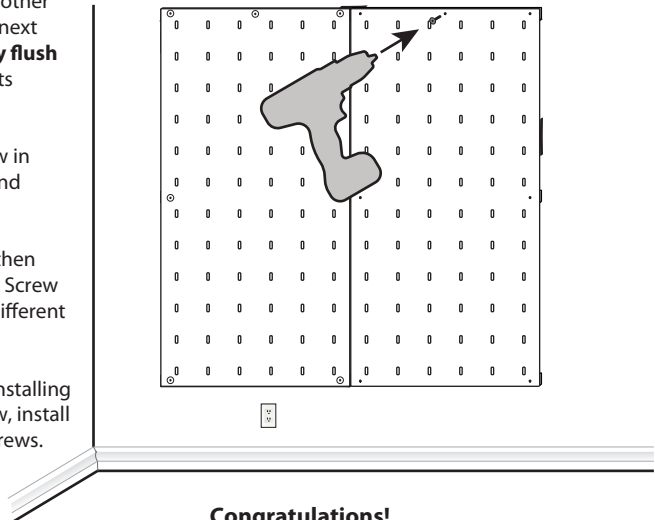

Congratulations!
You have successfully installed
your MakerWall Slotboard!