




Parts

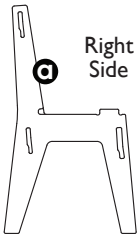


Right Side

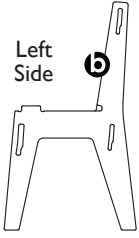


Left Side




Brace

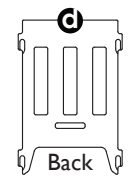

Back



Seat

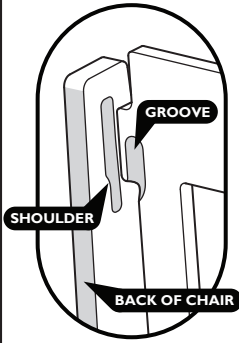


GROOVE

SHOULDER


BACK OF CHAIR




Ensure the groove is always facing toward the shoulder during assembly.

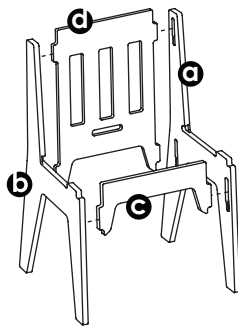


1 Put tabs on **d** & **c** into slots on sides **a** & **b**.

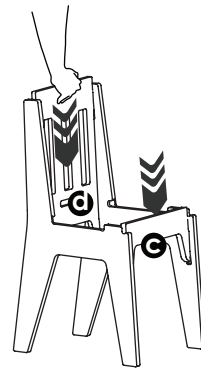


2 Push down **d** & **c** until tight.

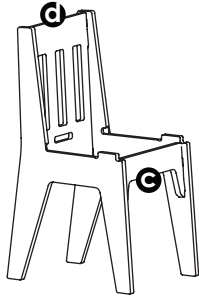


2* Note that **d** & **c** won't tighten properly if the grooves aren't facing the shoulder

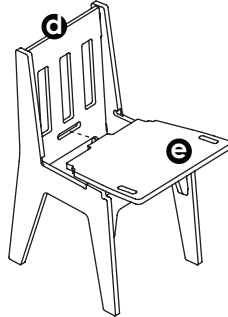

3 Slide tab on **e** into slot on **d**.

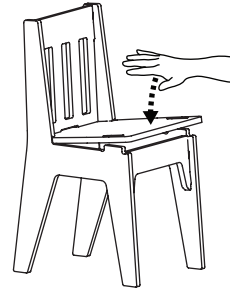

4 Firmly pop chair seat down over front tabs.

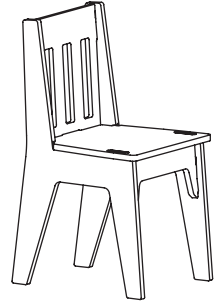

! Adult assembly only
! Assemble completely before use
Weight capacity 150 lbs



Simple. Modern. American Made.




STOP Frustrated? Need Help?


Talk to our customer service agent at: +1 (833) 530-0033

Or email us at: support@sprout-kids.com
Watch our assembly video at: sprout-kids.com/pbja


Parts

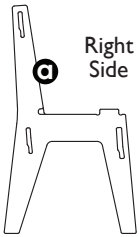


Right Side

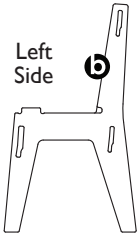


Left Side




Brace

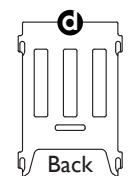

Back



Seat

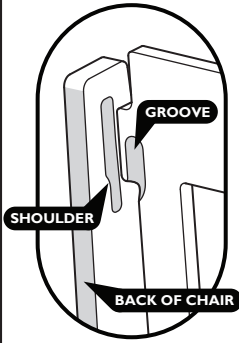


GROOVE

SHOULDER


BACK OF CHAIR




Ensure the groove is always facing toward the shoulder during assembly.

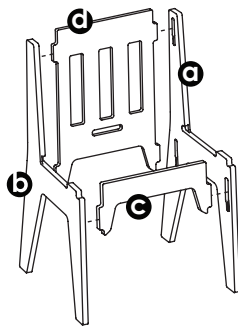


1 Put tabs on **d** & **c** into slots on sides **a** & **b**.

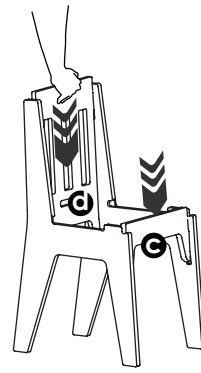


2 Push down **d** & **c** until tight.

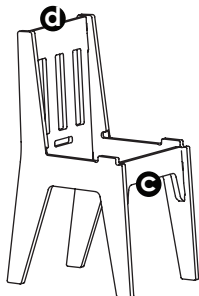

2* Note that **d** & **c** won't tighten properly if the grooves aren't facing the shoulder

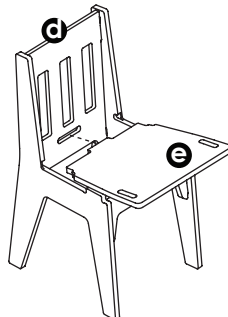

3 Slide tab on **e** into slot on **d**.

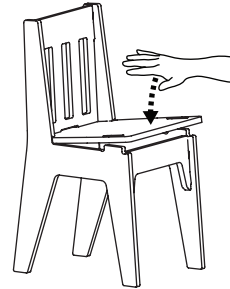

4 Firmly pop chair seat down over front tabs.



! Adult assembly only
! Assemble completely before use
Weight capacity 150 lbs



Simple. Modern. American Made.



Need Help?

Watch our Assembly Video at sprout-kids.com/pbja
Or talk to our customer service agent at: +1 (833) 530-0033