





SOSTA BED
1/3 Rail
ASSEMBLY GUIDE

PARTS

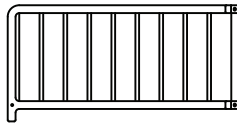

A

1/3 Side Rail



(2x)

B

1.6" Hex Screw



(1x)

C

2" Hex Screw

INCLUDED TOOLS



4mm Hex
Wrench



Hex
Bit

OPTIONAL




Power
Drill

ASSEMBLY VIDEO ▶

Enjoy the best assembly experience
sprout-kids.com/1-3rail



- 1** If using a drill, set clutch on drill to **LOW SETTING** (around 3).
If your drill has two speeds, set it to the **SLOW SPEED** (1).

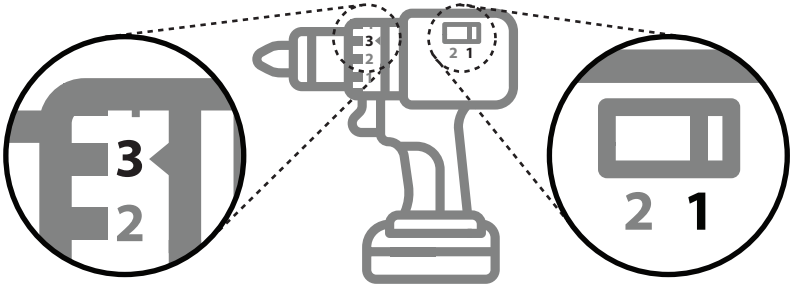


A high clutch setting will strip screw heads and render parts useless!



CLUTCH TOO HIGH: If the drill twists dramatically in your hand when drilling. Lower the clutch setting.

CLUTCH TOO LOW: If the screw does not screw in all the way. Adjust clutch up by 1 setting and try again.

- 2** Align the holes of the 1/3 Side Rail **A** with the holes in the Headboard/Footboard and Platform.

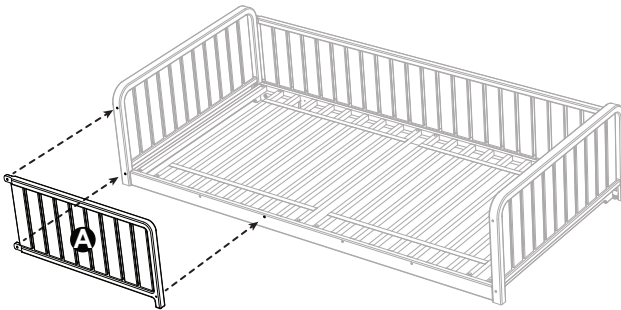


- 3** Partially screw (2x) **1.6"** Hex Screws **B** through the side holes of the 1/3 Side Rail **A** and into the side holes of the Headboard/Footboard.

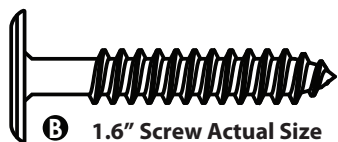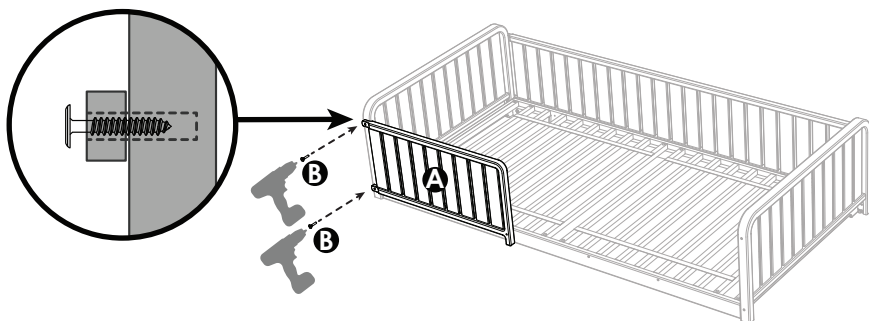

B 1.6" Screw Actual Size

Place screw on paper to verify correct size.


- 4** Partially screw the **2"** Hex Screw **C** through the bottom hole of the 1/3 Side Rail **A** and into the hole of the Platform.

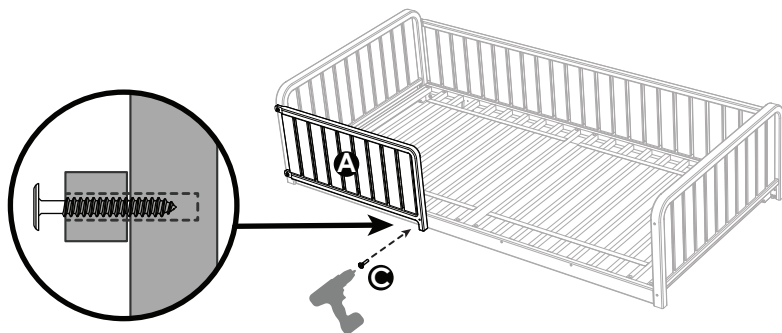

C 2" Screw Actual Size

Place screw on paper to verify correct size.

5 Fully screw in each of the Hex Screws.

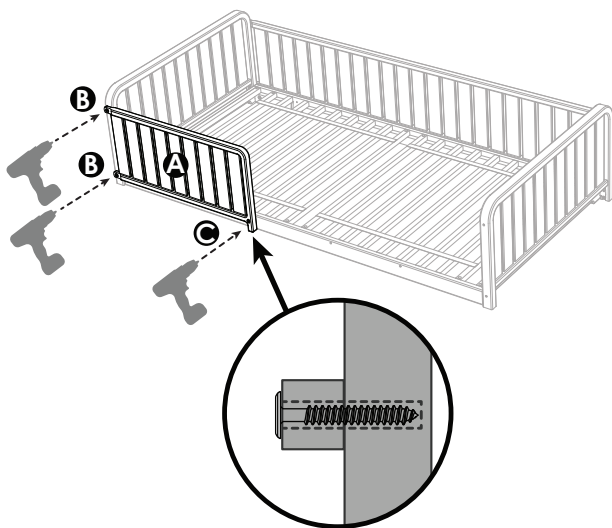

6 If you purchased a second 1/3 rail, repeat steps 1-5 to attach it in your desired configuration.



7 For Safety Regulations and Standards:
sprout-kids.com/sosta/safety



If you have questions, reach out to support@sprout-kids.com