





SOSTA BED  
**3/4 Rail**  
ASSEMBLY GUIDE

**PARTS**

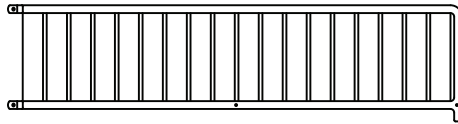

**A**

3/4 Side Rail



(2x)

**B**

1.6" Hex Screw



(2x)

**C**

2" Hex Screw

**INCLUDED TOOLS**



4mm Hex  
Wrench



Hex  
Bit

**OPTIONAL**




Power  
Drill

**ASSEMBLY VIDEO** ▶

Enjoy the best assembly experience  
[sprout-kids.com/3-4rail](http://sprout-kids.com/3-4rail)



- 1** If using a drill, set clutch on drill to **LOW SETTING** (around 3).  
If your drill has two speeds, set it to the **SLOW SPEED** (1).

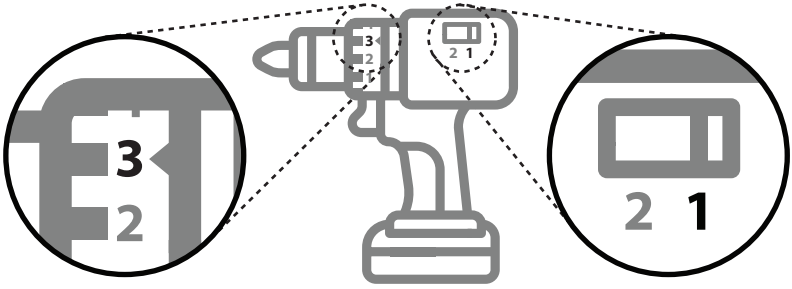

**A high clutch setting will strip screw heads and render parts useless!**


**CLUTCH TOO HIGH:** If the drill twists dramatically in your hand when drilling. Lower the clutch setting.

**CLUTCH TOO LOW:** If the screw does not screw in all the way. Adjust clutch up by 1 setting and try again.

- 2** Align the holes of the 3/4 Side Rail **A** with the holes in the Headboard/Footboard and Platform.




- 3** Partially screw (2x) 1.6" Hex Screws **B** through the side holes of the 3/4 Side Rail **A** and into the side holes of the Headboard/Footboard.

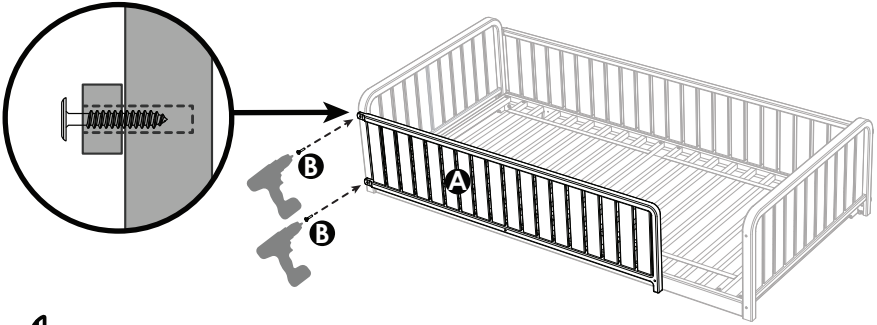

**B** 1.6" Screw Actual Size

Place screw on paper to verify correct size.


- 4** Partially screw (2x) 2" Hex Screws **C** through the bottom holes of the 3/4 Side Rail **A** and into the holes of the Platform.

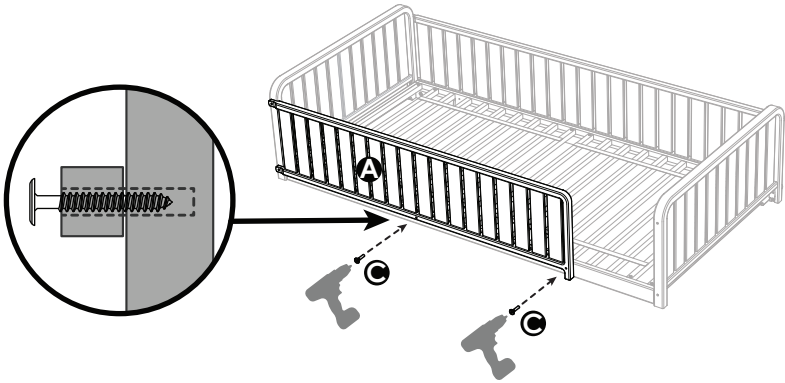

**C** 2" Screw Actual Size

Place screw on paper to verify correct size.

**5** Fully screw in each of the Hex Screws.

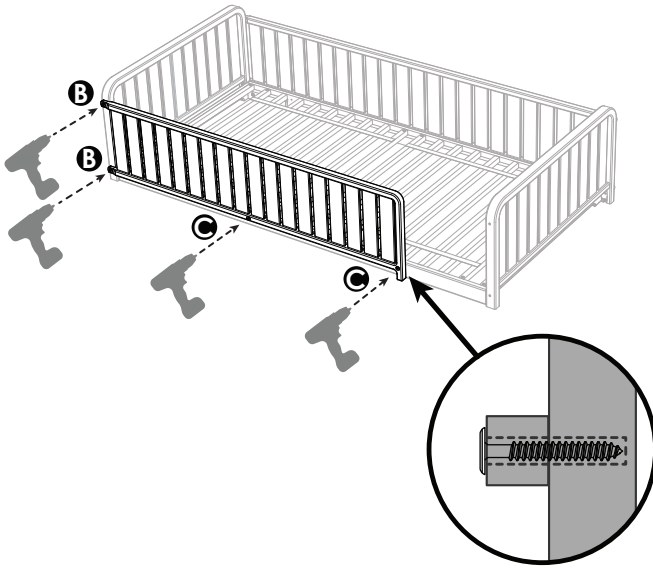

**6** For Safety Regulations and Standards:  
[sprout-kids.com/sosta/safety](http://sprout-kids.com/sosta/safety)



If you have questions, reach out to [support@sprout-kids.com](mailto:support@sprout-kids.com)