





SOSTA BED
FULL RAIL
ASSEMBLY GUIDE

PARTS



A

Full Side Rail



1.6" Hex Screw



2" Hex Screw

INCLUDED TOOLS



4mm Hex
Wrench



Hex
Bit

OPTIONAL




Power
Drill

ASSEMBLY VIDEO ▶

Enjoy the best assembly experience
sprout-kids.com/fullrail



- 1** If using a drill, set clutch on drill to **LOW SETTING** (around 3).
If your drill has two speeds, set it to the **SLOW SPEED** (1).

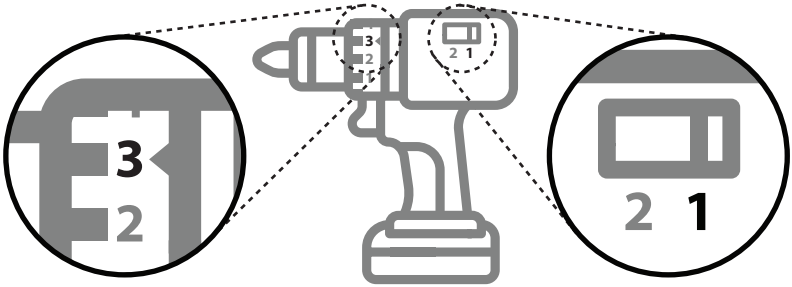


A high clutch setting will strip screw heads and render parts useless!


CLUTCH TOO HIGH: If the drill twists dramatically in your hand when drilling. Lower the clutch setting.

CLUTCH TOO LOW: If the screw does not screw in all the way. Adjust clutch up by 1 setting and try again.


- 2** Align the holes of the Full Side Rail **A** with the holes in the Headboard & Footboard.

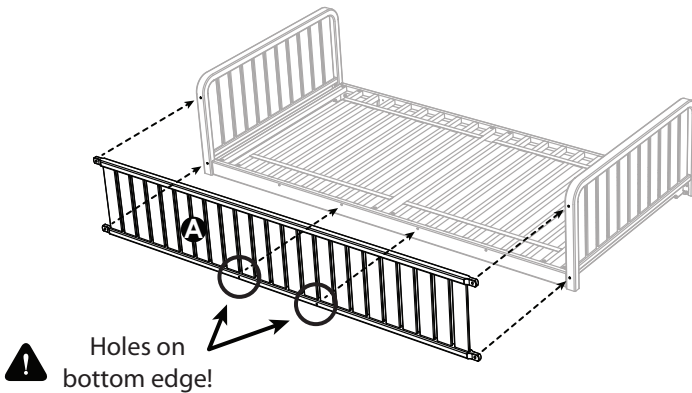


- 3** Partially screw (2x) 1.6" Hex Screws **B** through the **top** holes of the Full Side Rail **A** and into the **top** holes of the Headboard and Footboard.

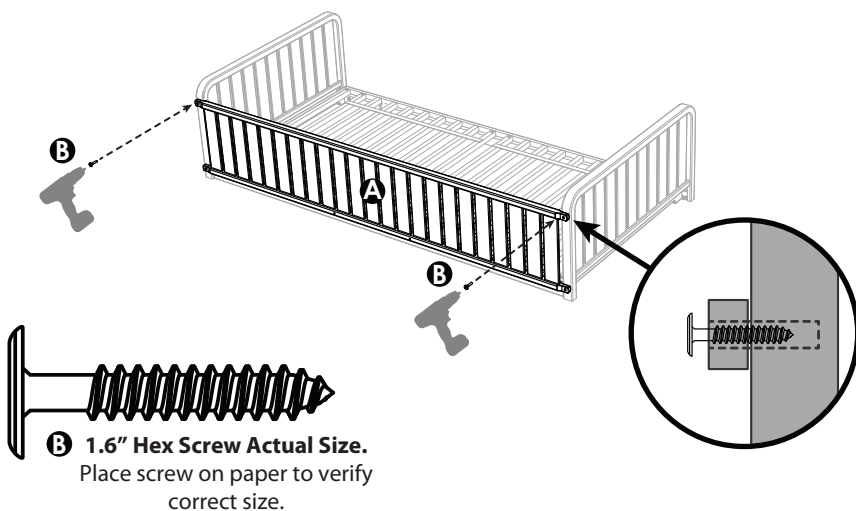


- 4** Partially screw (2x) 1.6" Hex Screws **B** through the **bottom** holes of the Full Side Rail **A** and into the **bottom** holes of the Headboard and Footboard.

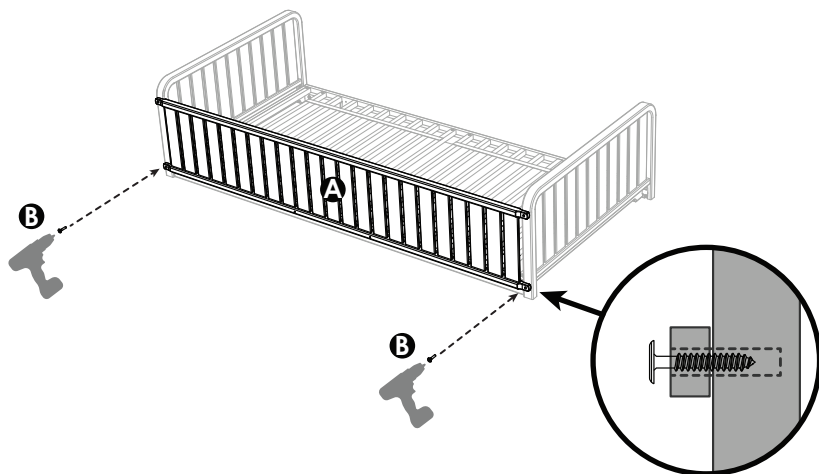

5 Fully screw in each of the (4x) 1.6" Hex Screws.

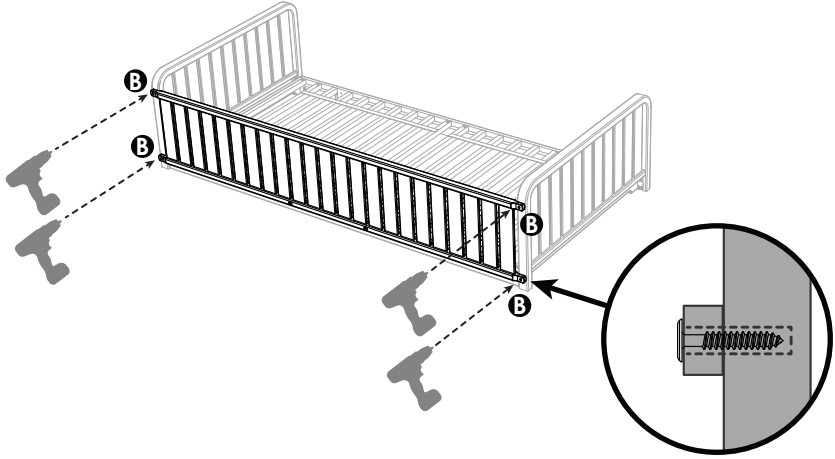

6 Screw the (2x) 2" Hex Screws **C** into the center holes of the Full Side Rail **A**.

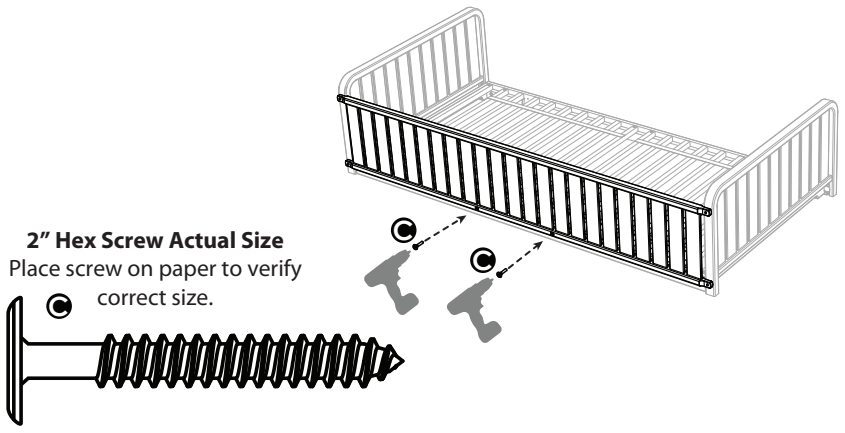

7 For Safety Regulations and Standards:
sprout-kids.com/sosta/safety



If you have questions, reach out to support@sprout-kids.com