





SOSTA BED  
**FULL RAIL**  
ASSEMBLY GUIDE

**PARTS**




**A**

Full Side Rail



**B**

1.6" Hex Screw



**C**

2" Hex Screw

**INCLUDED TOOLS**



4mm Hex  
Wrench




Hex  
Bit

**OPTIONAL**



Power  
Drill

- 1** If using a drill, set clutch on drill to **LOW SETTING** (around 3).  
If your drill has two speeds, set it to the **SLOW SPEED** (1).

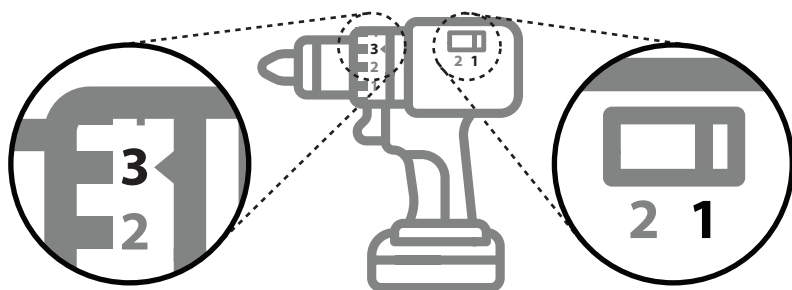


**A high clutch setting will strip screw heads and render parts useless!**


**CLUTCH TOO HIGH:** If the drill twists dramatically in your hand when drilling. Lower the clutch setting.

**CLUTCH TOO LOW:** If the screw does not screw in all the way. Adjust clutch up by 1 setting and try again.


- 2** Align the holes of the Full Side Rail **A** with the holes in the Headboard & Footboard.

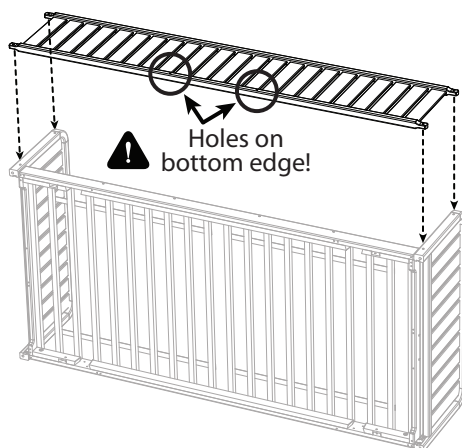


- 3** Screw the (2x) **2"** Hex Screws **C** into the center holes of the Full Side Rail **A**.

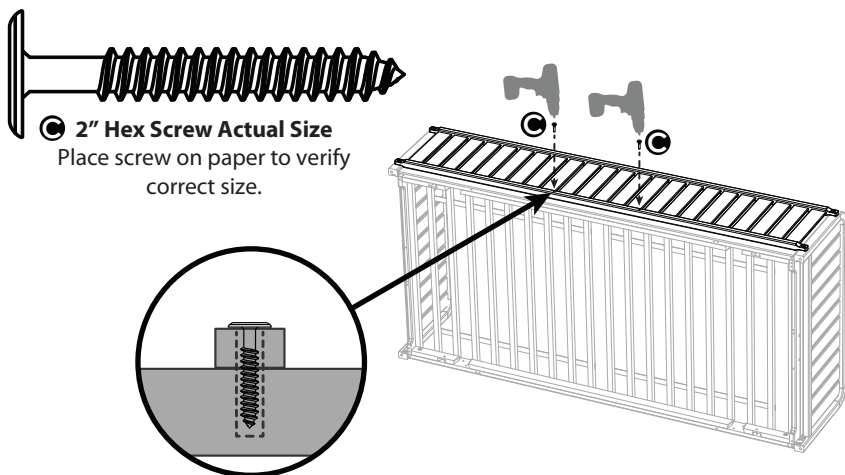


- 4** **Partially** screw (2x) **1.6"** Hex Screws **B** through the **top** holes of the Full Side Rail **A** and into the **top** holes of the Headboard and Footboard.

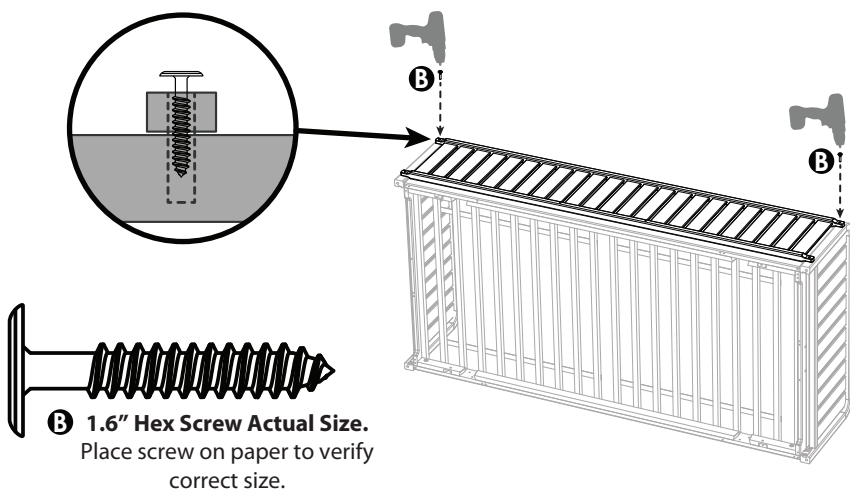

- 5** Partially screw (2x) **1.6"** Hex Screws **B** through the **bottom** holes of the Full Side Rail **A** and into the **bottom** holes of the Headboard and Footboard.

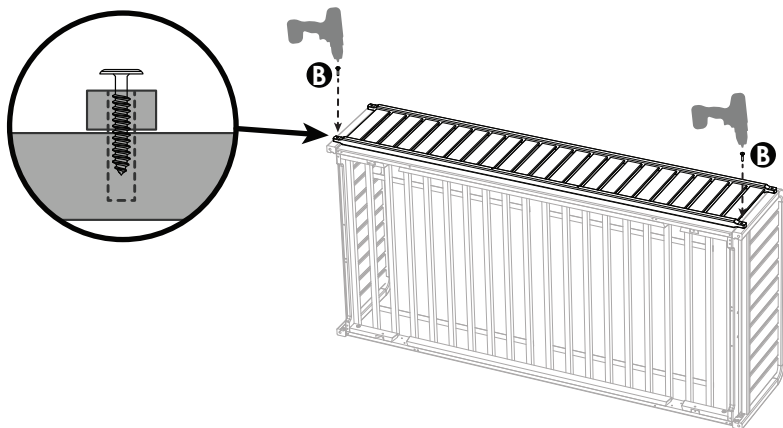

- 6** Fully screw in each of the (4x) **1.6"** Hex Screws.

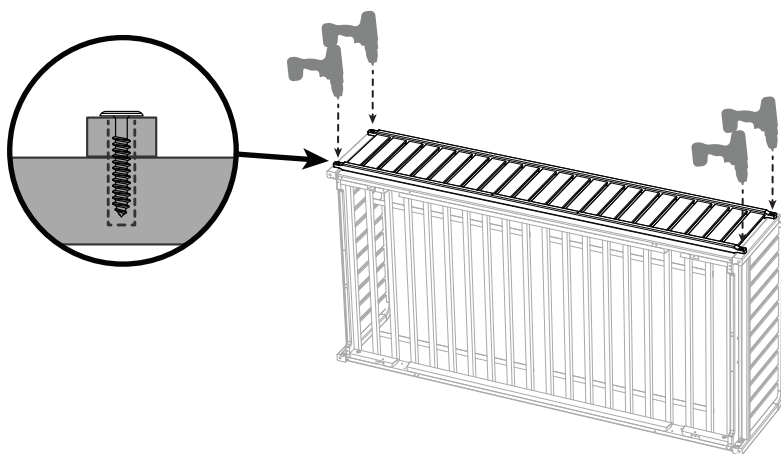

- 7** For Safety Regulations and Standards:  
[sprout-kids.com/fb/safety](https://sprout-kids.com/fb/safety)



If you have questions, reach out to [support@sprout-kids.com](mailto:support@sprout-kids.com)