



SOSTA BED  
**PLATFORM & LEGS**  
ASSEMBLY GUIDE

**PARTS**


**Included with Platform**

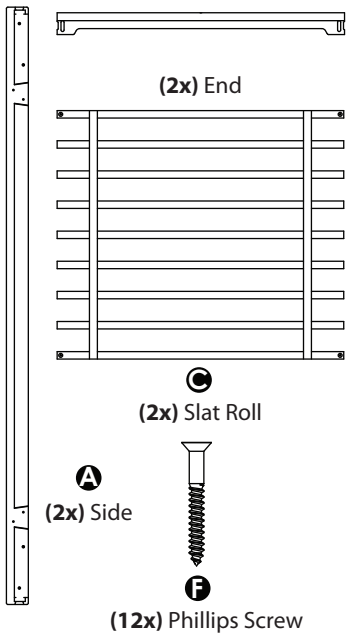


**Included with Full-size**

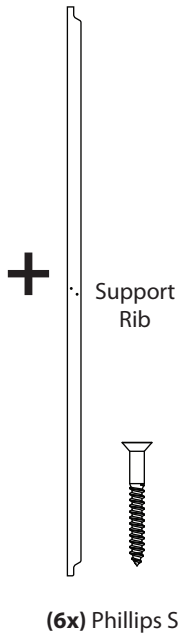

**Included with Leg Purchase**

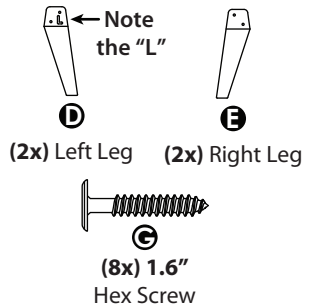

**Included with Full-size Leg Purchase**

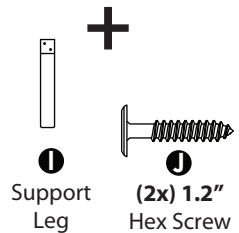

**INCLUDED TOOLS**



OR





## ASSEMBLY VIDEO ►

Enjoy the best assembly experience  
[sprout-kids.com/sosta/assembly](https://sprout-kids.com/sosta/assembly)

Twin




Full



- 1 If using a drill, set clutch on drill to **LOW SETTING** (around 3).

If your drill has two speeds, set it to the **SLOW SPEED** (1).

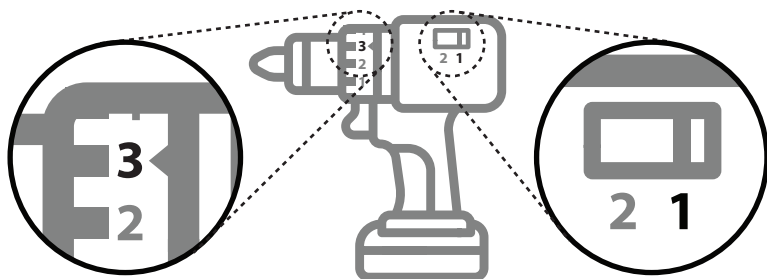


**A high clutch setting will strip screw heads and render parts useless!**


**CLUTCH TOO HIGH:** If the drill twists dramatically in your hand when drilling. Lower the clutch setting.

**CLUTCH TOO LOW:** If the screw does not screw in all the way. Adjust clutch up by 1 setting and try again.


- 2 Lay out (2x) Sides **A** and (2x) Ends **B** as shown.

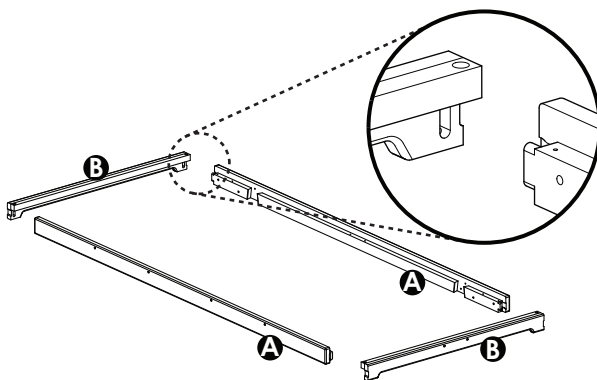


- 3** Starting with one End **B**, fully insert tabs of Sides **A** into slots on Ends **B** until **flush**. Repeat with other End **B**.

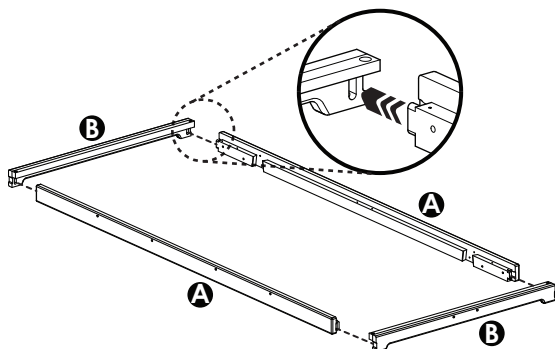

OPTIONAL: A rubber mallet can help push pieces together. A hammer can also be used with a scrap piece of wood or a cutting board placed over the surface being hammered for protection.

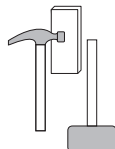

- 4** Screw a Phillips Screw **F** into corner of End **B** and Side **A**. Repeat with each corner.

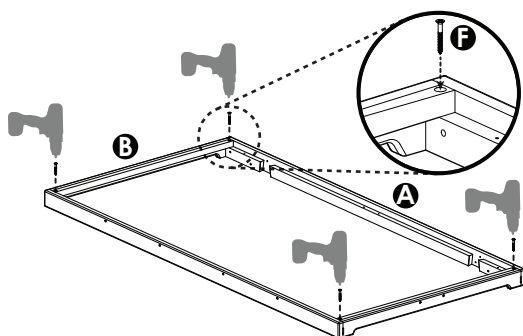


## ADDING LEGS




If you didn't purchase legs, proceed to **10**.


- 5** Flip frame onto its side.

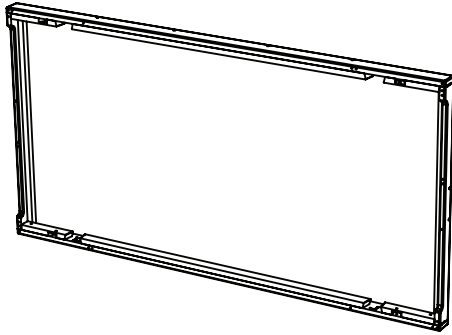


- 6** Slide Left Leg **D** and Right Leg **E** into the left & right sides of Siderail **A**.

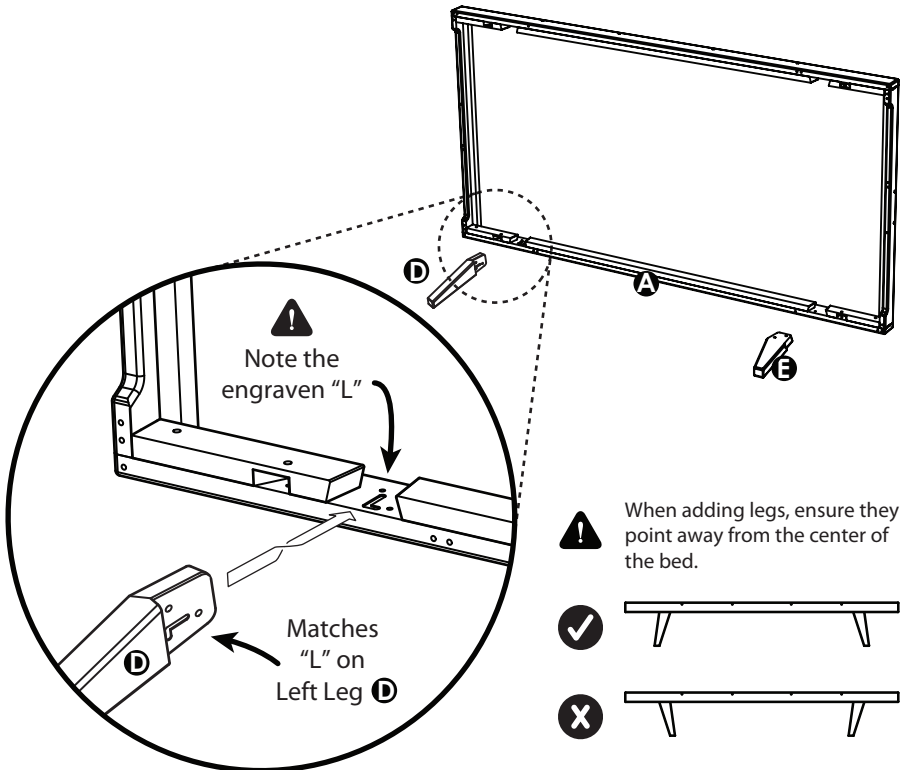


- 7** Screw the (4x) **1.6"** Hex Screws **C** into the Legs until tight. Be careful to use the appropriate clutch setting per Step 1.

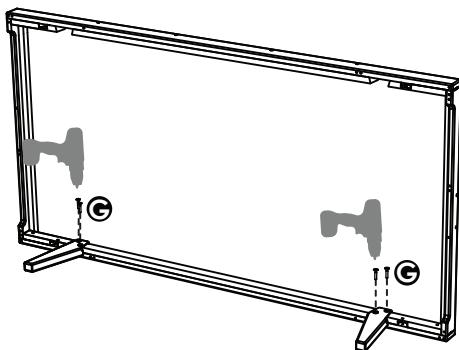

- 8** Flip the frame around, and repeat Steps 6-7 with the other (2) Legs.

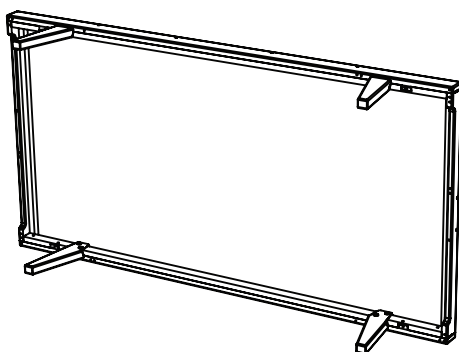

- 9** Set frame upright.

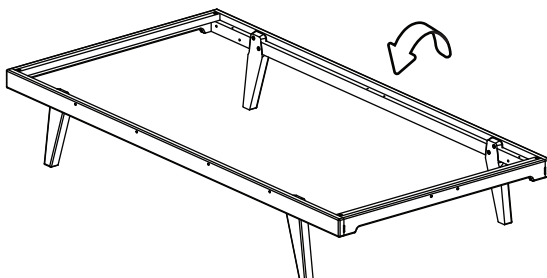


## ADDING RIB & SUPPORT LEG




If you purchased a twin bed, skip to **11**.

- 10** Line up the hole on each end of the Support Rib **H** with the hole in the center of each End **B**. Screw through the top of each End **B** and into the Support Rib **H** using a Phillips Screw **F** for each end.

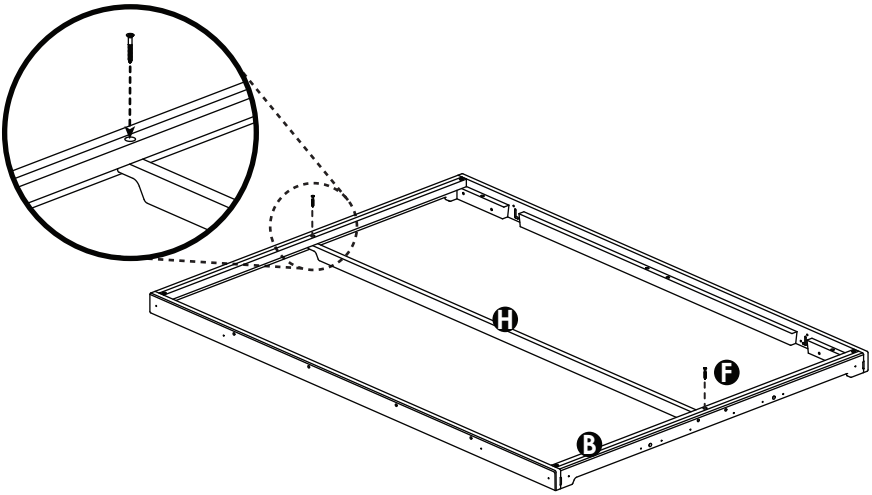


### If You Purchased Legs:

Using the (2x) smaller Hex Screws **I**, attach the Support Leg **H** to the pre-drilled holes in the middle of the Support Rib **H**.

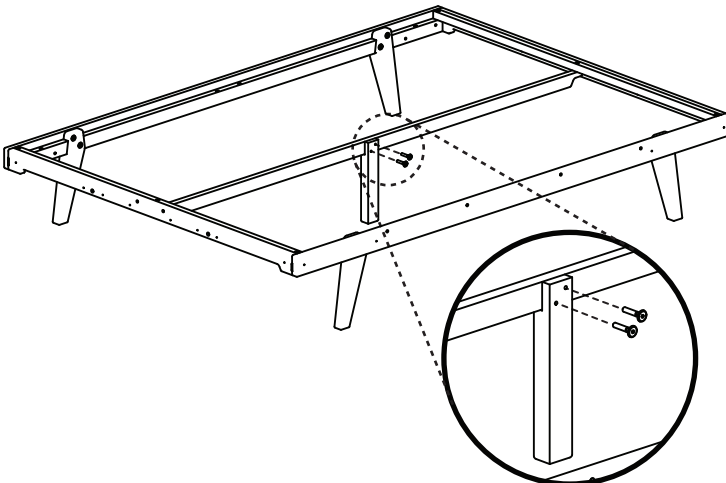


## ADDING SLAT ROLLS

- 11** With webbing face up, align the Slat Roll **C** holes with the Holes in Side **A** as you lay one of the Slat Rolls **C** onto one half of the bed frame.

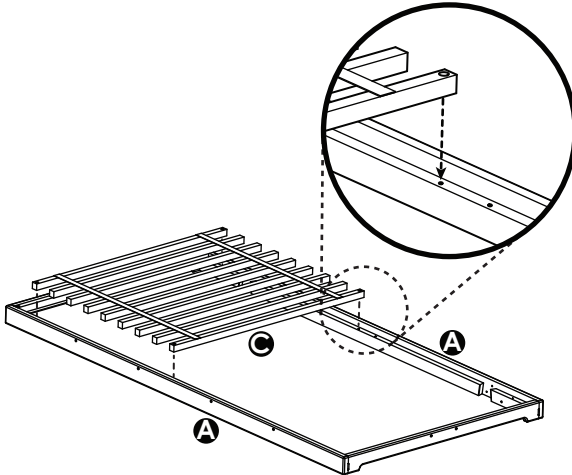


- 12** Insert the tips of (2x) Phillips Screws **F** through the Slat Roll **C** holes and vertically into the holes of Side **A**.

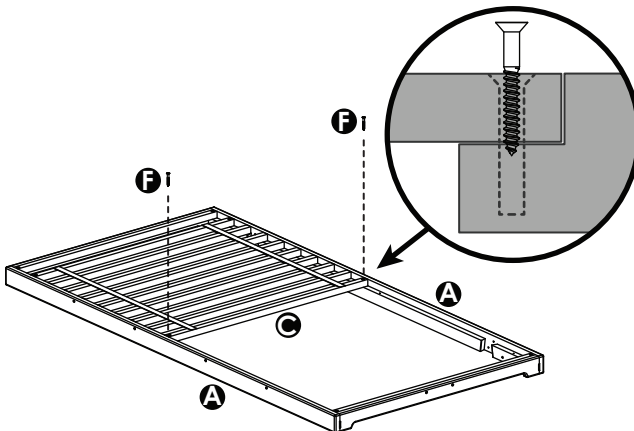





- 13** Screw the (2x) Phillips Screws **F** into the holes on the side of the Slat Roll **C** near the middle of the bed.

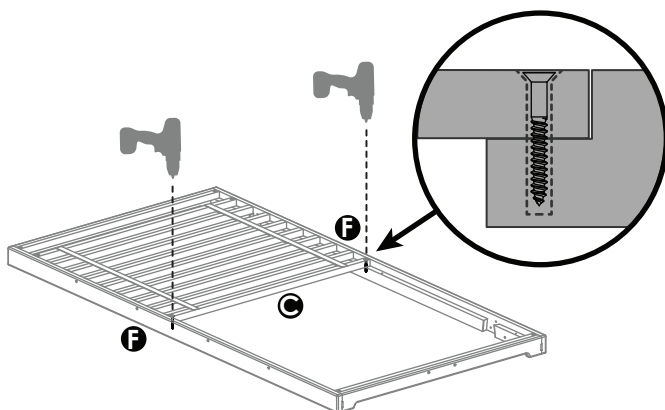

- 14** Set the tips of the additional (2x) Phillips Screws **F** through the other Slat Roll **C** holes and screw them into the holes of Side **A**.

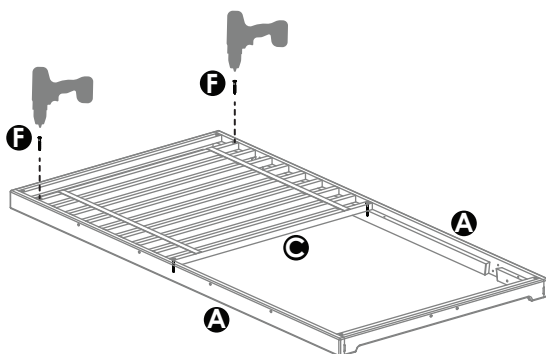

- 15** Repeat steps 11-14 to attach remaining Slat Roll **C**.

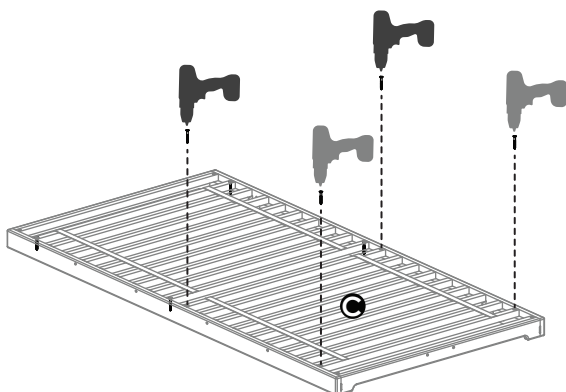


### FULL-SIZE SLAT ROLLS




If you purchased a twin bed, skip to **17**.

- 16** After completing steps 11-15, screw (4x) Phillip Screws **F** into the remaining holes along the middle of the Slat Rolls **C**.

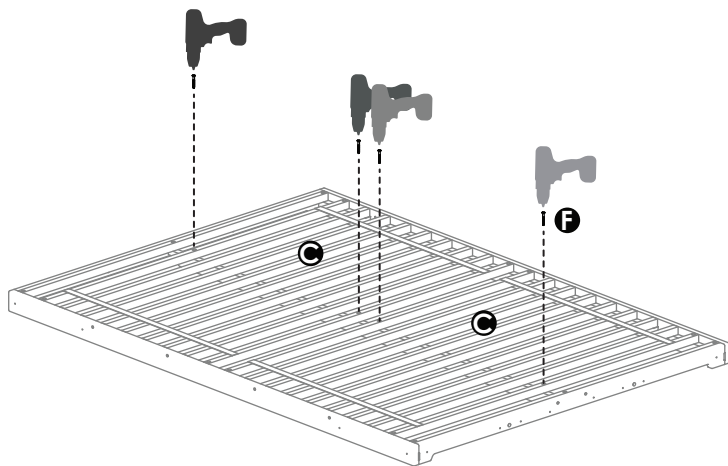



**AVOID ENTRAPMENT, which can cause serious injury or death, by placing bed more than 12" away from any wall. Those under the age of 3 may be at greater risk.**

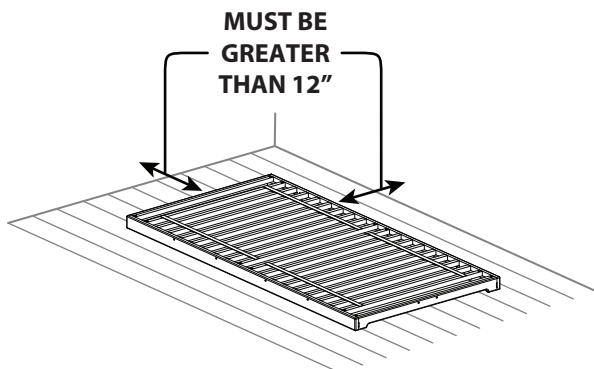

**17**

For additional Safety Regulations and Standards:  
[sprout-kids.com/fb/safety](https://sprout-kids.com/fb/safety)



If you have questions, reach out to [support@sprout-kids.com](mailto:support@sprout-kids.com)

