



- 1** Thread the short screw through the long slot on the bracket into the two pilot holes underneath the top shelf

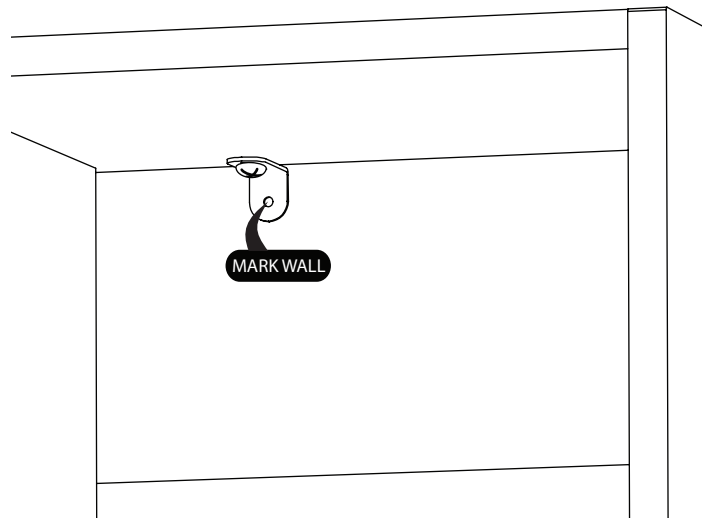


- 2** Push the bracket flush against the wall, and mark the wall through the hole. Do this with both brackets.

*Note: to use the Wallclaw Drywall Anchor, this mark will need to be on drywall without a stud directly behind it.*

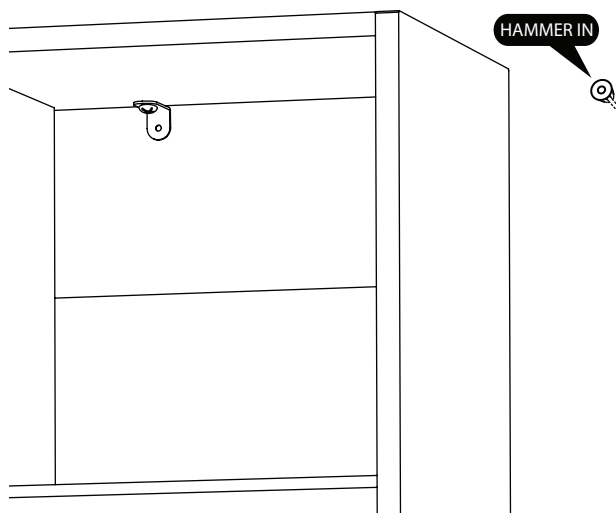

- 3** Move the brackets and shelf out of the way, then use a hammer to pound the Wallclaw Drywall Anchor into the wall at the two marked points.

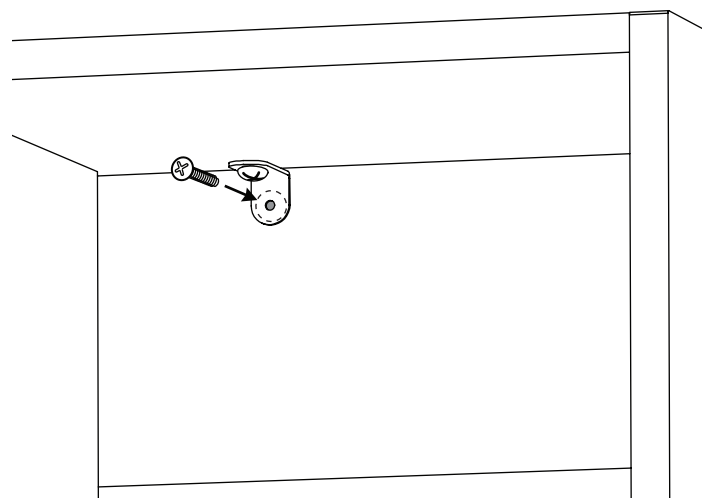

- 4** Move the shelf back against the wall, position the brackets against the Wallclaw Drywall Anchors, then screw in the Wallclaw Screw until tight.



Simple. Modern. American Made.


## Need Help?

Talk to our  
customer service agent at:  
**+1 (833) 530-0033**


**⚠** Do not allow children to climb up shelves at any time.

## Cubby Wall Anchor Instructions


### Parts

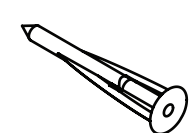

Wallclaw  
Drywall Anchor  
(2x)



Bracket  
(2x)



Wallclaw Screw  
(2x)



Short screws  
(2x)