

## **PARTS**





D-Ring












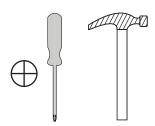


## **BEFORE YOU START**


This Wall Anchor Kit is for **drywall** only!

## **ASSEMBLY INSTRUCTIONS**


Align the D-Ring **A** flush with the top back edge of the unit, in the middle. Install the Small Screw **3** through the D-Ring **A** with a screwdriver, as shown.

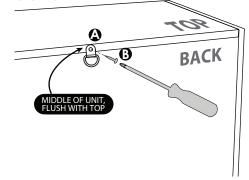


Place the unit against the wall at desired location.
Make a light mark on the wall directly above the
D-Ring A . Measure down 2" and make a second
mark. Hammer Wall Claw into the drywall at this
second mark. Erase the first mark.

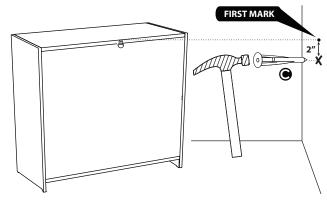


Install the Eyebolt **()** into the Wall Claw **()** . Turn the Eyebolt so that it is parallel with the ground, as shown.




Push unit close to the wall. Lean over the unit and thread the end of the Zip Tie (3) down through the Eyebolt (1), as shown.

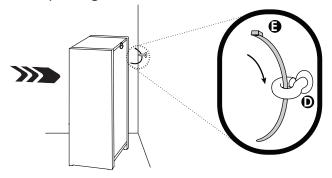

Thread the end of the Zip Tie up through the D-Ring as shown. Push the unit closer to the wall if needed.

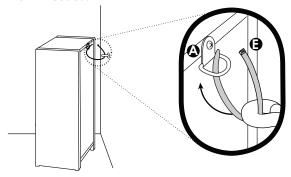

Thread the end of the Zip Tie through the head. Slowly pull tight while pushing the unit closer to the wall.

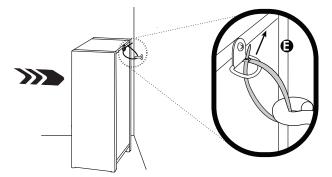




Simple. Modern. American Made

Wall
Anchor
Kit

▲ Adult assembly only

Assemble completely before use



Talk to our customer service agent at: +1 (833) 530-0033

7 Trim off excess Zip Tie (3) with a pair of scissors.

