


**BEFORE YOU START** 

Orient tabs so the side with the wider lip faces the same direction as the notch in the slot.




Place tab into open slot then lock tabs into the notch as pictured above.



When fully tightened, the edges should be flush.


A rubber mallet can help push pieces together. A hammer can also be used with a scrap piece of wood or a cutting board placed over the surface being hammered to protect it.

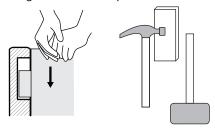


2 people recommended for assembly. Assemble on a hard floor.

## **ASSEMBLY INSTRUCTIONS**


First, thread (4) Feet **(** into the inserts on Bottom Shelf **(** until tight, as shown.

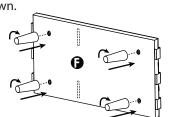


Refer to . Pop Middle into corresponding slots on Top Shelf and Bottom Shelf then tighten according to .

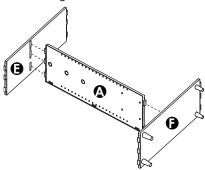


Pop Right Side (B) over tabs of Top Shelf (B) and Bottom Shelf (F). Then tighten according to (A).

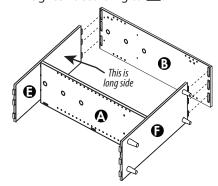

Turn unit onto Side **(B)** as shown. Insert Back **(D)** then Left Side **(E)**. Tighten according to **(A)**.

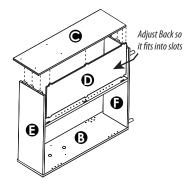


Refer to . To fully tighten unit, push down on Top Shelf () until ends are flush with sides.

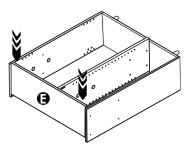


**36** Sprout Simple. Modern. American Made.


Put (4) Pins per shelf into desired holes. Slide Short Shelves Jonto Pins and push down into place.



Install Dowel **1** at desired height, inserting as shown.



Install Pegs by inserting Long Screw from inside of Wardrobe, then threading on Peg.




## WARDROBE WITH LEGS

▲ Adult assembly only

Assemble completely before use





Talk to our customer service agent at:
+1 (833) 530-0033
Or watch our assembly video at:
sprout-kids.com/wra