


## Parts




x2 Side  
SD012

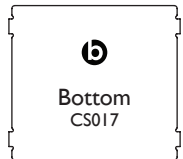

Bottom  
CS017




x2 End  
HZ015

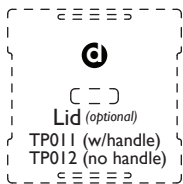


Lid (optional)  
TP011 (w/handle)  
TP012 (no handle)




Divider (optional)  
DV001  
x2

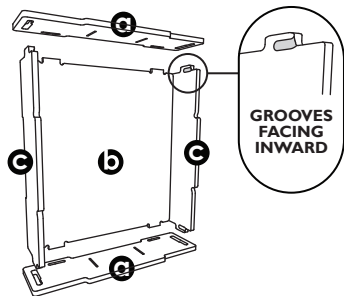


- 1 Lay side **a** on the ground with the slots facing up. Insert bottom **b** and ends **c**, placing other **a** on top.

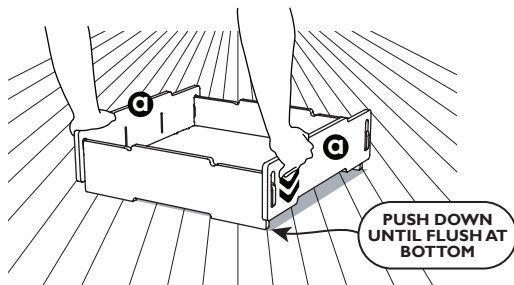

- 3 Place tray on hard floor, then press down each corner in turn to tighten.

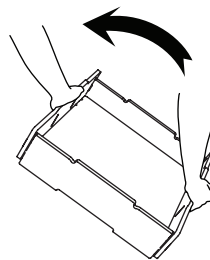

- 2 Hold sides firmly and rotate upright.

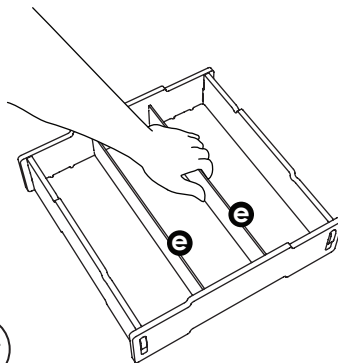

- 4 Pop optional dividers **e** into place, as shown.

# sprout


Simple. Modern. American Made.



## Need Help?

Watch our Assembly Video at  
[sprout-kids.com/cra](https://sprout-kids.com/cra)

Or talk to our customer service agent at:  
(877) 765-7860

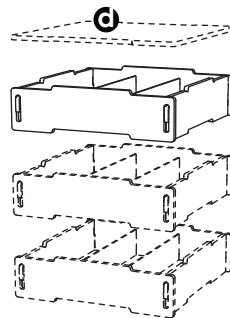

**⚠** Adult assembly only

**⚠** Assemble completely before use

Weight capacity 50 lbs