
SICEPARE DO NOT OVER TORQUE SCREWS WHEN ASSEMBLING TOOL REQUIREMENTS ASSEMBLY INSTRUCTONS This instruction applies to the following items: TAANS-1 - TAANS-1 • SIGRIBONE BOTTOM PANEL • \oplus \odot ≥ ⋧ SCREW Ø3*12 2 Ŋ 4

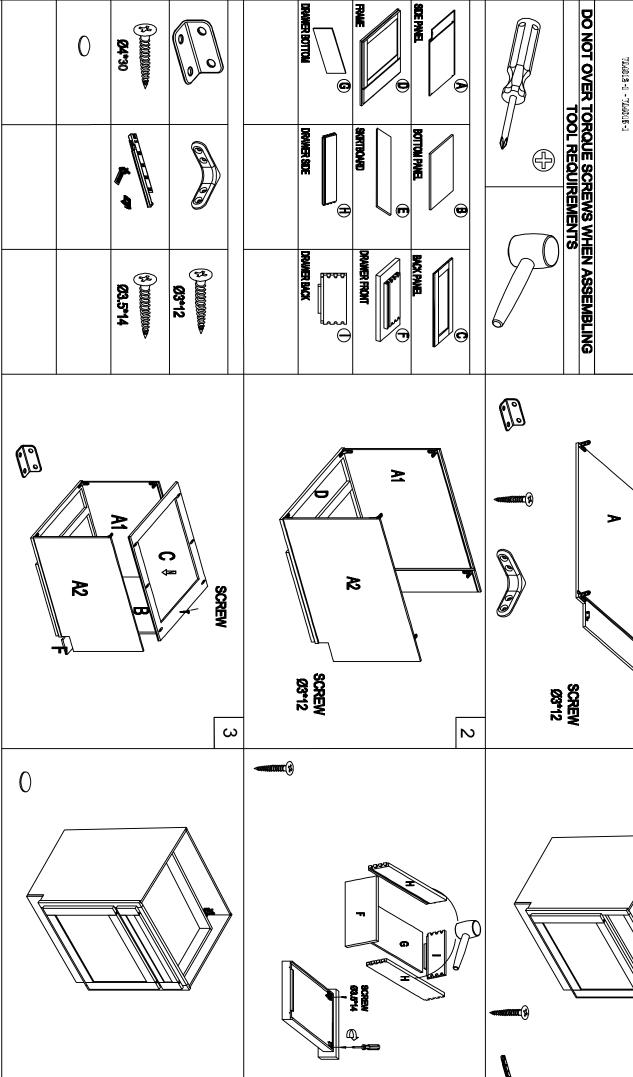

တ

(Tools are not included in the packaging)