





Step-By-Step Installation Guide

STEP 1:

Assemble Handle Bars onto Handle Bar Stem, placing the Top Cap over the Bar & Tighten with Torx Bolts provided in an "X" Pattern until it's tight and sits flush.

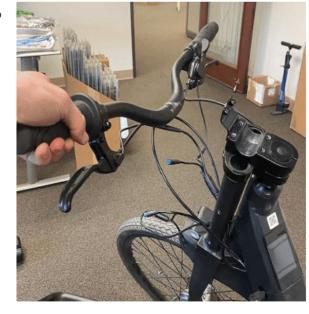

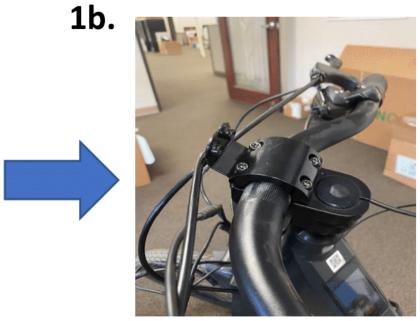


STEP 2:

Rotate The Pre-Installed Front Bracket 180° so the 2 Screw Holes are on Top







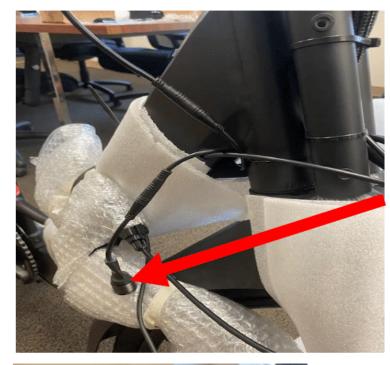

Connecting Wires

STEP 3:


Locate Power Button (located by the battery compartment). Pull off Power Button and Feed thru Housing shown in next picture






STEP 4:

a)Disconnect Black Extension
Wire (near where Power Button
was located) from both ends
and connect the Male tip from
the Extension Wire to the
female end of Power Button as
shown in 4b.

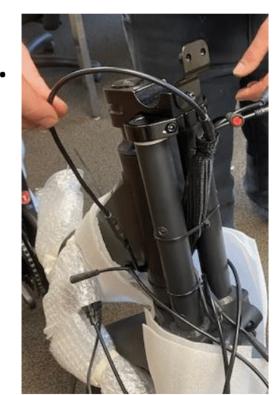

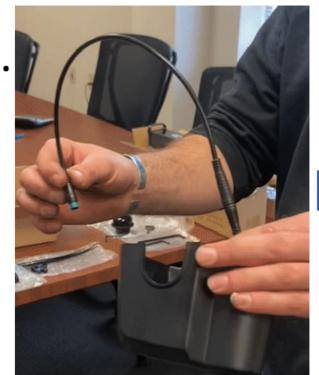

Housing

STEP 5:

Take Green Female End of the Extension (should be connected to Power Button) and connect with the Green Male end exposed.



Cont. on Back

STEP 6:

Position Power Button
Housing on top of
handlebars, and tighten
to bracket with housing
screws provided.



STEP 7:


Connect both Front & Rear Brakes Wires (RED Female) to (RED Male) Wires under Handlebars



STEP 8a:

Take the Green (Female end) & Blue (Male end)Wire shown below and tuck in to harness/frame...these wires are not needed



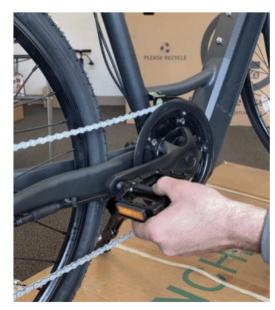

INSTALLING PEDALS

STEP 9:

Screw-in Right-Side Pedal Clockwise...and Left-Side Pedal Counter-Clockwise



STEP 8b:

Repeat the same step tucking away the Red Wire (Female End) and Green Wire (Male End)...above Rear Tire...these two wires are not needed



INSTALLING BELL & HANDLE BAR GRIPS

Step 10:

Slide Bell onto Left Handle Bar & then Slide on Grip. Slide Grip on Right Handle Bar





STEP 11:

Insert Charged Battery using Key to unlock compartment. Press Power Button (LCD Display will turn-on...) and Enjoy!

