# Cable Concealer Instalation Guide

## 1

#### Plan it

Determine the vertical and horizontal layouts to place the raceway channels and which connectors you will need to use. Refer to the image below to determine the accurate spacing for each unique connector.



Make sure to note the exact measurements you need for the desired length, and mark it on the wall and on the raceway with pen or pencil at the exact location you want to cut it.

### 5 Peel it

Remove the cover from the


raceway and peel the liner from the tape. Warning: The adhesive is super strong so make sure you are 100% positive where to put the

raceway before you peel the

liner from the tape.





Apply the raceway in place according to the marks you made on the wall.

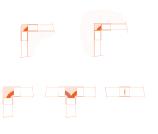


**Cut it** 

only 1 cut is needed.

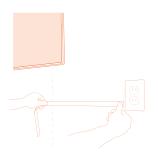

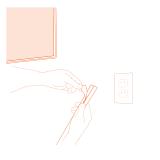

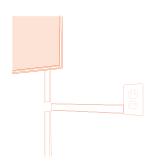

#### What's in the box?





T-Fitting



Outside

Elbow

х4

Inside Elbow x4



Flat Elbow x8



Coupling x16

## 4 Mark it

Cut the raceway according
to the marks you made by
using the included hacksaw
Tip: keep the top cover
connected to the channel so






Its recommended to use level for guidance.



Put down the cables into the channels and guide the cables through the raceways.



Put covers &

connectors

the connectors by snapping them into place.





## Option Step: Instalation With Screws

If using screws for installation drill a 3/32" hole in the channel approximately 3 inches from each end. If mounting in a position where there is no stud, mark the wall at the drilled holes. Drill a 7/32" hole at the marked locations on the wall and carefully insert the drywall anchors using a hammer, then, attach the channel to the wall with screws.

#### All tools included



Screws & Dibbles



Measuring Tape



Hack Saw



Cable Ties x4