



## PASSENGER DRINK HOLDER

**WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

**CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

**ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.



NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

### Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure the engine has time to cool before installation.
2. Remove the Tour-Pak liner. Note: on '96 -'13 models, you will need to remove two bolts at the rear of the Tour-Pak to remove the liner.
3. These instructions show a right side install. For a left side install, flip the accessory arm on the mount. Loosen, but do not remove the three bolts on the inside of the Tour-Pak. Fig.1 Note: Speaker pods and hardware are required to install Ciro passenger ball mount.

### Parts Included:

- 1 Passenger Accessory Mount
- 1 Passenger Accessory Arm
- 2 10-32 x 3/8" screws
- 1 Heat shrink tube
- 1 Drink Holder

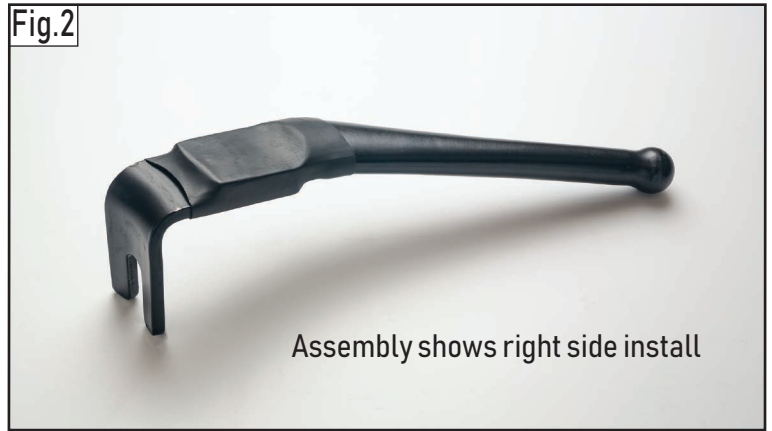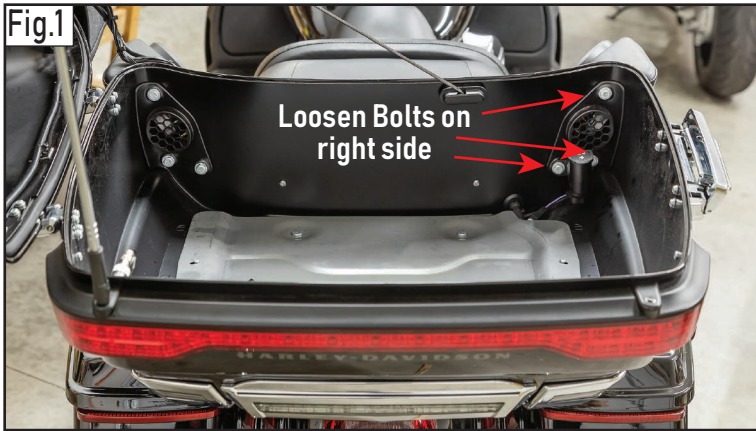

4. Use the two included screws to attach the arm to the top of the mount. The arm should face away from the motorcycle. Slide the heat shrink tubing over the joint and use a heat gun or torch to apply heat to area. Note: Heat shrink tubing may need to be cut to length for the desired coverage. Fig.2
5. With the arm over the bolt between the speaker housing and the Tour-Pak hold the mount arm down firmly, and tighten previously loosened bolts securing speaker pods. Fig. 4
6. Place collet nut over ball mount and snap on drink holder. Adjust drink holder to the desired angle and tighten collet nut.

