



ADJUSTABLE PASSENGER COMFORT PEG MOUNTS

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.





Parts Included:

- 2 Mounts
- 2 Extension arms
- 2 Clevis
- 1 Hardware kit including:
 - 2 3/8" - 16x2" SHCS
 - 2 3/8" - 24 x 7/8" SHCS
 - 2 3/8" - Split lock washers
 - 2 3/8" - 24 x 1-1/8" SHCS
 - 2 D spring washers

Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.
2. The stock footrest will be in the top position and will need to be moved down. Remove top SHCS and loosen lower SHCS and adjust the OEM footrest mount into either of the two lower positions. Replace upper SHCS and tighten. Tighten lower as well. Fig. 1
3. Preassemble the Ciro mount and extension arm with the 3/8" - 16 x 2" SHCS and 3/8" split lock washer. Fig. 2
4. The Ciro mount must be located immediately above the head of the OEM peg mount bolt. Holding the assembly together, thread the 3/8" - 16 x 2" SHCS into the motorcycle frame using a 5/16" hex wrench until secure. Do not fully tighten yet. Fig. 3

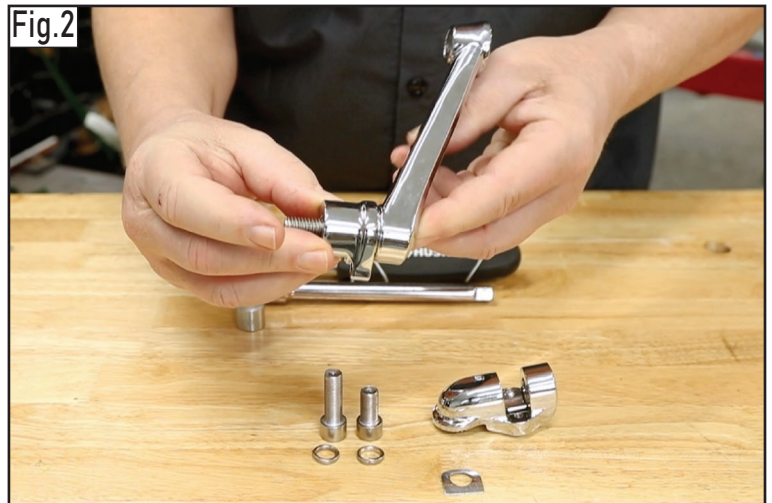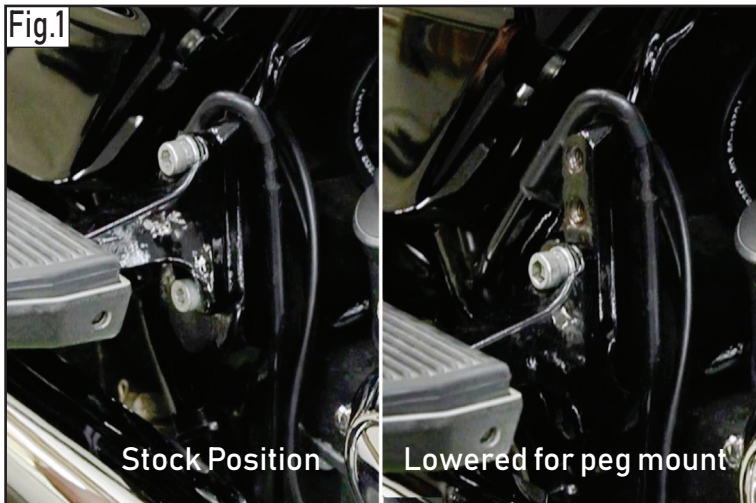



5. Pre installed button cap allen screw must be in top position for pegs to work correctly. Fig. 4. Using a 3/8" - 24 x 7/8" SHCS and 3/8" split lock washer, install the Ciro clevis onto the Ciro arm with a 5/16" hex wrench until secure. Do not fully tighten yet. Fig. 4

6. Place the D spring washer in clevis with flat side at back. Push in footpeg and secure with 3/8" - 24 x 1-1/8"



7. Adjust peg mounts to desired position and torque each SHCS to 36-42 ft/lbs.

8. Repeat steps 2-7 on other side of bike.

