



CHICANE™ CABLE GRIPS

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

Included Items:



Installation Instructions:


1. Park motorcycle on a level surface and ensure engine has time to cool before beginning installation. Cover tank and fender to prevent accidental damage.


Right side install

2. Remove housing screws A and B (Fig. 1), Then remove housing plate and set aside. Next, loosen but do not remove screws C and D. Fig. 1
3. Loosen lock nuts on cables and adjust control nuts to give cables more slack. Fig. 2
4. Using a pick or hook tool, lift the cable up enough to slide out both ferrules from grip. Fig. 3
5. Brass ferrules can easily come loose from cable studs, remove both and set aside to prevent loss. Fig. 4
6. With new grip on bar place ferrules back on cable studs and route cables back into place. Fig. 5, 6 Place housing cover back and tighten all screws removed and loosened from Fig. 1. Readjust cables, Fig. 2 back to factory specs. Slide rubber cable covers back into place.

Left side Install

7. Remove left side cover plate by removing and loosening screws as shown in Fig. 1. As many left hand OEM grips are glued you may need to cut grip to remove. Fig. 7

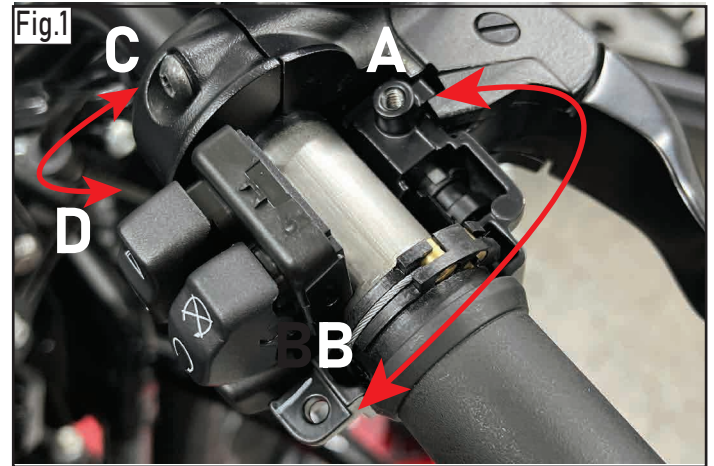

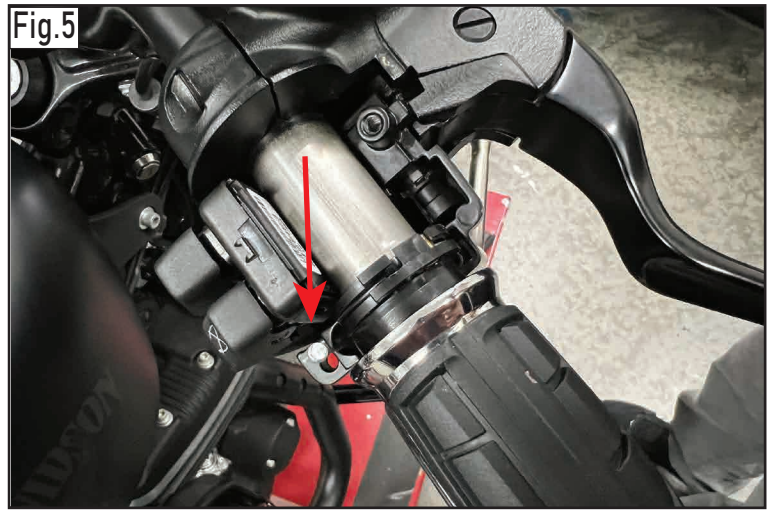

8. Remove any remaining glue residue with sandpaper to ensure a smooth fit for new grip. Fig. 8

9. Slide grip onto bar, no glue is necessary, and position so cam locks look like Fig. 9. Replace cover plate and tighten all screws to factory specs.

