



CIPHER AIR CLEANER

Parts Included:

1	Air Cleaner Body		
1	Air Filter		
1	Pair of Front Blades		
1	Hardware Kit Including-		
1	1/8" O-Ring	2	8-32x.375 Bolts
3	Top Hats	3	.250-20 Bolts
4	10-24 Bolts	3	8-32x.500 Bolts

Installation Instructions:

1. Park on a level surface and shut off the bike.

Ensure that the engine has had time to cool before installation.

**Cipro recommends using blue thread locker on all bolts in this installation.*

2. Remove your stock air cleaner using a 5/16" allen for the main centerbolt, a T27 torx for the three bolts holding the filter, and a 7/16" socket for the breather bolts.

**Note: The breather bolts are located behind the rubber hose/boots on the heads.*

3. Place the O-Ring between the throttle body and the air cleaner base and install the breather bolts with a 7/16 socket and the [3] .250-20 bolts with a 5mm allen.




4. Feed the breather tube through the top hole of the air filter and press the rubber boots back onto the breather bolts. Place the top hats on the three mounting holes of the air filter and install the 8-32 bolts. Do not over-tighten.

5. Place the outer shell of the air cleaner over the filter and use the [4] 10-24 bolts to secure it with a 5/32 allen.



6. Install the pair of accent blades by sliding the tab on the top of the blade up and in next to the top bolts on air cleaner housing.

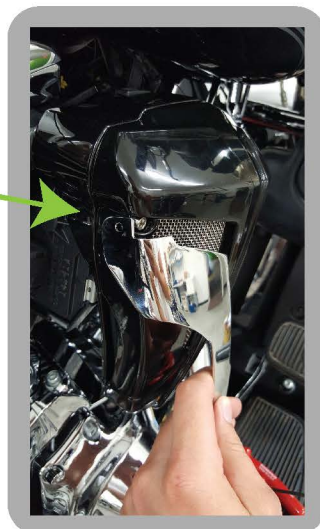

7. Press the blades onto the face of the air cleaner body and install the 8x32 bolts at the base of the blades. Do not over-tighten!



WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Cipro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Cipro products are designed and manufactured under very strict quality control. Cipro products are warranted to be free of defects in material and workmanship for 1 (one) year from date of purchase by the consumer.

Cipro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.

Cipro will not be liable for any consequential and incidental damages, including labor, or non-Cipro products.

Please visit our website Cipro3d.com for our complete warranty policy.