



SNAKEYES®

Parts Included:

- 1 Left Snakeeye**
- 1 Right Snakeeye**
- 1 Hardware Kit Including:**
 - 2 4 Pin 9 Adapters**
 - 6 6" Cable Ties**
 - 6 Adhesive Backed Cable Tie Mounts**

Installation Instructions:

- 1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.**
- 2. Remove seat.**
- 3. Use an ammonia-based glass cleaner to remove any wax or contaminants on both the outside and inside of the Tour Pak where Snakeeyes will be installed.**
- 4. Differentiate left and right Snakeeyes, then test fit to see best placement when Tour Pak is opened and closed.**
- 5. Activate adhesive by rubbing with fingernail, then remove adhesive backing. Apply pressure directly to the lense and bottom part of Snakeeye and hold firmly for 60 seconds. Adhesive fully cures within 24 hours.**



- 6. Now that Snakeeyes are in place, run wires to left side of Tour Pak then out and down along side of passenger back rest towards under-seat area. Tucking the wires behind the speaker wire harness helps to keep them out of the way.**

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Giro products are designed and manufactured under very strict quality control. Giro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 [three] years from the date of purchase, and a lifetime warranty against LED failure.

Giro will have no obligation if the customer cannot show proof of purchase.


Warranty will not be granted unless the part is properly installed and maintained.

Giro will not be liable for any consequential and incidental damages, including labor, or non-Giro products.

Please visit our website Giro3d.com for our complete warranty policy.

GIRO3D.COM

7. Use included adhesive backed cable tie mounts and cable ties to secure wires to the front inside of Tour Pak. Note: wires have extra length to allow for tour pak to open and close fully.

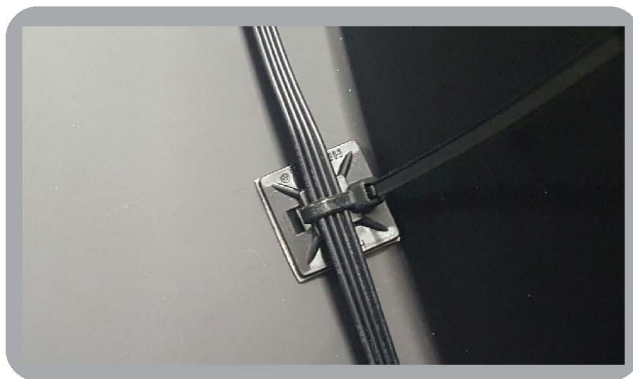

8. Plug supplied y adapters into already installed splitter harness, then plug wires from Snakeyes into y adapters (right Snakeye to brown wire and left Snakeye to violet wire). Plug in any previously installed accessories to y adapters.



9. Turn on accessory power to verify that all lighting is functioning correctly.

10. Use cable ties to secure any wires where needed, then reinstall seat. Check for clearance of splitter harness and wires.