



## FILLER PANEL LIGHTS

### Parts Included:

- 1 Right Side Light Assembly
- 1 Left Side Light Assembly
- 1 Hardware Kit Including:
  - 8 6" Cable Ties
  - 1 Dielectric Grease Packet
  - 1 Wiring Adapter

### Installation Instructions:

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.

2. Remove your saddlebags and place them on a soft surface, out of the way.

3. Use an ammonia-based glass cleaner to remove any wax or contaminants on the existing panel the lights will be installed on.

4. Differentiate left and right Filler Panel Light by looking at the back of the assembly.

5. Test fit Filler Panel Light before removing adhesive backing. Line up tabs on light to bottom of filler panel. Use pieces of painter's tape to mark proper location on filler panel.



6. Remove adhesive backing, then apply firm pressure directly to the lense and filler panel assembly for 60 seconds. Adhesive fully cures within 24 hours.

### WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### NOTE:

Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.

Ciro will have no obligation if the customer cannot show proof of purchase.


Warranty will not be granted unless the part is properly installed and maintained.

Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.


Please visit our website [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

**CIRO3D.COM**

**7. Route the wire up along the top outer edge of the fender and secure it with cable ties. When you get to the air line, follow it to lead the wire into the space under the seat.**

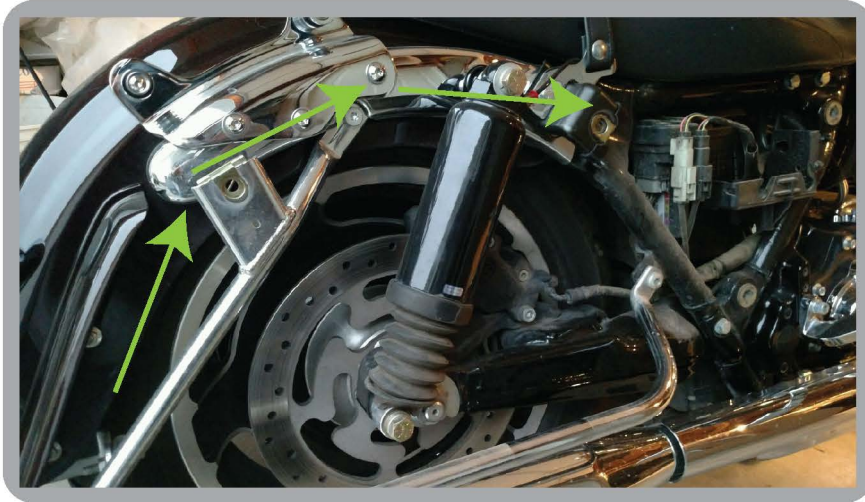

**8. Locate the 6 pin rear tail light harness connector under left hand side cover. Disconnect this and plug the Ciro Run/Turn/Broke splitter harness in-line with it.**

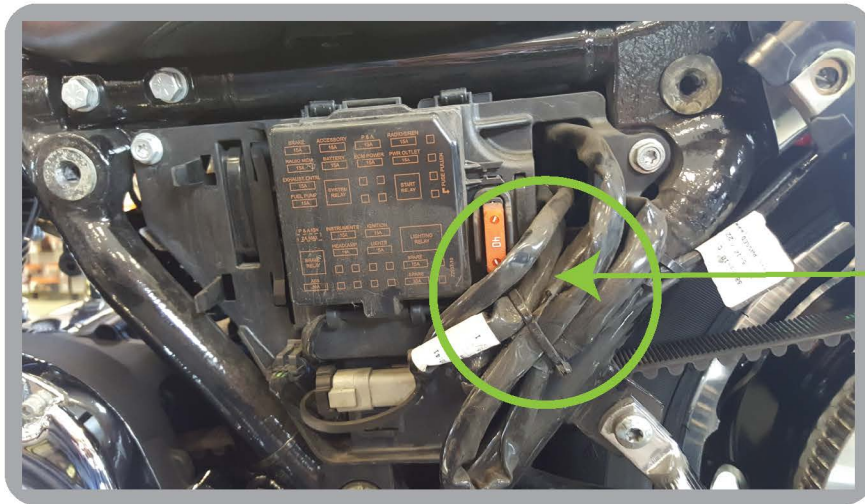

**6 pin connector  
behind wires**

**9. Place a drop of dielectric grease on the connector. Plug the wires coming from the rear filler lights into the wires coming from the splitter harness. The brown should be on the right, and the violet on the left.**

**10. Turn motorcycle on to accessory power and verify that all lighting is functioning as expected.**

**11. Reinstall saddlebags.**