



BAG BLADES®


Parts Included:

- 1 Right Bag Blade**
- 1 Left Bag Blade**
- 1 Hardware Kit Including:**
 - 1 Wiring Adapter**
 - 1 Bi-electric Grease Packet**
 - 6 6" Cable Ties**
 - 6 Adhesive Backed Cable Tie Mounts**

Installation Instructions:

Note: Do not attempt installation in temperature less than 50° F. Adhesive will not perform to the best of its abilities.

- 1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.**
- 2. Remove seat.**
- 3. Use an ammonia-based glass cleaner to remove any wax or contaminants on the outside of the saddlebags where the Bag Blades will adhere.**
- 4. Test fit Bag Blades to determine left and right sides. Make sure the bag lid is closed and latched when test fitting. The wires should exit the light housing on the fender side and LEDs should point straight back. Use painter's tape to mark correct location on the bag, which is just below the saddlebag lid. Ensure that the saddlebag lid will not contact light housing when closed.**

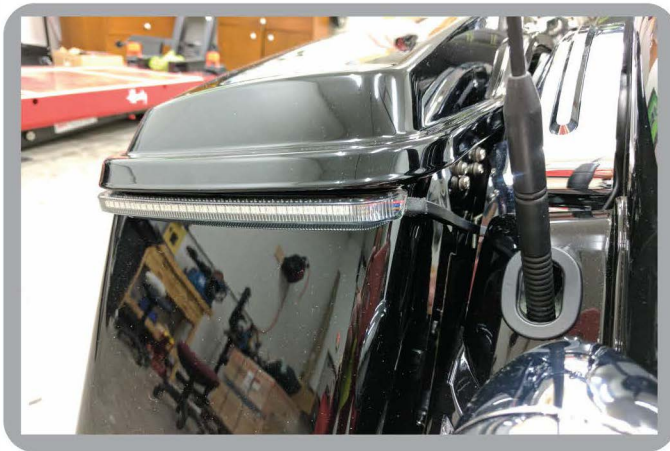

- 5. Remove adhesive backing from tape and install Bag Blade onto saddlebag, one side at a time. Press and hold firmly for 60 seconds. Adhesive fully cures within 24 hours.**

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Giro products are designed and manufactured under very strict quality control. Giro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Giro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Giro will not be liable for any consequential and incidental damages, including labor, or non-Giro products. Please visit our website Ciro3d.com for our complete warranty policy.

6. Remove both saddlebags and place on a non-abrasive surface. Position saddlebag on its side and use included adhesive backed cable tie mounts and cable ties to secure Bag Blade wires along top edge of the bag. Continue to secure wires so the connectors will be located near the under-seat area once the bags are back in place. Repeat on other side then reinstall both saddlebags.



7. Locate the 6 pin rear tail light harness connector under the left hand side cover. Disconnect it. Place a small amount of dielectric grease on all connectors, then plug the supplied wiring adapter in line with the 6 pin connector. Route the brown wire to the right side of your motorcycle and leave the violet wire on the left side.



**6 pin connector
behind wires**

8. Plug the wires coming from the Bag Blades into the wires coming from the wiring adapter. The right Bag Blade should plug into the side of the adapter with a brown wire and the left Bag Blade should plug into the side of the adapter with a violet wire. Turn on accessory power to verify that the lights are functioning correctly.

Note: If turn signal functions are opposite of your motorcycle controls, Bag Blades were plugged into wrong side of the controller.

9. Reinstall left hand side cover and seat.