

TAILOT LIGHT FOR HARLEY-DAVIDSON® TOUR-PAK®

WARNING This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

Included Items TAILO Light Wiring Adapter Hardware Kit



Installation Instructions:


- 1. Park on a level surface and shut off the motorcycle. Ensure the engine has had time to cool before installation.
- 2. Remove seat and set aside. This installation was done on a motorcycle with a stock Tour-Pak with the OEM 6-pin harness positioned as in Fig.1. If your motorcycle has a Tour-Pak installed as an accessory see Fig. 2 for the location of the harness.
- 3. Locate the OEM 6-pin wiring harness and install the wiring adapter. Fig. 3 Connect the left and right TAILO connectors to the wiring adapter to understand their placement and functions. Note the right side of the adapter will have a brown wire and the left side will have a purple wire. These indicate turn signals. When finished disconnect the TAILO connectors.
- 4. Test fit the TAILO Light onto the Tour-Pak using your fingers in the indentation under the Tour-Pak to center the light, Fig. 5, or if preferred mark the position with masking tape. Run the wires from the front of the light into the seat area.

ATTENTION: Thoroughly clean the mounting surface with denatured alcohol or an ammonia based cleaner to remove all wax, oil, and residue. Fig. 4

5. Remove the red backer from the adhesive and install the TAILO Light. Press the light firmly onto the surface for 60 seconds. The adhesive cures within 24 hrs. NOTE, Do not install if the temperature is below 50° F. The adhesive will not cure properly.






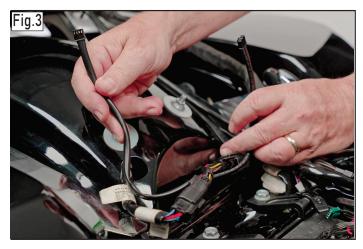





6. The wire on the right side which is longer, Fig. 6, is meant to run across to the left side under the backrest flap, Fig. 7. Secure with provided zip ties and wire keepers.

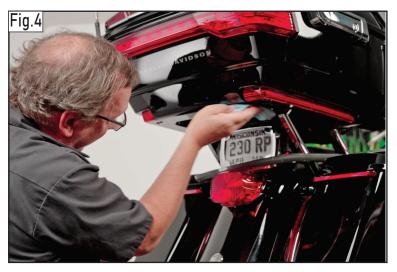




7. After light has been installed, reconnect TAILO wiring connectors and test all lighting functions.

NOTE: If you have an accessory Tour-Pak that you may remove at times you might want to run the light connections outside the seat area to avoid having to remove the seat to get to the connectors.

8. Reinstall the seat.

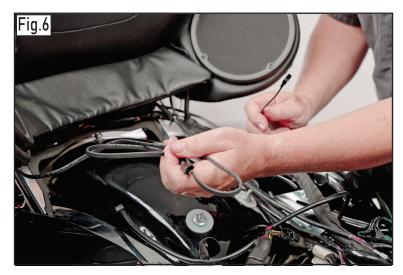





Page 2 of 2