



## TOUR BLADE® WITH CONTROLLER

### Parts Included:

- 1 Tour Blade
- 1 Hardware Kit Including:
  - 1 Splitter Harness
  - 4 6" Cable Ties
  - 2 Adhesive Backed Cable Tie Mounts
  - 1 Dielectric Grease Packet

### Installation Instructions:

**Note:** Do not attempt installation in temperature less than 50° F. Adhesive will not perform to the best of its abilities.

1. Park on a level surface and shut off the motorcycle. Ensure that the engine has time to cool before installation.
2. Remove seat.
3. Mark tour pack along the edge of the backrest pad with painter's tape so you know where to place Tour Blade later on during installation.



4. Remove the three 1/2" nuts inside of tour pack lid to remove backrest pad. Set aside stock hardware to reuse.
5. Use an ammonia-based glass cleaner to remove any wax or contaminants on the outside of the tour pack where the Tour Blade will adhere.
6. Test fit light in front of tape previously placed. Keep in mind, you will not want to place the Tour Blade too far in front of the tape because it will interfere with the backrest mounting tab. While test fitting Tour Blade, make sure it will be centered on the tour pack once the adhesive backing is removed. You can use a piece of tape on each side to mark future location. Light strip should be hidden under backrest pad after final installation.

Wires on this end



### WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Giro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### NOTE:

Giro products are designed and manufactured under very strict quality control. Giro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Giro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Giro will not be liable for any consequential and incidental damages, including labor, or non-Giro products. Please visit our website [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

**CIRO3D.COM**


**7. Remove adhesive backing, then press down on Tour Blade firmly for 60 seconds. Adhesive fully cures within 24 hours.**

**8. Reinstall backrest pad using stock hardware.**


**9. Now that the light is in place, run wires down along where the speaker meets tour pack then towards under-seat area. Use included cable ties and adhesive backed cable tie mounts where needed to secure wires. Be sure that there is enough slack in the wires for the tour pack to open and close fully.**



**10. Locate the black lighting connector at the rear of under-seat area. Disconnect this connector and plug the Giro splitter harness in line with it.**

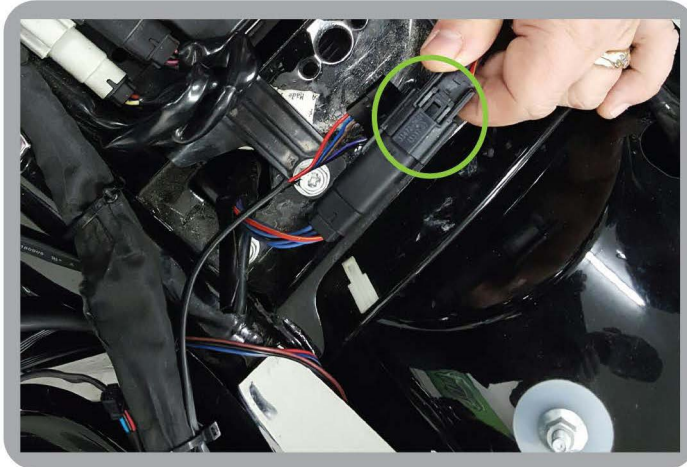

**11. Plug the Tour Blade wires into the splitter harness, brown wire in line with brown and violet wire in line with violet. Use a small amount of dielectric grease on connectors. Turn on accessory power to verify that the light is functioning correctly.**

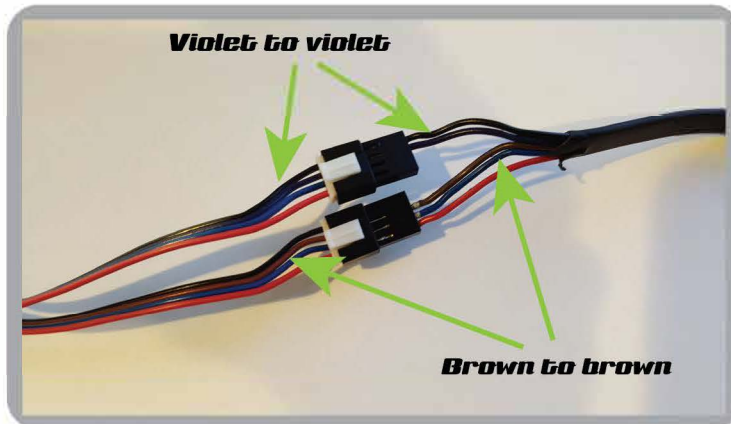

**12. Use cable ties to secure any wires where needed, then reinstall seat while checking for clearance of splitter harness and wires.**